



ROUGH-IN FOR THE FOLLOWING:

- **WASTE:** P-TRAP OUTLET [8] FOR DRAIN AND WASTE FITTING PROVIDED BY OTHERS. UNIT INCLUDES $\phi 3-1/2$ " DRAIN OPENING [4].
- **SUPPLIES:** BACKSPLASH MOUNTED FAUCET TO MATCH PUNCHING AT EACH STATION AS REQUIRED FOR FAUCET PROVIDED BY OTHERS: (NOTE: USER STATIONS FOR 60" WIDTH ARE ON 20" CENTERS.)
 - H01 SINGLE HOLE CENTERED [6] (SHOWN)
 - H28 TWO HOLES 8" CENTERSET [7] (SHOWN)
- **UPPER MOUNTING:** "S" CLIP MOUNTING BRACKET [9]. ITEM [2]: PROVIDE QTY (9) $\phi 1/4$ " MAX FASTENER TO SUIT WALL.
- **LOWER MOUNTING:** QTY (2) INTEGRAL ANGLE BRACKETS [5]. ITEM [3] PROVIDE (2) EACH $\phi 3/8$ " MAX FASTENER TO SUIT WALL.
- **SINK WEIGHT:** 60" 3 PERSON TROUGH SINK IS 75 LBS/34 kg
- **NOTE:** INSTALLER SHALL USE INDUSTRY STANDARDS OF BEST PRACTICE TO PROVIDE WALL MOUNTING HARDWARE AND ANCHORS AS REQUIRED TO SUIT FIXTURE WEIGHT, WALL TYPE AND BACKING.

INSTALLATION INSTRUCTIONS:

- PREPARE SUPPLIES AS REQUIRED TO INSTALL UTILITY FAUCET PER MANUFACTURERS RECOMMENDATIONS.
- A. INSTALL "S" CLIP MOUNTING BRACKET [9].
 - B. HANG HAND WASH TROUGH SINK [1] USING "S" CLIP MOUNTING BRACKET [9] (REFER TO DETAIL).
 - C. MARK ANGLE BRACKET [5] MOUNTING POINTS [3] ON WALL FOR INSTALLATION OF SUITABLE WALL ANCHORS.
 - D. REMOVE TROUGH SINK [1]. INSTALL WALL ANCHORS FOR ANGLE BRACKETS MOUNTING POINTS [3].
 - E. REINSTALL TROUGH SINK (SEE STEP B)
 - F. COMPLETE UTILITY SINK FAUCET ASSEMBLY INSTALLATION PER MANUFACTURERS INSTRUCTIONS.
 - G. INSTALL STRAINER AND TAILPIECE ASSEMBLY. MAKE-UP P-TRAP WASTE CONNECTION [8].
 - H. CHECK SUPPLY AND WASTE CONNECTIONS FOR LEAKS.

ACORN ENGINEERING COMPANY
 P.O. BOX 3527 INDUSTRY, CA. 91744
 (626) 338-4561 FAX (626) 961-2200

TITLE **3 USER - WALL HUNG HAND-WASH TROUGH - 60' WIDTH - MODEL# SWS060**

MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
APRIL 2024	04/02/24	
TO CURRENT	DATE REVISED	9912-006-001
	05/31/24	