



## REPLACING LEATHER WASHERS ON MURDOCK CAST IRON HYDRANTS AND FOOT PEDAL OPERATED TRADITIONAL DRINKING FOUNTAINS

---

1. Turn off the water supply to the hydrant.
2. Remove the nozzle and top bolts. The nozzle is removed by turning the locknut counter-clockwise.
3. Pull complete inner works assembly out of hydrant casing.
4. The washers are located in the brass valve body at the lower end of the inner works.
5. Remove valve packing ring, cup and ring washers with a flat screwdriver and the screw that holds the seat washer in place.
6. Replace seat, cup and ring washers; tighten valve packing ring hand tight so that cup and ring washers stay in place.
7. Re-assemble the hydrant in the reverse order of disassembly.

L1T00006  
Rev. 2/2014