



ROUGH-IN FOR THE FOLLOWING:

- **WASTE:** P-TRAP OUTLET [8] FOR DRAIN AND WASTE FITTING PROVIDED BY OTHERS. UNIT INCLUDES Ø3-1/2" DRAIN OPENING [4].
- **SUPPLIES:** BACKSPLASH MOUNTED FAUCET TO MATCH PUNCHING AT EACH STATION AS REQUIRED FOR FAUCET PROVIDED BY OTHERS: (NOTE: USER STATIONS FOR 48" WIDTH ARE ON 24" CENTERS.)
 - H01 SINGLE HOLE CENTERED [6] (SHOWN)
 - H28 TWO HOLES 8" CENTERSET [7] (SHOWN)
- **UPPER MOUNTING:** "S" CLIP MOUNTING BRACKET [9]. ITEM [2]; PROVIDE (6) Ø1/4" MAX FASTENER TO SUIT WALL.
- **LOWER MOUNTING:** QTY (2) INTEGRAL ANGLE BRACKETS [5]. ITEM [3] PROVIDE (2) EACH Ø3/8" MAX FASTENER TO SUIT WALL.
- **SINK WEIGHT:** 48" 2 PERSON TROUGH SINK IS 65 LBS/29.5 kg
- **NOTE:** INSTALLER SHALL USE INDUSTRY STANDARDS OF BEST PRACTICE TO PROVIDE WALL MOUNTING HARDWARE AND ANCHORS AS REQUIRED TO SUIT FIXTURE WEIGHT, WALL TYPE AND BACKING.

INSTALLATION INSTRUCTIONS:

- PREPARE SUPPLIES AS REQUIRED TO INSTALL UTILITY FAUCET PER MANUFACTURERS RECOMMENDATIONS.
- INSTALL "S" CLIP MOUNTING BRACKET [9].
 - HANG HAND WASH TROUGH SINK [1] USING "S" CLIP MOUNTING BRACKET [9] (REFER TO DETAIL).
 - MARK ANGLE BRACKET [5] MOUNTING POINTS [3] ON WALL FOR INSTALLATION OF SUITABLE WALL ANCHORS.
 - REMOVE TROUGH SINK [1]. INSTALL WALL ANCHORS FOR ANGLE BRACKETS MOUNTING POINTS [3].
 - REINSTALL TROUGH SINK (SEE STEP B)
 - COMPLETE UTILITY SINK FAUCET ASSEMBLY INSTALLATION PER MANUFACTURERS INSTRUCTIONS.
 - INSTALL STRAINER AND TAILPIECE ASSEMBLY. MAKE-UP P-TRAP WASTE CONNECTION [8].
 - CHECK SUPPLY AND WASTE CONNECTIONS FOR LEAKS.



TITLE **2 USER - WALL HUNG HAND-WASH TROUGH - 48' WIDTH - MODEL* SWS048**

MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
APRIL 2024	04/02/24	
TO CURRENT	DATE REVISED	9912-005-001
	05/31/24	