

murdock[®]
SINCE 1853

Surface Mounted Bottle Fillers
INSTALLATION/MAINTENANCE INSTRUCTIONS

springH2O[®]
BOTTLE FILLERS BY MURDOCK[®]

**BF158S Series Refrigerated Wall Mount
Pushbutton Operated Bottle Filler**



BF158S

NOTE: REFER ALSO TO INSTALLATION DETAILS FOR CHILLER - SEE DRAWING # 7020-900-001

Please visit www.murdockmfg.com
for most current specifications.

**TECHNICAL ASSISTANCE TOLL FREE TELEPHONE NUMBER:
1.800.743.8259**

Technical Assistance E-Mail: Fieldservice@acorneng.com

NOTES TO INSTALLER:

1. Please leave this documentation with the owner of the fixture when finished.
2. Please read this entire booklet before beginning the installation.
3. Check your installation for compliance with plumbing, electrical and other applicable codes.

For current Warranty click hyperlink [Product Warranty](#) or visit: www.murdockmfg.com/terms-and-warranty

Murdock™ assumes no responsibility for use of void or superseded data. © Copyright Murdock Mfg., City of Industry, CA Member of Morris Group International. Please visit www.murdockmfg.com for most current specifications.

COMPLIES WITH
STANDARDS



murdock[®]
SINCE 1853

Member of

MORRIS GROUP
INTERNATIONAL

15125 Proctor Ave, City of Industry,
CA, 91746 U.S.A.
Phone 800-591-9360
626-336-4561
www.murdockmfg.com

7021-050-001 Date: 2/19/2025 A

IMPORTANT

Units are not to be subjected to freezing temperatures. This fixture is intended to dispense water that has been lowered in temperature, but otherwise remains unchanged by the materials in the Bottle Filler. It is common for electrical equipment to be grounded to water lines either within a structure or away from it. Every attempt should be made to prevent this kind of grounding from generating electrical feedback into the Bottle Filler creating electrolysis. Electrolysis will cause a metallic taste or cause water metal content to increase.


NOTICE

A dielectric coupling must be used to connect the Bottle Filler to the water supply. A nonmetallic coupler is furnished with this Bottle Filler to meet this requirement.

DIMENSIONAL DRAWING


Prior to roughing in, consult with local, state, and federal codes for proper mounting height.

BF158S Stand-Alone Refrigerated Wall Mount Bottle Filler

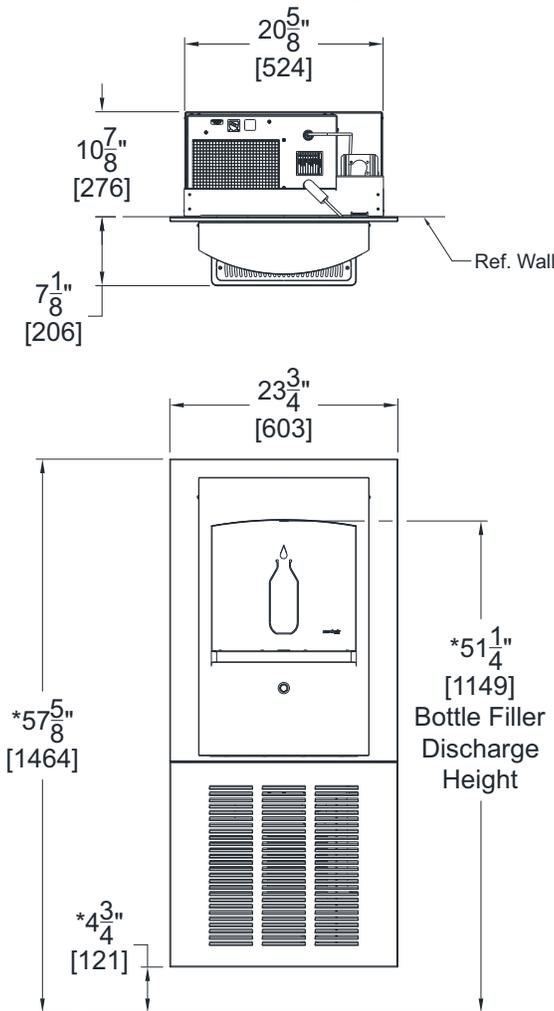

General Notes:

1. All dimensions are in inches [mm]
- *2. Dimensions shown are for recommended adult height. Adjust vertical dimensions as necessary to comply with Federal, State & Local Codes

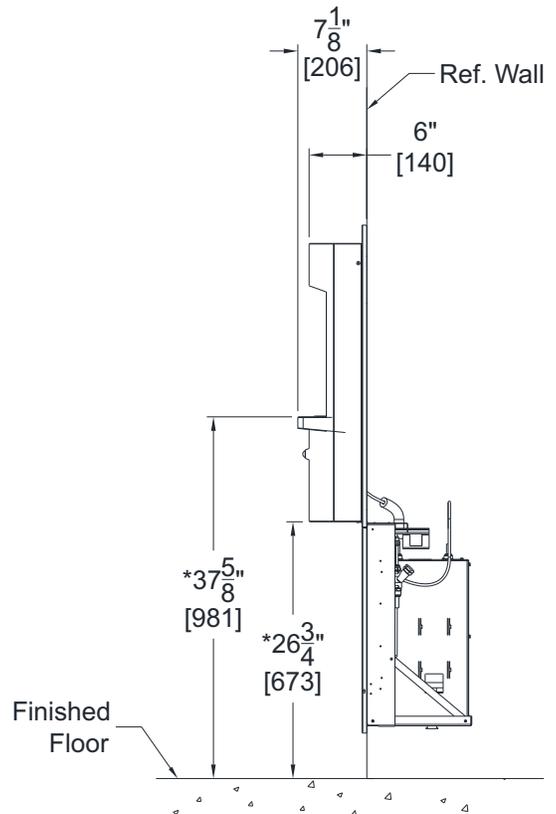

NOTES: Dimensions shown for Adult ADA compliant installation. For Child ADA compliant parallel approach installation, decrease height of installation by 3 inches. Provide clear floor space as required. Adjust vertical dimensions as required to comply with federal, state, and local codes.

IMPORTANT:

1. Water Supply Service Stop Valve, Water Connections and Electrical Connections to be supplied by others in accordance with local codes.
2. Provide 4" minimum clear space in front of Bottom Trim Panel and above In-Wall Chiller to allow for proper ventilation.
3. Waste is 1-1/4" Outer Diameter. Chiller water inlet is 3/8" Outer Diameter copper tube. Chiller water outlet is 3/8" Outer Diameter copper tube. Drinking Fountain water inlet is 3/8" Outer Diameter copper tube. Bottle Filler water inlet is 3/8" Outer Diameter copper tube. Water line from in-wall chiller to drinking fountain must have adequate insulation, provided by installer.
4. Completely flush supply lines of all foreign debris before connecting to fixture. A dielectric coupler must be used to connect the drinking fountain to the water supply. A non-metallic coupler is furnished with this unit to make this ROP. Water cooler designed to not cause problems with taste, odor, color, or sediment. Optional Water Filter, is available should any of these problems arise from the water supply.
5. Do NOT solder Tubes inserted into the Chiller or Bottle Filler as damage to the O-Rings on the Push-In Fittings may result.
6. All burrs must be removed from outside of cut tubes before inserting into strainer or other components.
7. Power supply must be identical in voltage, cycle and phase to that specified on the chiller data plate. Refer to submittal.
8. This unit must be grounded per the requirements of applicable electrical codes.
9. WARNING: Warranty is void if installation is not made following current Murdock Mfg. installation instructions and if components are assembled to the fixture that are not approved by Murdock Mfg.
10. Fixture operates within water pressure range of 25 PSIG (174 kPa) to 105 PSIG (724 kPa). Murdock Mfg. will not warranty chiller damaged when connected to supply lines with flow pressure lower than 25 PSIG (174 kPa) or higher than 105 PSIG (724 kPa). A pressure regulator must be furnished by others on supply line if inlet pressure is greater than 105 PSIG (724 kPa). 40-60 PSI is recommended.
11. Due to cold waste water, Murdock Mfg. recommends that waste piping supplied by installer be insulated appropriately to prevent excessive condensation.
12. Per UPC 609.10-All building water supply systems in which quick acting valves are installed shall be provided with devices to absorb the hammer caused by high pressure resulting from the quick closing of the valve. These pressure-absorbing devices shall be approved mechanical devices. Water pressure-absorbing devices shall be installed as close as possible to the quick closing valve
13. Upon completion of Fixture installation check unit thoroughly for water leaks, including all points of connection.

PRIOR TO INSTALLATION:


1. Read all installation instructions carefully, before proceeding.
2. Carefully remove all fixture components from packaging, preventing scratching or damage. Inspect fixture and all parts from damages and all parts that are bolted on.
3. Provide mounting surface, adequate to support the fixture and loads on the fixture.
4. Provide rough-ins as shown on the roughing-in and dimensional drawing, including water supply, drain pipe and gravel drain well. (See rough-in details)
5. It is common for electrical equipment to be grounded to water lines either within a structure or away; otherwise, remains unchanged by the materials in the water cooler. Every attempt should be made to prevent this kind of grounding from generating feedback into the water cooler creating electrolysis. Electrolysis will cause a metallic taste or cause water metal content to increase.
6. Electrical Receptacle(s) must be wired to a GFCI protected circuit. Fixture must be earth grounded per NEC (National Electrical Code).
7. Completely flush water supply lines of all foreign debris, before connecting to the fixture.

PUSH-IN FITTING INSTALLATION

NOTE: FITTINGS AND TUBE SHOULD BE KEPT CLEAN, BAGGED AND UNDAMAGED PRIOR TO INSTALLATION.


TO CUT TUBE:

Cut to fit length of 1/4" PE Tubing and remove any burrs or sharp edges. Ensure that the outside diameter is free from score marks. Tube ends should be square.

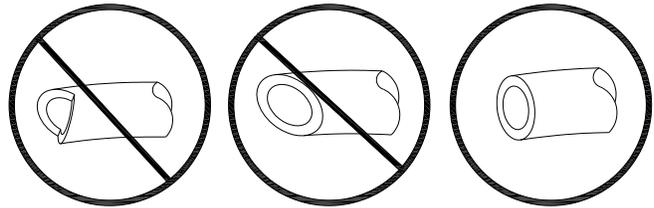


INSERTING THE TUBE:

1. Firmly and fully insert the Tubing end into the Push-In Fitting up to the Tube Stop located approximately 1/2" deep.

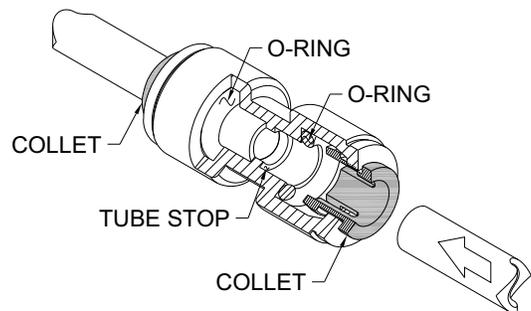


2. Pull on the fitted Tubing to ensure it is secure. Tube should not come free from the Fitting. Water test the connection assembly prior to leaving the site to ensure there are no leaks.

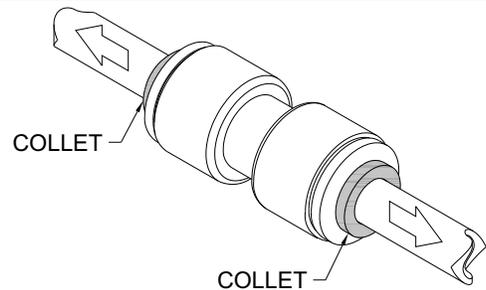


DISCONNECTING THE TUBE:

Prior to disconnecting the Tube from the Fitting, ensure that the water line is depressurized. Push Collet Square towards the Push-In Fitting Body and hold. While holding the Collet in, pull on the PE Tubing to remove from the Push-In Fitting.

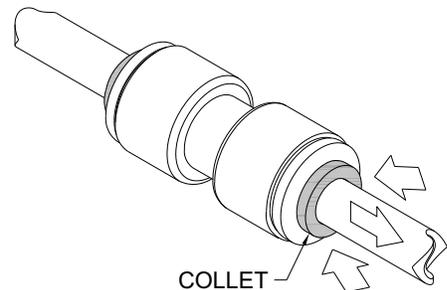


Pre-Installation (Continued)

- 2** Remove Bi-Level Mounting Frame, Chiller Mounting Frame, Panels, Anchoring Clips and Screws from packaging, careful to avoid damage to fixture and fixture sub assemblies.

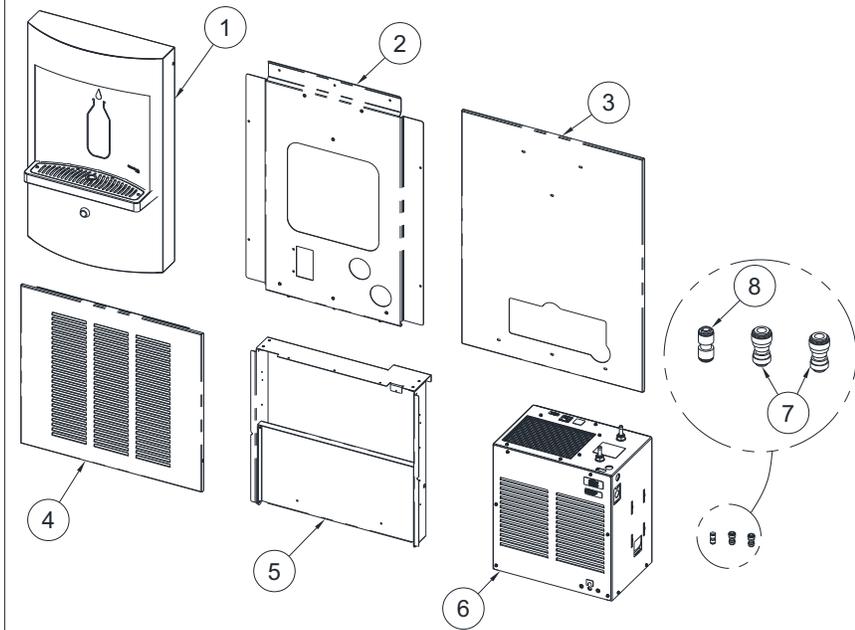

- ① BF15S Bottle Filler
- ② Bottle Filler Mounting Panel
- ③ Upper Trim Panel
- ④ Bottom Trim Panel
- ⑤ Chiller Mounting Frame Assembly
- ⑥ 8 GPH Chiller Assembly
- ⑦ 1/4" x 3/8" OD Tube Union Push-In
- ⑧ 1/4" OD Tube Union Connector


- 3** Retrieve Bottle Filler Assembly and place unit onto a horizontal surface. Unscrew Top Screws with 1/8" Allen Wrench (not included) and place in a secure location for later use. Open unit by swinging Mounting Panel down. With unit open, remove and replace Y-Strainer with 1/4" ID Union Connector. Once completed, place Bottle Filler and Y-Strainer in a secure location for future use in installation manual.

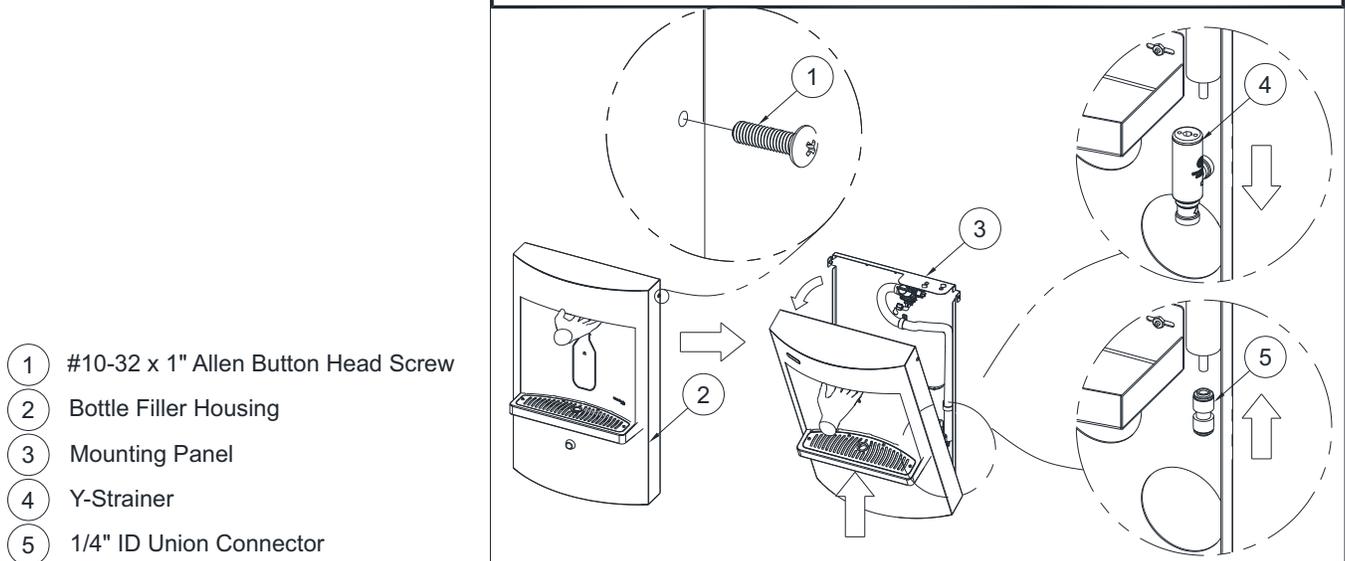

- ① #10-32 x 1" Allen Button Head Screw
- ② Bottle Filler Housing
- ③ Mounting Panel
- ④ Y-Strainer
- ⑤ 1/4" ID Union Connector

Frame Installation


- 1** Rotate Chiller Shelf to full depth and fix to frame, anchoring Support Struts using #10-32 Phillips Head Screws and Hex Head Locknuts provided before continuing.

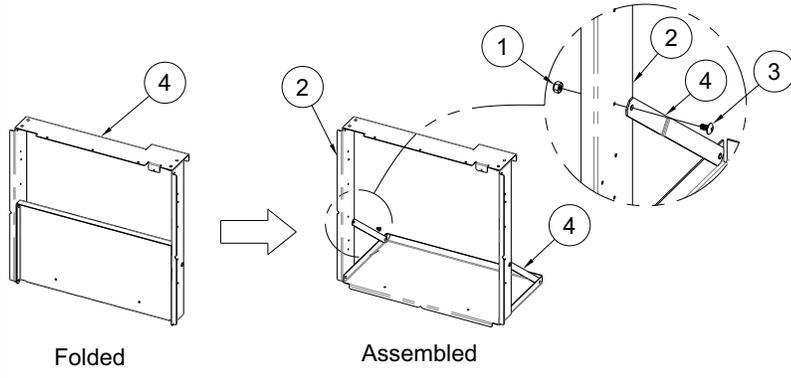


- ① #10-32 Hex Head Locknut
- ② Chiller Shelf Mounting Frame
- ③ #10-32 Phillips Head Screw
- ④ Chiller Shelf Support Strut

- 2** Position Chiller Frame Assembly within prepared opening with sides and bottom lips overlapping against the finished wall. Anchor Chiller Frame Assembly to block out being sure to keep Frame level and square. 1/8" holes provided for Anchoring Hardware, provided by installer.

- ① Trim Panel Mounting Bracket
- ② #8 x 3/8" Hex Head Screw
- ③ Reference Wall
- ④ Chiller Mounting Frame Assembly
- ⑤ Anchoring Hardware (By Others)

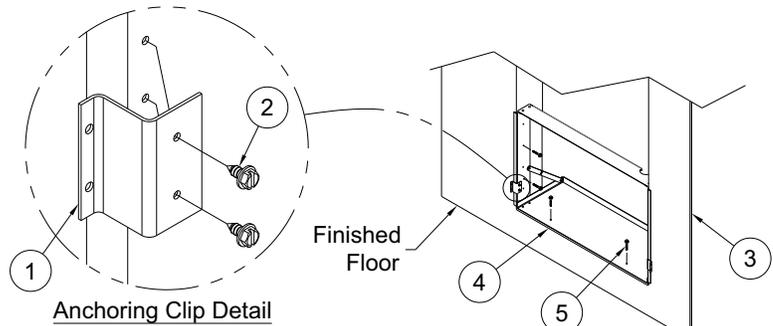

- 3** With Chiller Mounting Frame Assembly Secured, position and center 8 GPH Chiller Assembly onto Chiller Mounting Frame Assembly. Anchoring is not required for Chiller Assembly. Connect Chiller Electrical (See Chiller Manual).

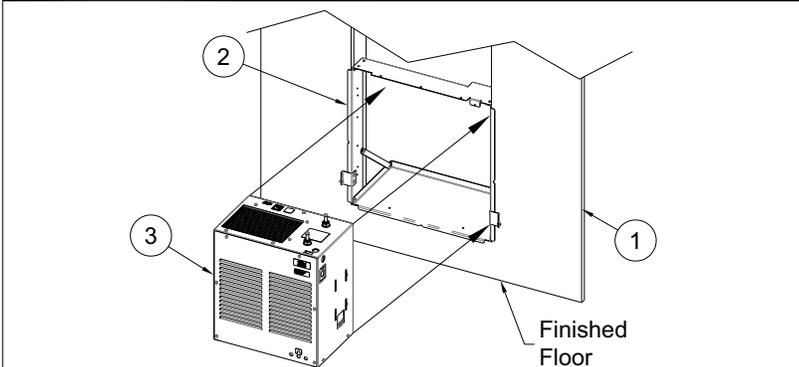

!IMPORTANT

REFER TO INSTALLATION DETAILS FOR CHILLER - SEE DRAWING # 7020-900-001




- ① Reference Wall
- ② Chiller Mounting Frame Assembly
- ③ 8 GPH Chiller Assembly

Frame Installation (Continued)


4 Position Mounting Panel on Mounting Frame by utilizing the Lower Flange on the Mounting Panel. Center and secure with #8-3/8" Phillips Sheet Metal Screws. With Mounting Panel secured, Anchor Mounting Panel to finished wall with anchoring hardware provided by others for Ø7/32" holes.

- ① Mounting Panel
- ② Chiller Mounting Frame Assembly
- ③ Reference Wall
- ④ #8 x 3/8" Phillips Sheet Metal Screw (Qty. 3)
- ⑤ Anchoring Hardware (Qty. 7, provided by others)
- ⑥ 1-1/4" Compression Adapter Stubbed out (provided by others)

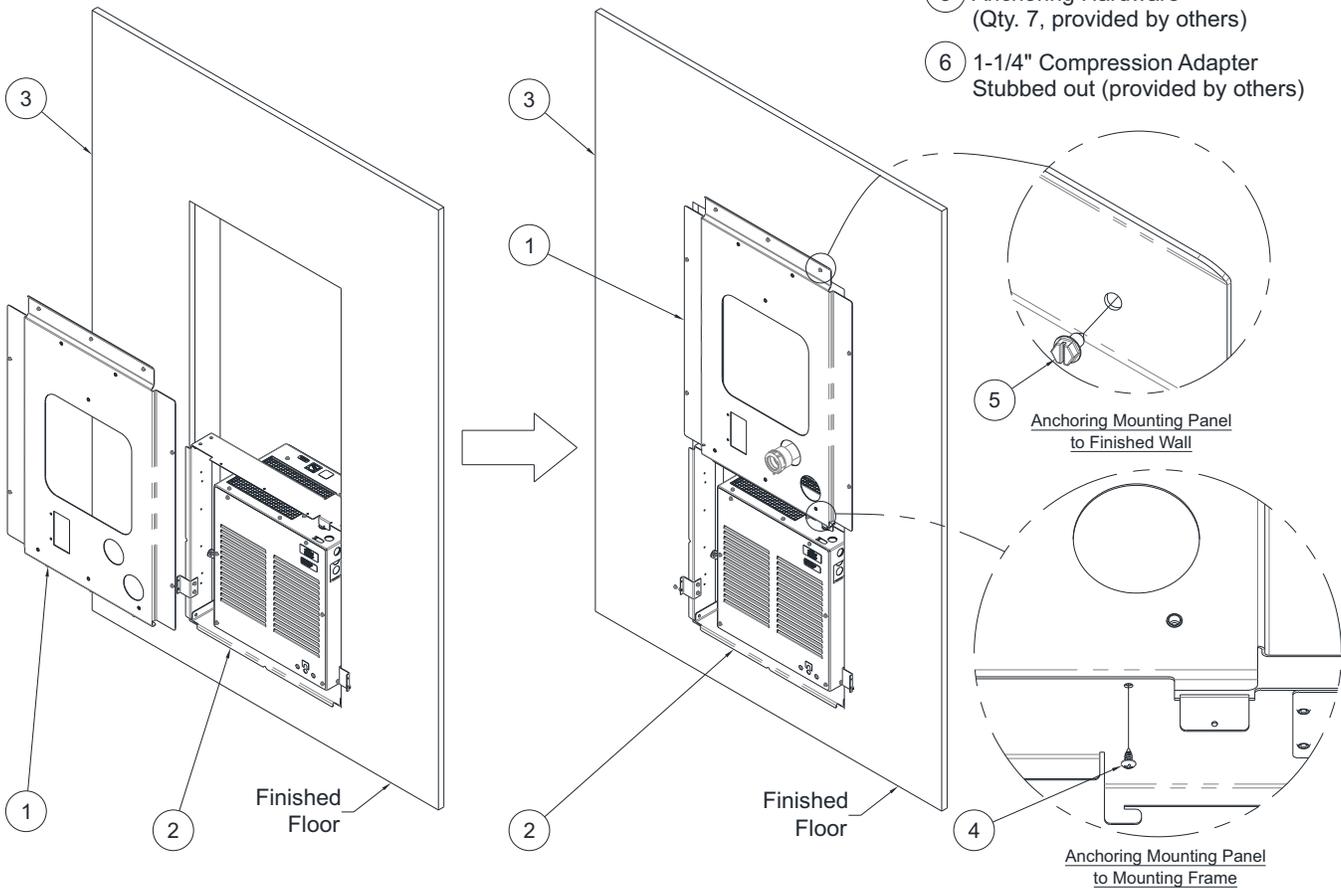

Chiller Supply Connections


- 1** Acorn Recommends to install an Angle Stop to the main water supply for easy maintenance. Utilize Industry Standards of best practice to locate and install Angle Stop.

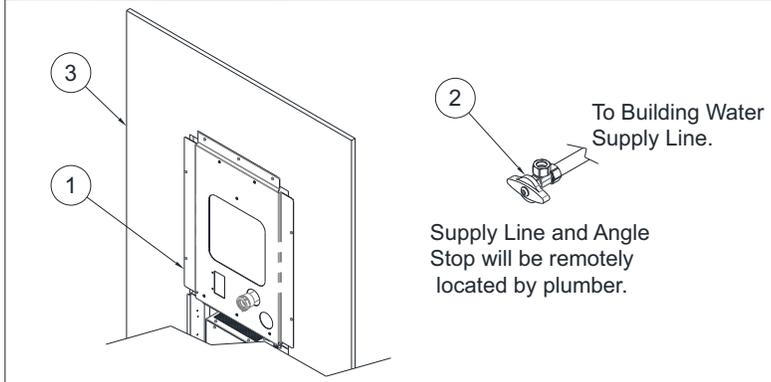


- 1 Bottle Filler Mounting Plate
- 2 Angle Stop Recommended, by others
- 3 Reference Wall

- 2** Install the 1/4" x 3/8" Tube Union Push-In Adapter onto Chiller inlet and outlet.

- 1 Chiller
- 2 1/4" x 3/8" Tube Union Push-In
- 3 Thermal Adjustment (Pre-adjusted at factory)
- 4 Electrical Knockout
- 5 Alternate Electrical Knockout

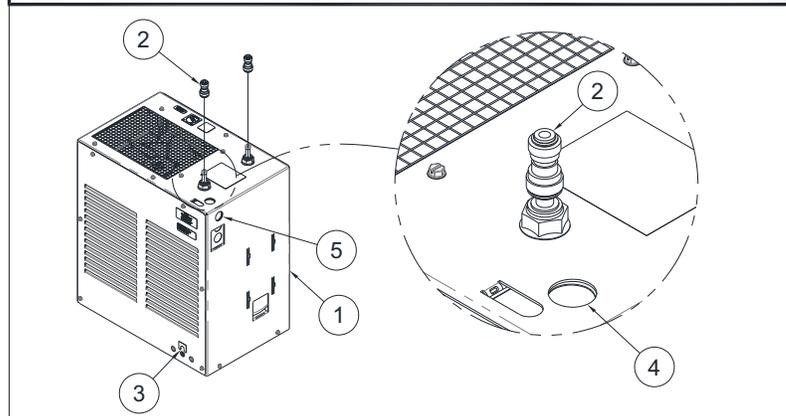

- 3** (For Water Filter options go to Step 4)
After thoroughly flushing supply line, make up the supply line connections to the 3/8" OD x 1/4" OD Push-In Y-strainer.
NOTE: See Push-In Connection Installation for information.

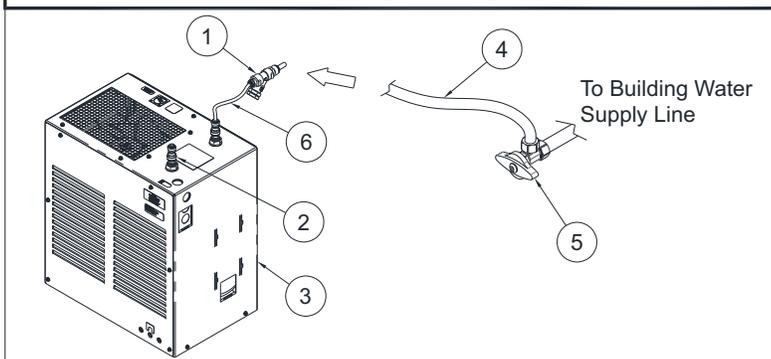


- 1 3/8" OD x 1/4" OD Push-In Y-Strainer
- 2 1/4" x 3/8" Tube Union Push-In
- 3 Chiller
- 4 Supply Line, provided by installer
- 5 Angle Stop Recommended, by others
- 6 1/4" OD Water Supply Tubing

Chiller Supply Connections (Continued)


- 4** If the optional -WF3000 Water Filter is included with Fixture, slide and mount Water Filter Bracket to Chiller Mounting Frame Assembly. Secure Bracket with #8 x 3/8" Hex Washer Head Screw.

- 1 Chiller Mounting Frame Assembly
- 2 Water Filter Bracket Assembly
- 3 Water Filter
- 4 #8 x 3/8" Hex Washer Head Screw

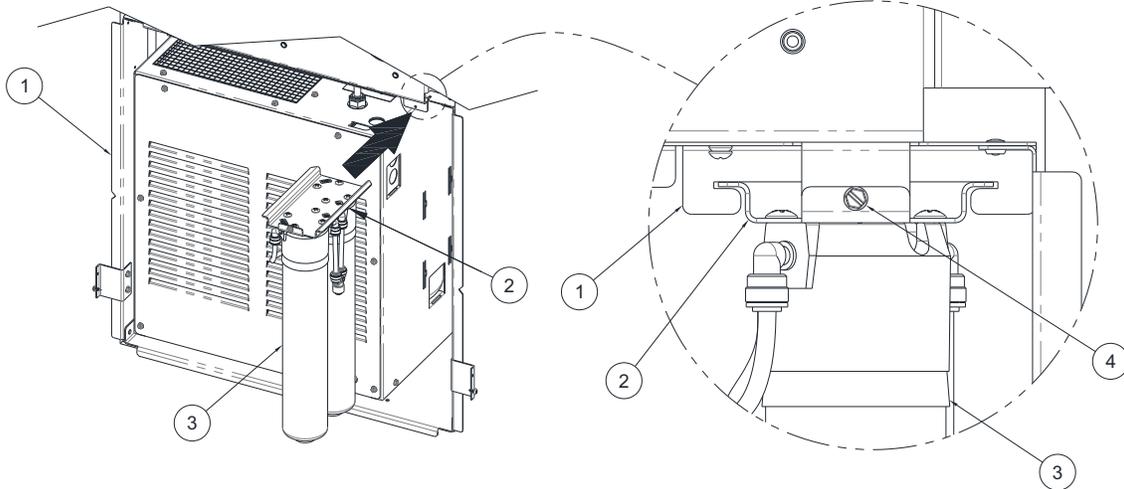


- 1 1/4" OD PE Tubing
- 2 1/4" x 3/8" Tube Union Push-In
- 3 Chiller
- 4 -WF3000 Water Filter
- 5 1/4" OD x 3/8" OD Push-In Y-Strainer
- 6 Angle Stop Recommended, by others
- 7 Supply Line, provided by installer

- 5** (-WF3000 Water Filter Tubing)
After thoroughly flushing supply line, make up the supply line connection to the 1/4" OD x 3/8" OD Push-In Y-Strainer and from Y-Strainer to the Water Filter inlet. From Filter outlet, make up connections to chiller inlet.

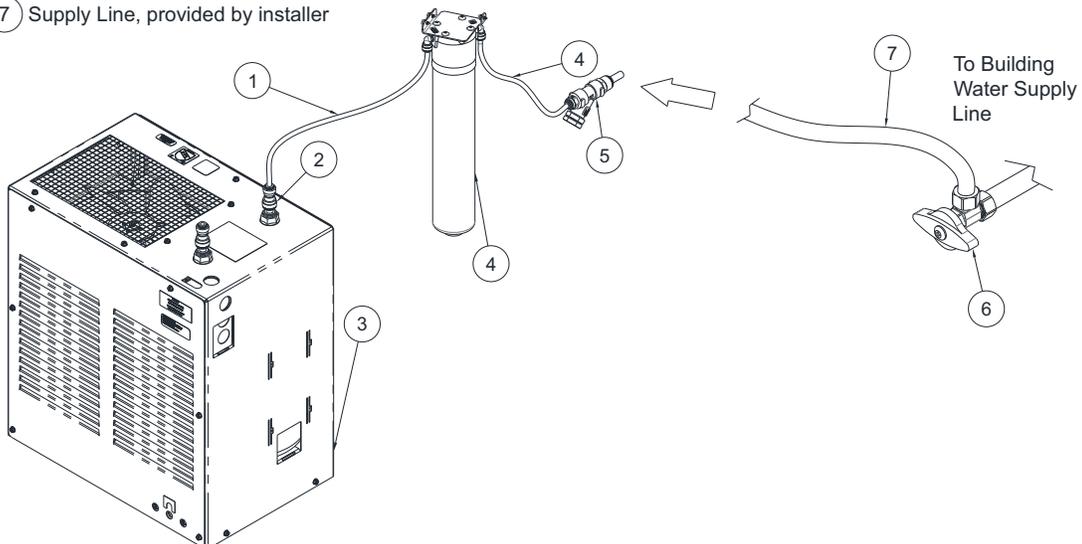

Chiller Supply Connections (Continued)

6 Hang Upper Trim Panel on Mounting Panel by utilizing the Upper Flange on the Mounting Panel. Center and secure with #10-32 Phillips Head Screw. Leave 1/4" sticking out to mount Bottle Filler.

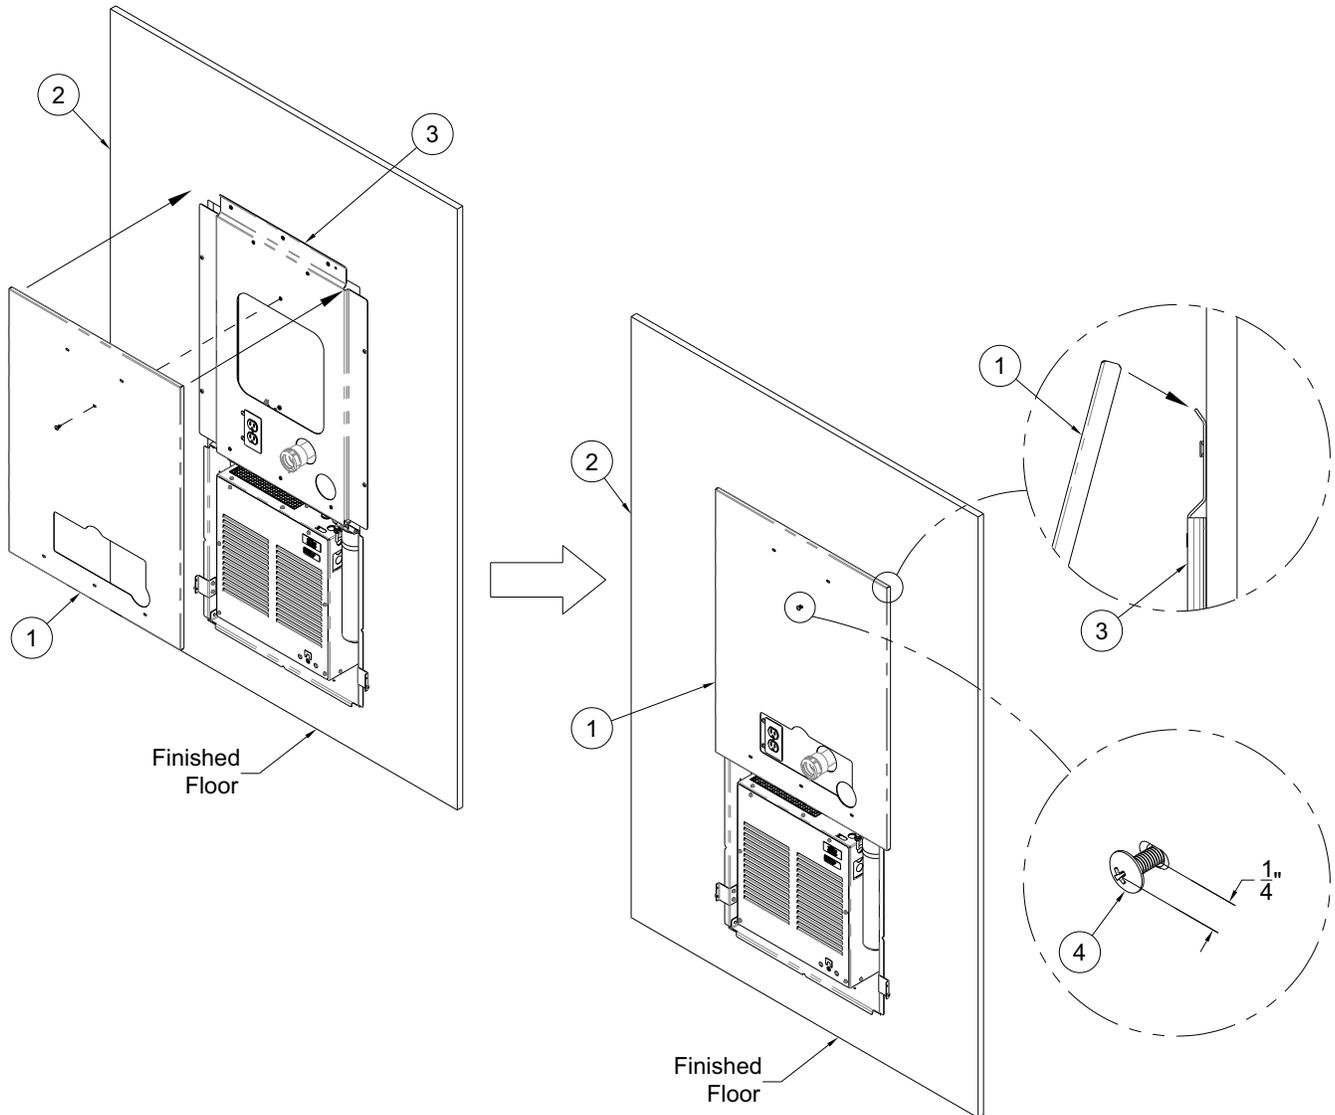


- ① Upper Trim Panel
- ② Reference Wall
- ③ Mounting Panel
- ④ #10-32 UNF x 1" Phillips Screw


Bottle Filler Installation

1 Hang the unit from the two keyholes located near the top of the mounting channel and the Upper Trim Panel. Remove the two screws securing the housing to the mounting channel.

- ① Housing ③ Keyhole ⑤ Upper Trim Panel
② Mounting Channel ④ Wire Strap

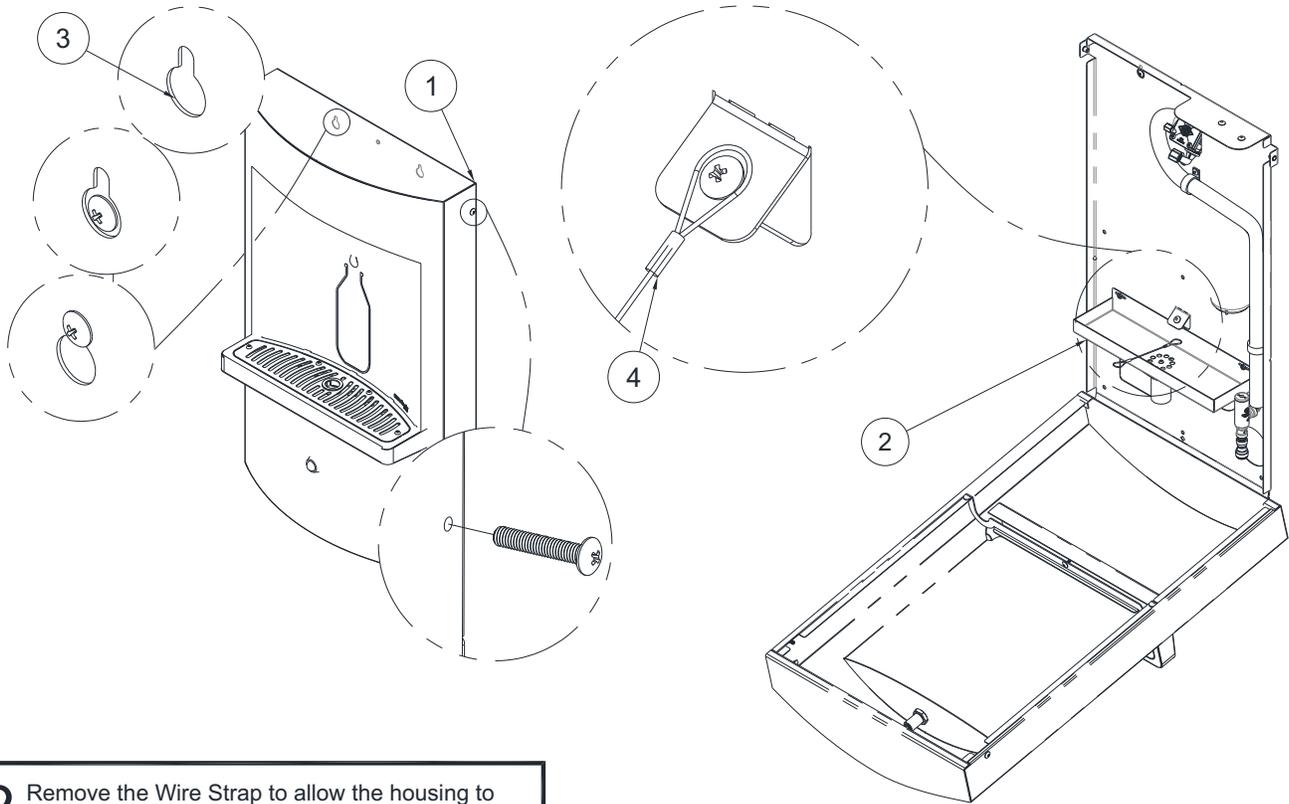


2 Remove the Wire Strap to allow the housing to fully rotate down. Finish securing the unit to the Upper Trim Panel by using the additional mounting points.

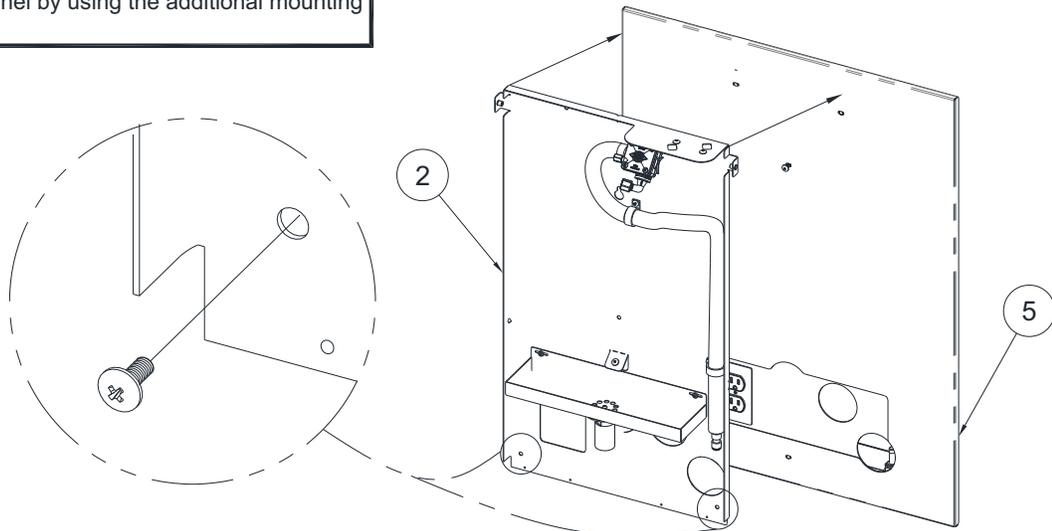


Bottle Filler Installation (Continued)

3 With the Mounting Channel secured to Upper Trim Panel, install 1-1/2" P-Trap Waste Outlet.

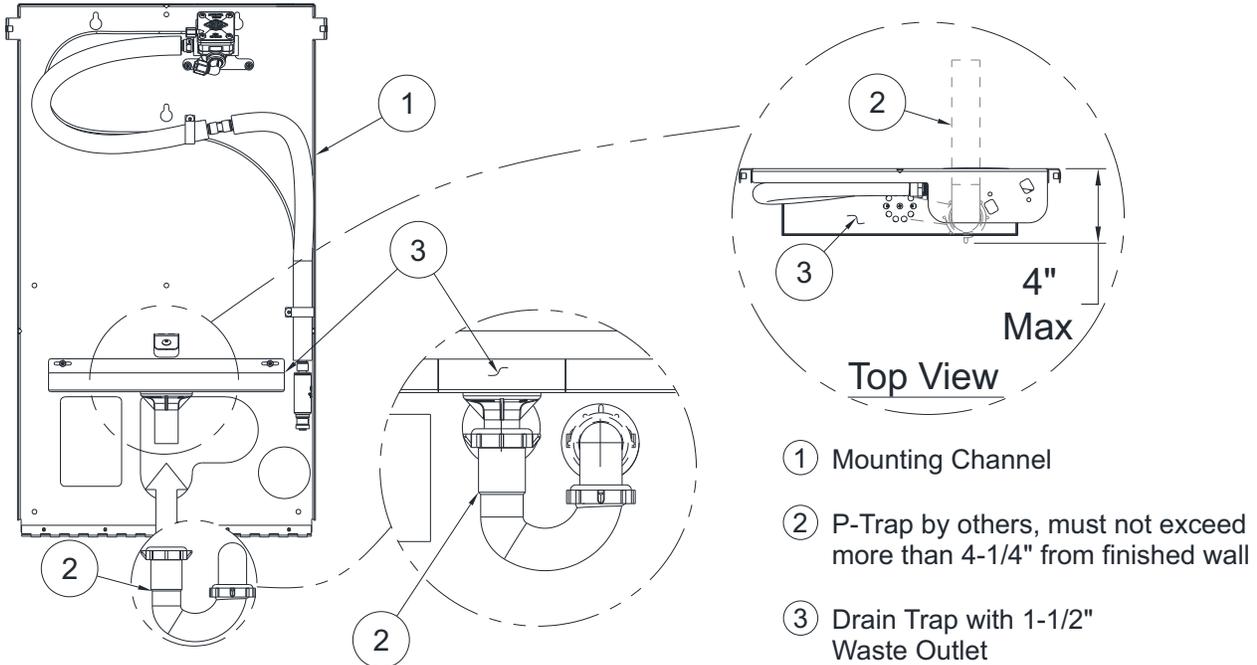

4 Connect 1/4" O.D. x 15" Long tube to Chiller outlet. Retrieve the end of the other end of the Tube and slide through Bottle Filler opening. Connect Tubing to the 1/4" Union Connector


- ① Bottle Filler Mounting Panel
- ② "Y" Strainer
- ③ 1/4" OD x 15" Long Tube
- ④ Foam Pipe Insulation
- ⑤ Chiller

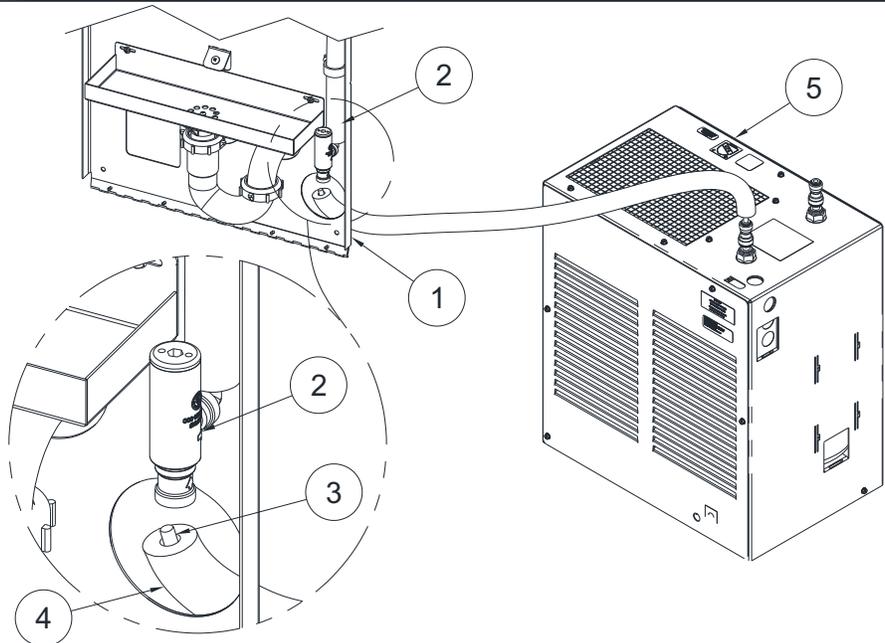

Bottle Filler Installation (Continued)


5 With Bottle Filler Housing secured to unit, connect water supply line. Keep supply line within Supply Tubing holders to prevent supply line from getting pinched or damaged.

- ① Bottle Filler Mounting Panel
- ② Bottle Filler Housing
- ③ Valve Water Supply Outlet Elbow
- ④ Bottle Filler Water Supply Outlet Tubing
- ⑤ Supply Tubing Holder

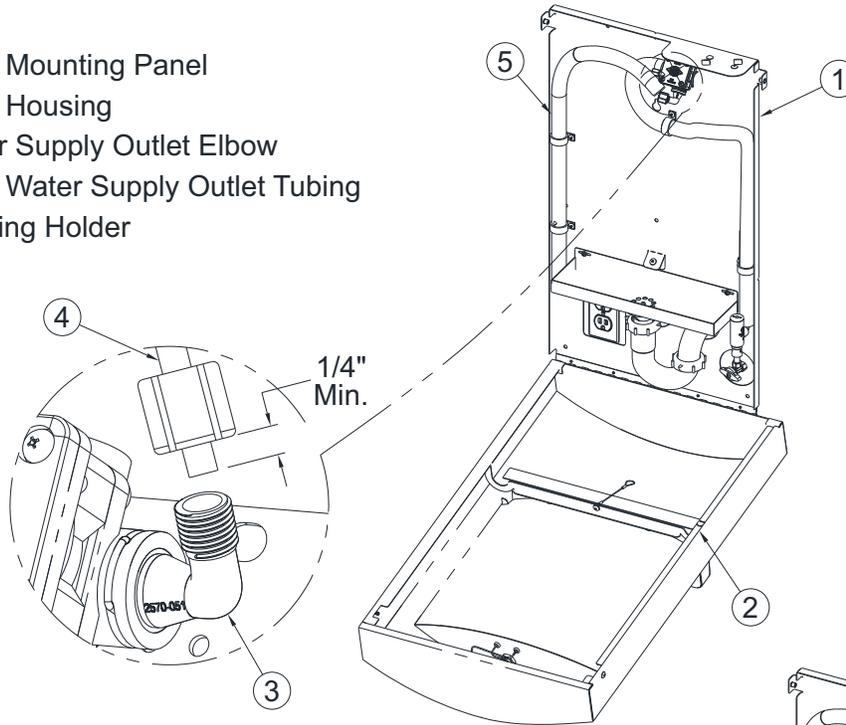


6 With Water Supply Line properly secured, connect 1/8" O.D. Polyethylene Air Line to valve. Keep Air Line within the Supply Tubing holders to prevent supply line from getting pinched or damaged. Turn on water. Check for Leaks throughout the system.

- ① Bottle Filler Mounting Panel
- ② Bottle Filler Housing
- ③ 1/8" O.D. Polyethylene Air Line
- ④ Valve Air Line Inlet
- ⑤ Supply Tubing Holder

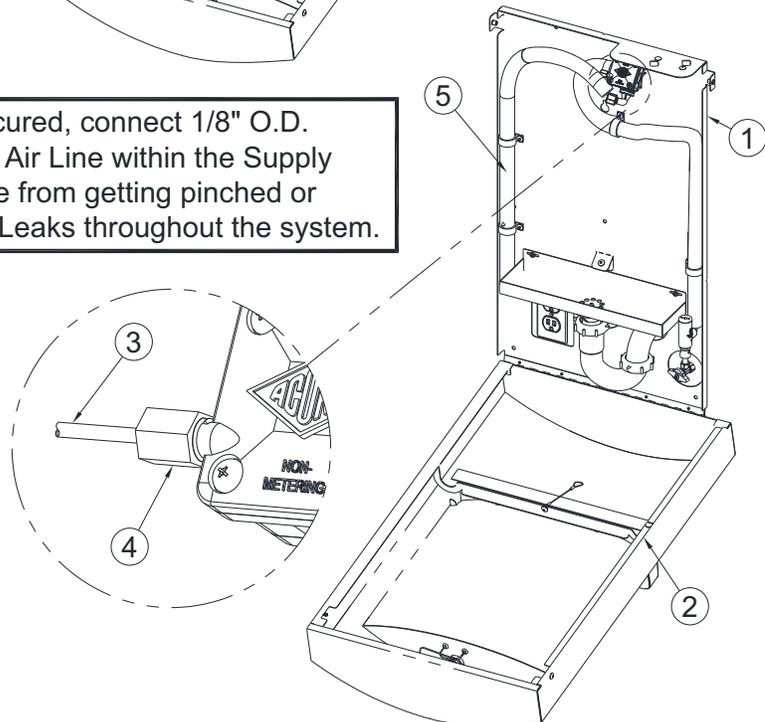

Bottle Filler Installation (Continued)

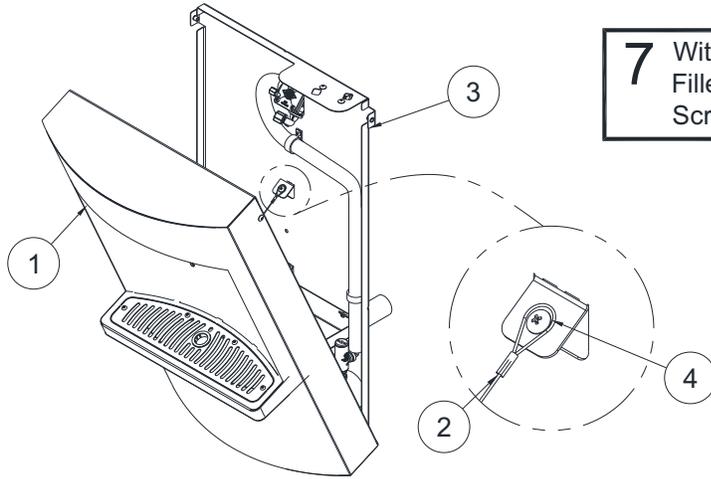


7 With fixture tested, hook Wire Strap from Bottle Filler Housing to Mounting Panel and tighten Screw.


- ① Bottle Filler Housing
- ② Wire Strap
- ③ Mounting Channel
- ④ Wire Strap Mounting Screw

8 Lift up from Fill Spout area to close the unit by swinging Bottle Filler Housing up and secure with Screws from step 1. Do not force closed. Address any interference if necessary. Do not over-tighten.

- ① Bottle Filler Assembly
- ② #10-32 x 1/2" Long Philips Head Screw
- ③ Bottle Filler Housing
- ④ Mounting Channel

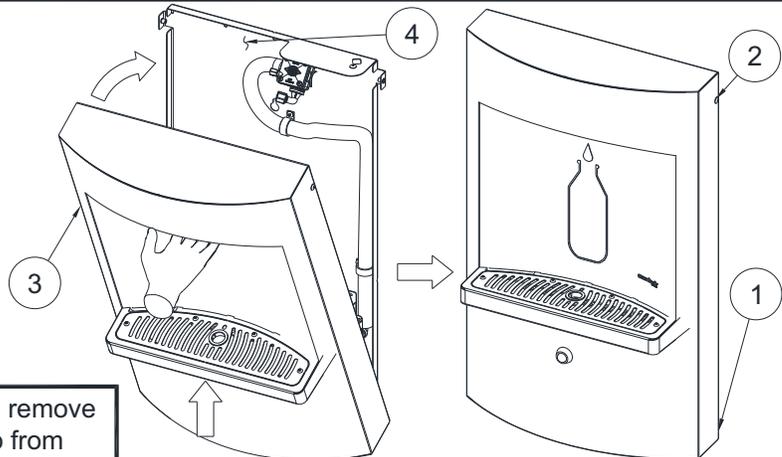


9 To open unit for maintenance purposes, remove Top Screws. Lift Bottle Filler Housing up from Fill Spout area then pull away from wall.

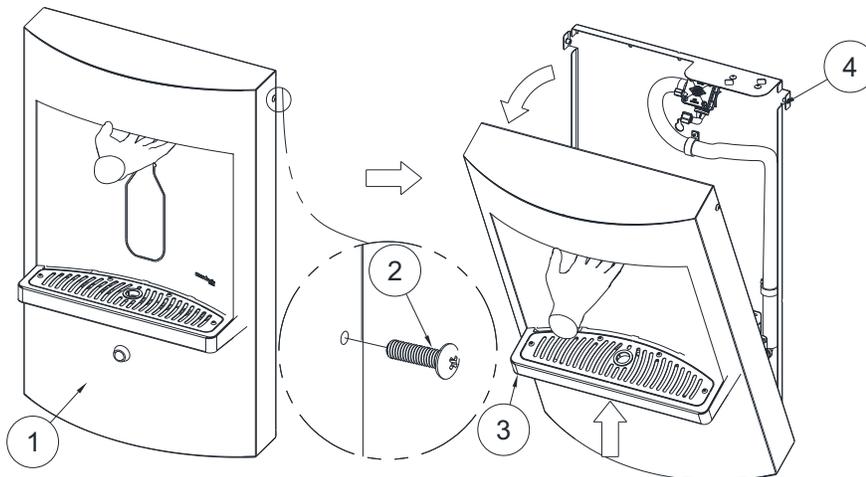

- ① Bottle Filler Assembly
- ② #10-32 x 1/2" Long Philips Head Screw
- ③ Bottle Filler Housing
- ④ Mounting Channel

Chiller Lower Trim Installation

- 1** With fixture tested and operating, mount Lower Trim Panel. Hook Upper Trim Panel with Lower Trim Panel's Bent Flange, center within prepared opening and over Chiller Frame Assembly. Secure Lower Trim Panel by tightening Screws on sides of Lower Trim Panel. For maintenance purposes, reverse step to remove Lower Trim Panel.

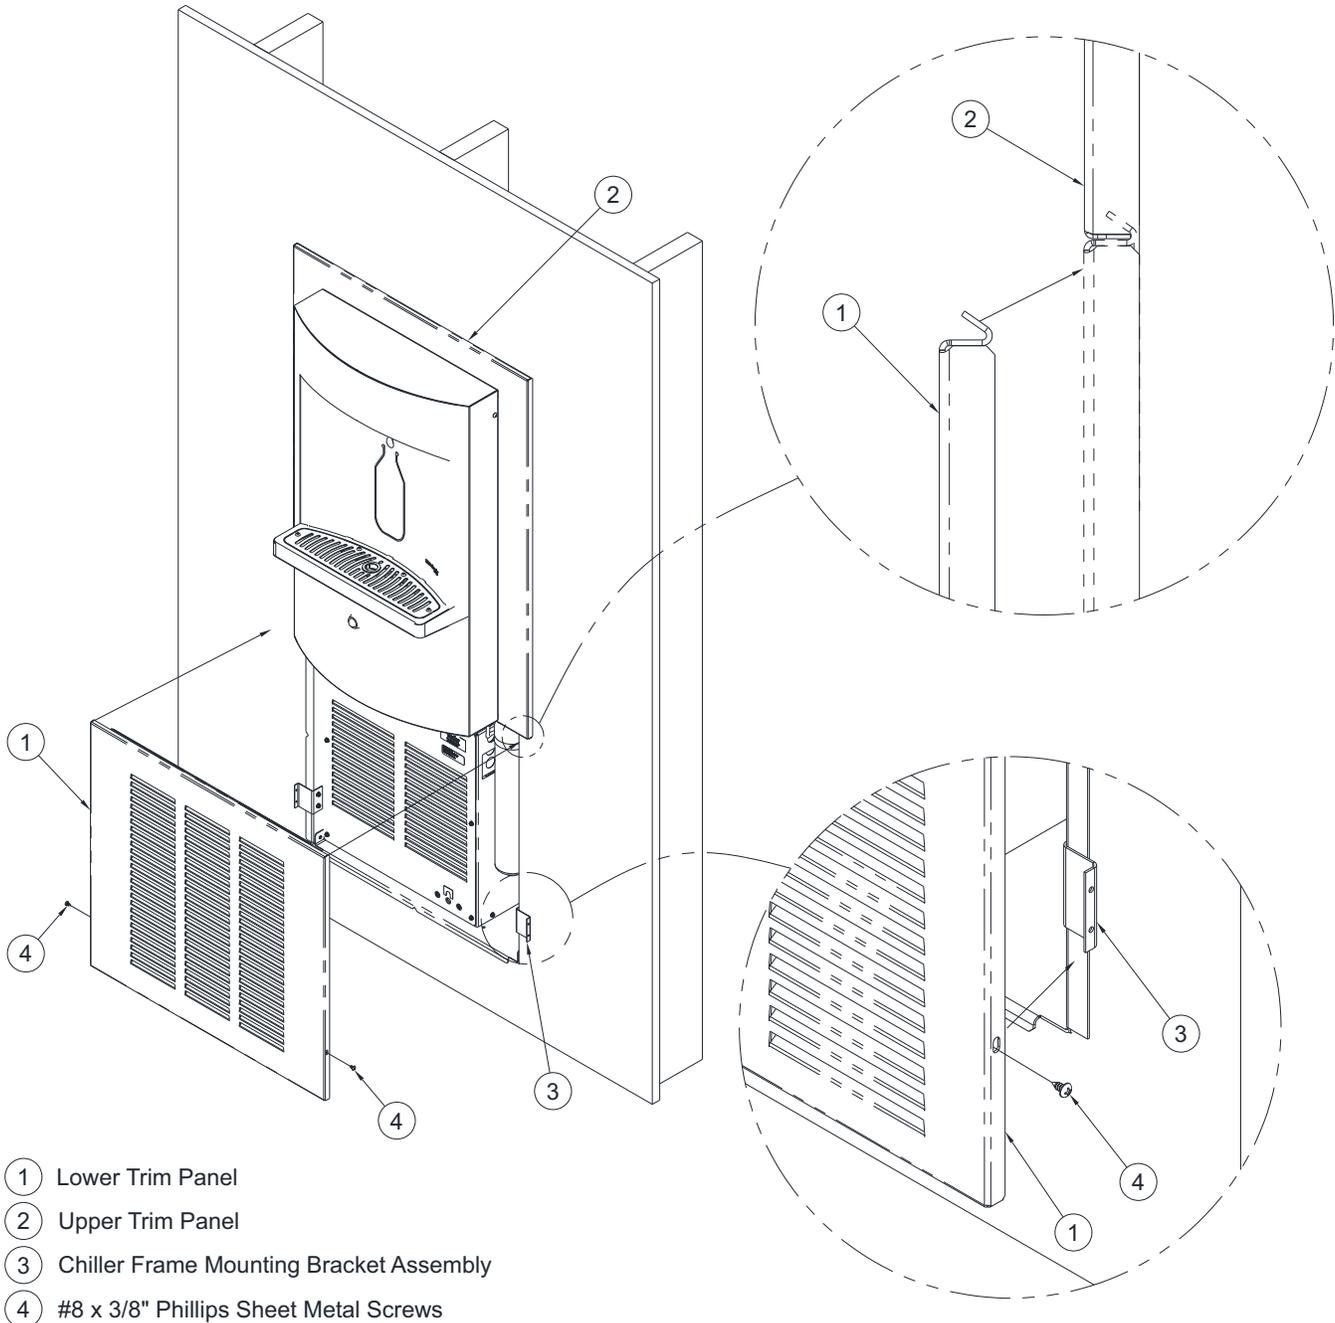

TROUBLE SHOOTING:

IMPORTANT: BEFORE MAKING ANY OF THE REPAIRS LISTED, MAKE SURE THE WATER CHILLER IS DISCONNECTED FROM THE ELECTRICAL SUPPLY AND THE WATER SUPPLY VALVE IS SHUT OFF.

1. COMPRESSOR DOES NOT RUN:

- a. Check the electrical supply for power and correct voltage. The incoming voltage must be within 10% of the rated voltage on the serial nameplate.
- b. If the cold thermostat capillary bulb loses its charge or becomes kinked it will fail in the open position causing a disruption of power to the compressor. Disconnect electrical supply to the water chiller and using an ohm meter check for continuity across the two electrical terminals on the thermostat. Install a new thermostat if there is no continuity.
- c. Check for loose wires within the compressor box. The incoming power leads must be connected to the overload and relay.
- d. If all components check positive for continuity then test the wiring harness plug for continuity to see if there is a broken wire within the wiring harness insulation.

2. COMPRESSOR RUNS - WATER IS WARM:

- a. The most common cause for a water chiller to run without producing cold water is a loss of refrigerant. The water chiller must be taken to a certified refrigerant technician for repairs.
- b. Make sure the condenser fan motor is operative. The fan blade must turn freely to help remove the heat of compression.
- c. An incorrect refrigerant charge, restriction or defective compressor (not pumping) will also cause the compressor to run without producing cold water. All these signs indicate a problem within the refrigeration system and the water chiller must be checked by an authorized service company.

4. COMPRESSOR CYCLING ON OVERLOAD PROTECTOR:

- a. A dirty condenser or a blocked fan will cause a high head pressure and frequent cycling of the overload protector.
- b. Check the incoming voltage to make sure it is within 10% of the serial nameplate rating.
- c. A restriction or moisture in the system will also cause intermittent cycling. A certified refrigeration mechanic should be contacted in this situation.
- d. Change the overload or relay if defective.


5. NOISY OPERATION:

- a. Check to make sure the fan blade is rotating freely.
- b. Check the compressor mounting to make sure the pins and clips are not rattling. If the compressor appears to be noisy internally, it must be replaced.

6. RESTRICTED OR NO WATER FLOW:

- a. Ensure water supply service stop valve is fully open.
- b. Verify minimum 20 psig supply line flow pressure.
- c. Check for twists or kinks in outlet tubing.
- d. Check the water inlet "Y" strainer. Sediment from the main supply can get trapped in the screen along with installation materials such as pipe dope and flux. The screen should be cleaned and checked on a regular basis and replace if needed.
- f. Flow control in solenoid valve outlet elbow clogged remove & clean.
- g. The water Cooler may also develop a freezing condition in which the water will become frozen inside the evaporator coil. This indicates a refrigeration problem or thermostat failure in which case the Water Chiller needs to be checked by a qualified technician.
- h. No power to transformer connections, loose or wires cut.

BF158S Series Breakdown

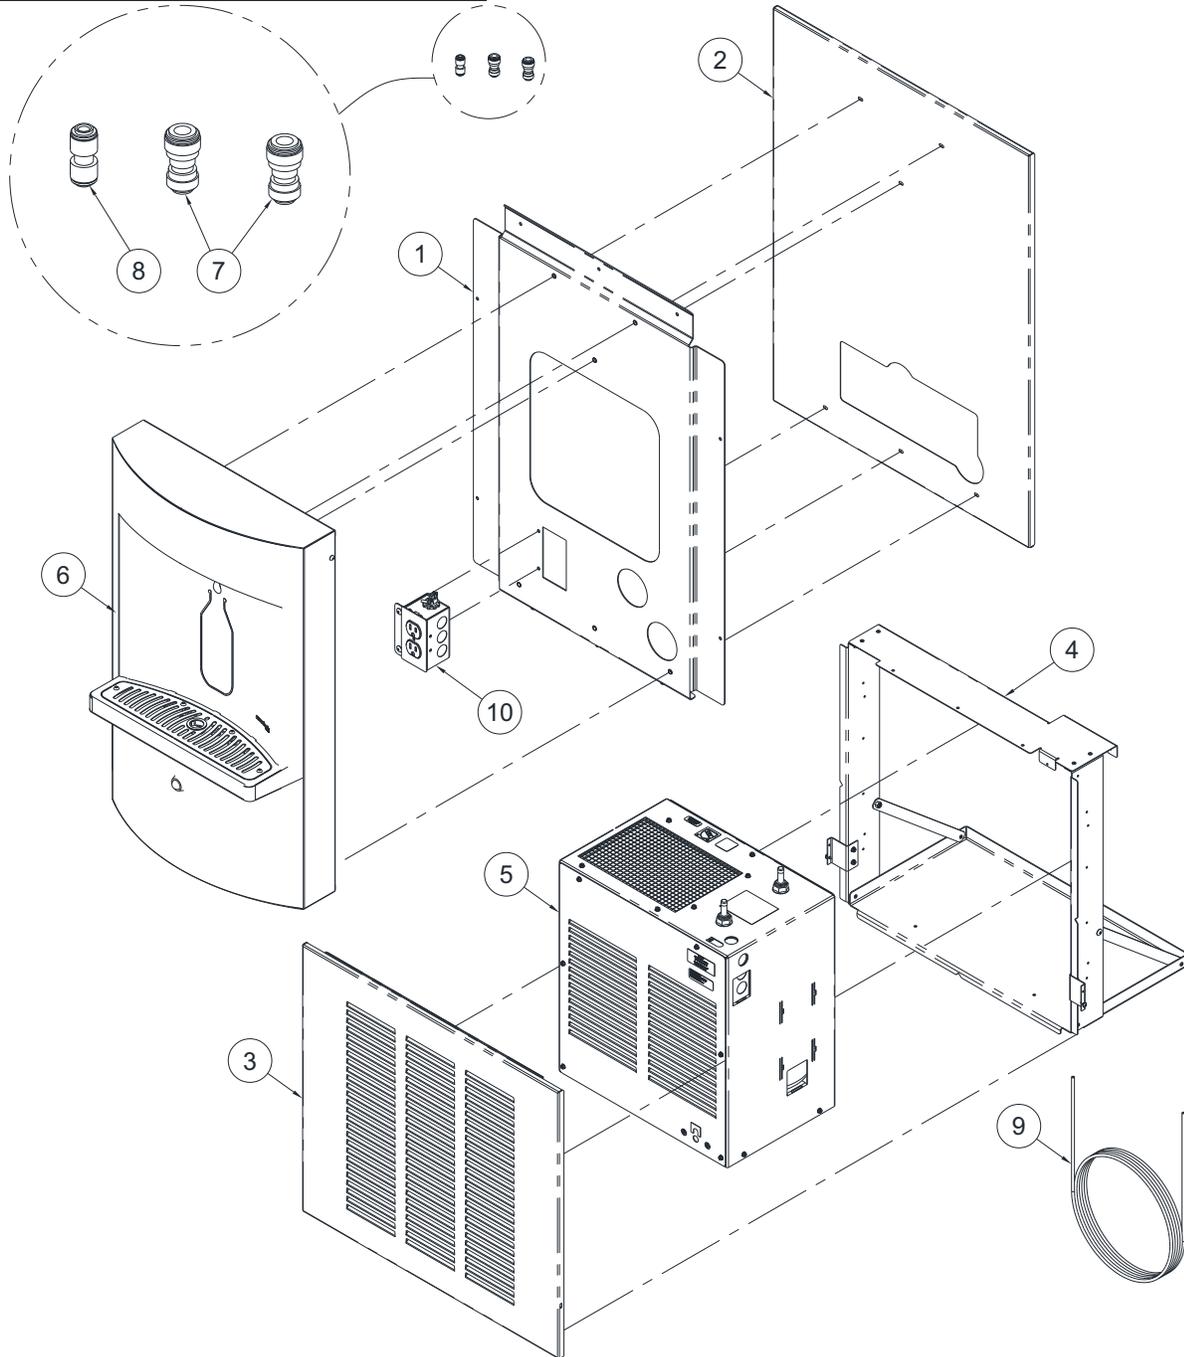


ITEM	PART NUMBER	DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION
1	7014-241-001	MOUNTING PANEL ASSEMBLY	6	MODEL #	BOTTLE FILLER ASSEMBLY
2	7014-216-199	UPPER TRIM PANEL	7	1895-123-000	1/4" OD x 3/8" OD UNION, PUSH-IN
3	7000-239-199	BOTTOM TRIM PANEL	8	1895-121-000	1/4" OD TUBE UNION FITTING
4	7014-230-001	CHILLER FRAME ASSEMBLY	9	2169-000-000	1/4" OD LLDPE TUBING, BLUE
5	7008-010-001	8 GPH CHILLER	10	7014-242-001	BRACKET/ JUNCTION BOX KIT

BF15S PARTS LIST
BOTTLE FILLER PARTS
BREAKDOWN

! IMPORTANT


- Bottle Filler Housing and Frame Assembly are shown for reference.
- For item #11 refer to complete parts breakdown on following page.

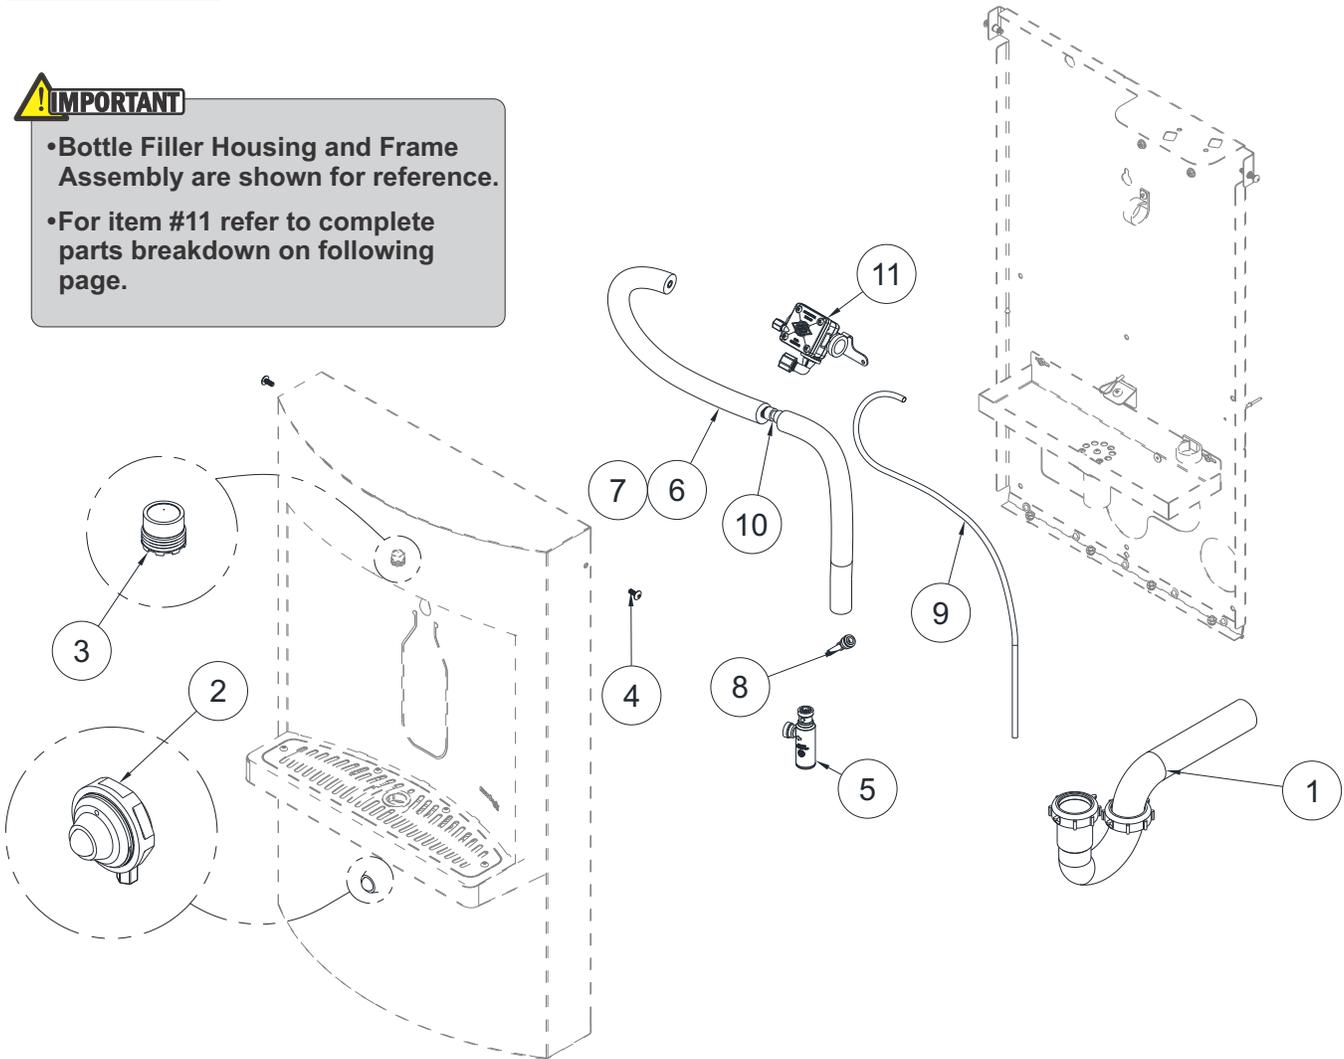

ITEM	PART NUMBER	DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION
1	4970-265-000	P-TRAP	7	7012-055-000	FOAM PIPE INSULATION
2	2566-160-001	(-PBH) S/T SIDE OUTLET PUSHBUTTON	8	1895-709-000	ELBOW, 1/4" PUSH-IN 1/4" STEM
3	7013-119-000	NEOPERL LAMINAR NOZZLE	9	2150-000-000	1/8" O.D. LLDPE TUBING
4	0116-114-000	#10-32 x 1" SS PHIL RD HD SCREW	10	1895-121-000	1/4" OD TUBE UNION PUSH-IN
5	7003-096-001	"Y" STRAINER	11	7014-486-001	NON-METERING AIR-TROL VALVE ASSY
6	2169-000-000	1/4" O.D. LLDPE TUBING, BLUE			



BF15S VALVE BREAKDOWN

ITEM	PART NUMBER	DESCRIPTION
1	7014-524-001	DIRECT ACTING ASSEMBLY
2	0116-012-000	#8-32 x 1-1/4" PHILLIPS ROUND HEAD
3	0331-003-000	#8 LOCKWASHERS
4	1895-450-000	1/8" PLASTIC COMPRESSION NUT
5	2563-000-001	DIRECT ACTING MOTOR ASSEMBLY
6	2563-008-000	PILOT ORIFICE PLATE SPRING
7	2563-019-001	PILOT ORIFICE PLATE ASSEMBLY
8	2563-010-001	WATER DIAPHRAM ASSEMBLY
9	2563-007-000	DIRECT ACTING COVER PLATE
10	2563-004-001	DIRECT ACTING DIAPHRAM ASSEMBLY
11	2563-003-000	ACTUATOR SPRING
12	2563-001-000	MOTOR HOUSING
13	0401-026-000	SEPARATOR CUP O-RING
14	2563-002-199	SEPARATOR CUP
15	2570-063-199	VALVE BODY
16	1895-115-000	1/4" OD x3/8" NPT PUSH-IN FITTING
17	2570-052-001	1/4" OD PLASTIC ELBOW ASSEMBLY
18	0326-100-000	RETAINING CLIP
19	7014-523-199	BF11S/15S VALVE MOUNTING BRACKET
20	0124-010-000	#10 X 1/2" PHILLIPS TRUSS HEAD

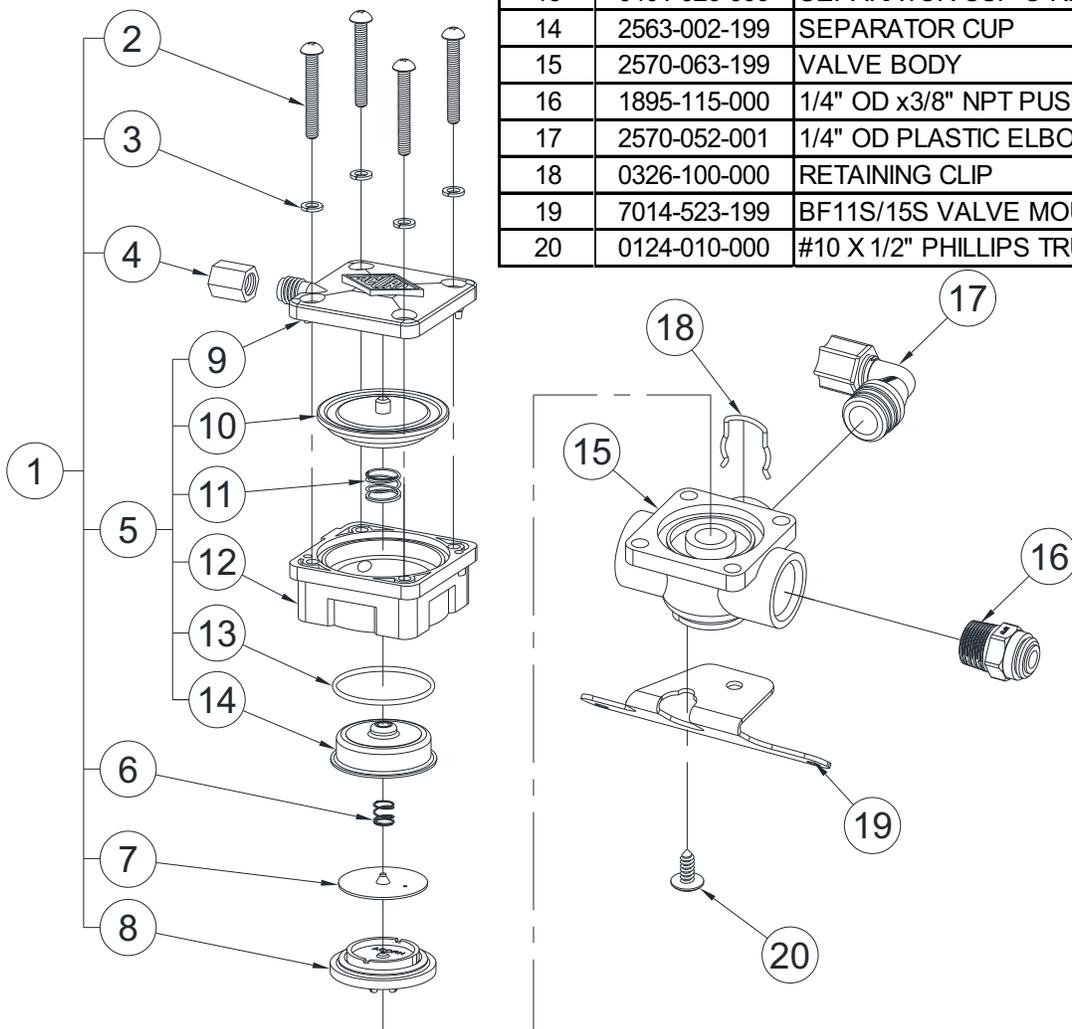

Optional -WF3000 Water Filter

ITEM	PART NUMBER	DESCRIPTION
1	7014-057-030	FILTER ASSY, 3000 GALLONS
2	7014-060-002	MOUNTING BRACKET WF3000
3	7012-347-001	WF3000 FILTER & FILTER HEAD
4	7012-055-000	3/8" ID FOAM INSULATION TUBE
5	2169-000-000	1/4" OD TUBE, 24" FEET LONG
6	1895-709-000	ELBOW, 1/4" OD PUSH-IN X 1/4" OD STEM
7	0250-011-000	#10 x 1/2" LONG TRUSS HEAD SCREW
8	0124-031-000	#8 x 3/8" LONG SLOTTED WASHER SCREW
9	7012-347-000	REPLACEMENT CARTRIDGE

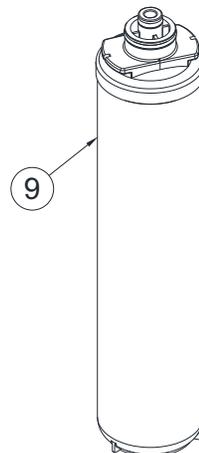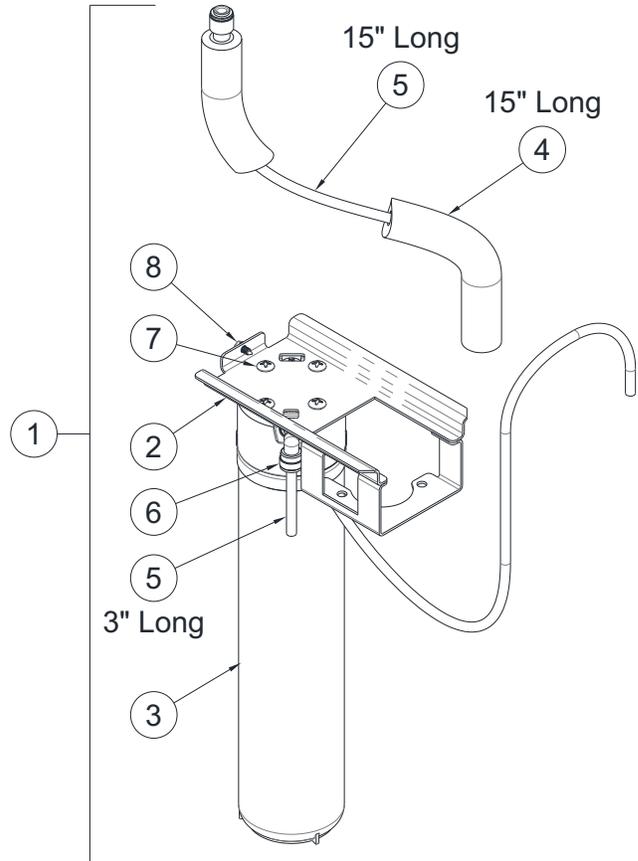

Repairs must be made with Murdock Manufacturing parts only. Please order through your local representative or distributor. The phone number to locate your local representative is 1.800.591.9360.