
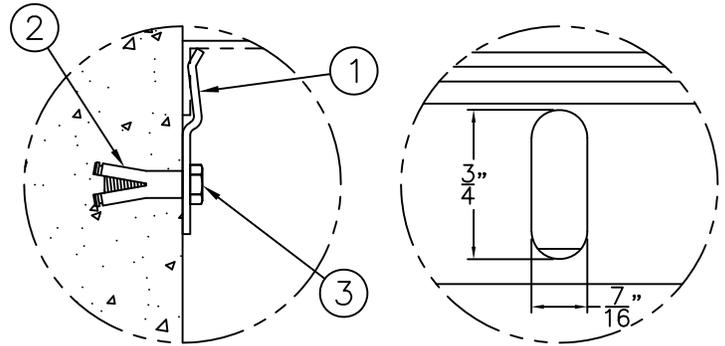


**FRONT VIEW**

**SIDE VIEW**

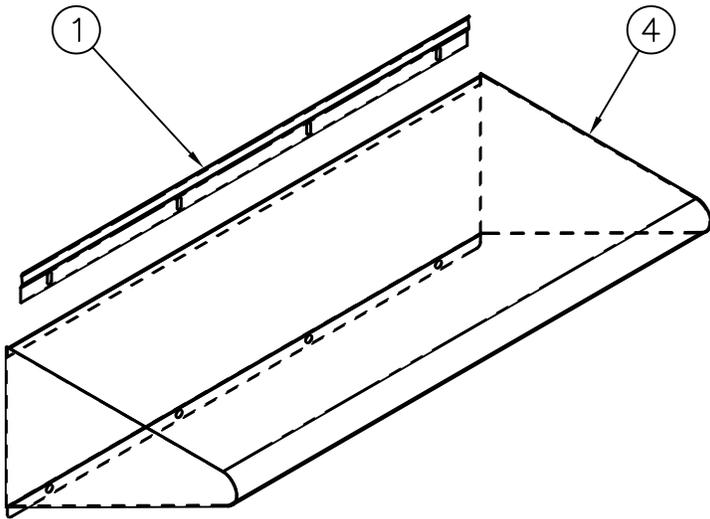

**INSTALLATION INSTRUCTIONS:**

- A- USE MOUNTING HOLES ON S-CLIP BRACKET ① AS A TEMPLATE FOR MARKING THE UPPER MOUNTING LOCATIONS FOR THE WALL ANCHORS ② (BY OTHERS) ON THE WALL AT DIMENSIONS SHOWN.
- B- INSTALL UPPER WALL ANCHORS ② (BY OTHERS). WALL ANCHOR AND MOUNTING HARDWARE (BY OTHERS) SHOULD BE RATED TO SUPPORT A MINIMUM VERTICAL LOAD OF 250 LBS (113.4 KG) AND SUITED FOR THE WALL CONSTRUCTION AND SITE CONDITIONS.
- C- FASTEN S CLIP BRACKET ① TO WALL USING 3/8" DIAMETER SUITABLE WALL TYPE MOUNTING HARDWARE ③ (BY OTHERS).

LR1103 DIMENSIONAL INFO			
MODEL	X	Y	Z
LR1103-24-FM	24"	6 1/2"	10"
LR1103-27-FM	27"	6 1/2"	10"
LR1103-33-FM	33"	9"	16"

- D- HANG SHOWER SEAT ④ ON WALL USING S CLIP BRACKET ①.
- E- MARK LOWER MOUNTING POINTS ON WALL FOR WALL ANCHOR ② (BY OTHERS) INSTALLATION.
- F- REMOVE SHOWER SEAT ④ AND INSTALL LOWER WALL ANCHORS ② (BY OTHERS).
- G- REINSTALL SHOWER SEAT ④ AND SECURE LOWER MOUNTING POINTS USING INSTALLER PROVIDED SCREWS ⑤ TO SUIT WALL CONSTRUCTION.

<p>ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE <b>FRONT MOUNTED SHOWER SEAT LR1103-24-FM SERIES INSTALL</b></p>		
	<p>MANUFACTURE DATE</p> <p><b>01/01/2000</b></p> <p><b>TO PRESENT</b></p>	<p>DATE ISSUED</p> <p><b>10/29/2025</b></p>	<p>DRAWING NUMBER</p> <p><b>9925-164-001</b></p>
		<p>DATE REVISED</p>	