



**DETAIL "B"**  
**SCALED X 3**

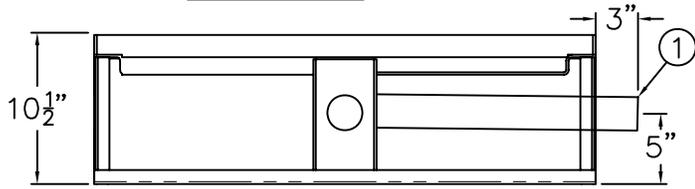


**1749-L**  
**BACK VIEW**

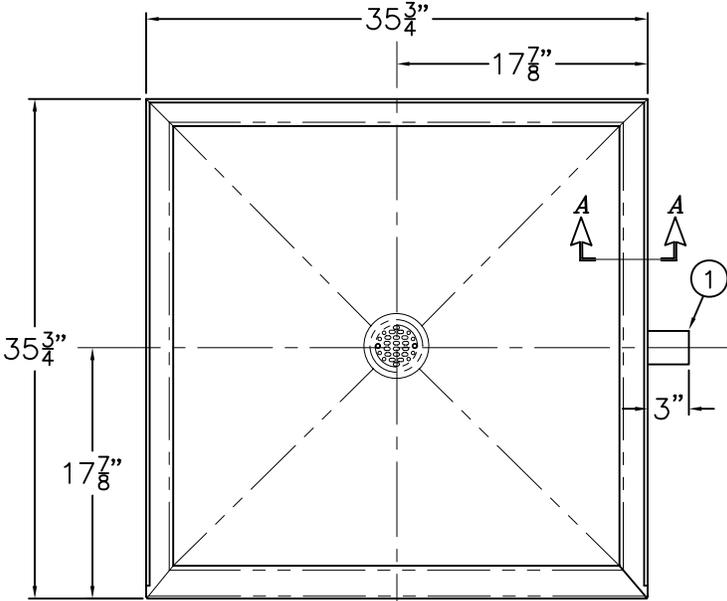


**1749-R SHOWN FOR**  
**REFERENCE ONLY**

<b>REFERENCE DRAWINGS</b>	
INSTALLATION	DRAWING
-SR SHOWER RECEPTOR OPTION	9925-148-001

PRODUCT ROUGH-IN AND INSTALLATION REQUIRES THE FOLLOWING MATERIALS, NOT SUPPLIED BY ACORN ENGINEERING COMPANY.  
 • 1-1/2" P-TRAP, DRAIN LINE AND WASTE FITTINGS

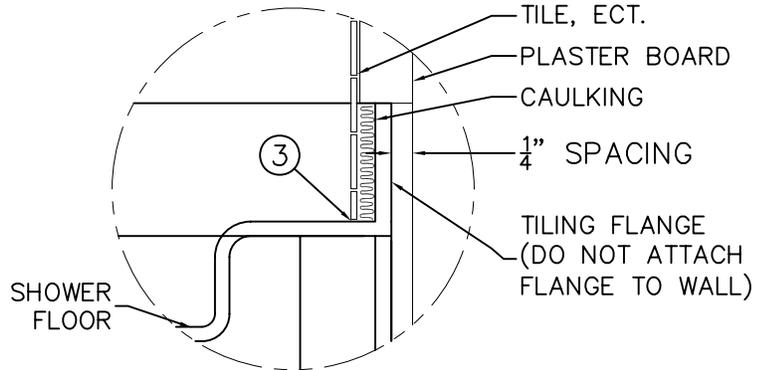

**DETAIL "AA"**  
**SCALE x 6**

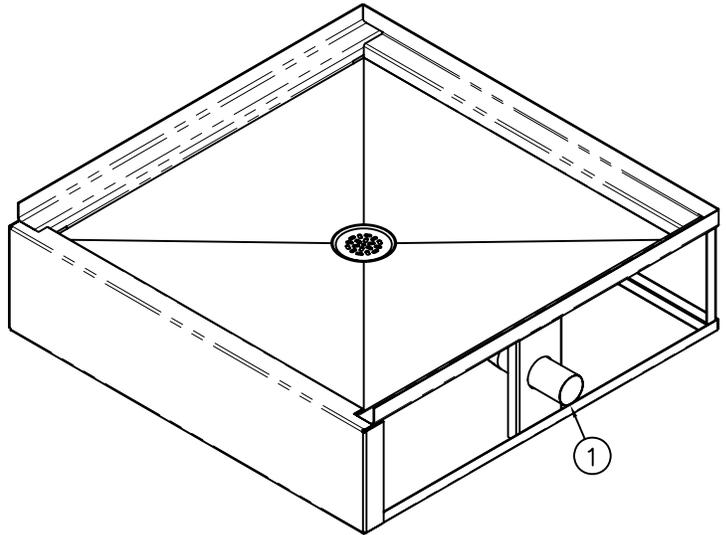

**INSTALLATION INSTRUCTIONS:**



- A- ROUGH-IN FOR (1) 2-3/8" OD PLAIN END WASTE OUTLET ON CHASE WALL. (2) 2" IPS -IC INSIDE CAULK WASTE OPTIONAL, SEE DETAIL "B".
- B- POSITION FIXTURE IN ALCOVE AND MAKE UP WASTE CONNECTION FROM CHASE SIDE. DO NOT LET ROUGH WALL MATERIAL OVERLAP INTEGRAL TILING FLANGE

- C- TEST WASTE CONNECTION BEFORE FINISHING SURROUNDING WALLS, AND VERIFY PROPER DRAINAGE.
- D- LET FINISH WALL (TILE ECT.) OVERLAP AND REST ON (3) TILING FLANGE SHOULDER. SEE DETAIL "AA" TO COMPLETE INSTALLATION.


ACORN ENGINEERING COMPANY P.O. BOX 3527 INDUSTRY, CA. 91744 (626) 336-4561 FAX (626) 961-2200	TITLE <b>BUILT-IN SHOWER FLOOR, CAT. #1749</b>		
	MANUFACTURE DATE <b>JULY 1974</b> <b>TO PRESENT</b>	DATE ISSUED <b>06/17/10</b>	DRAWING NUMBER <b>9925-149-001</b>
	DATE REVISED		



REFERENCE DRAWINGS	
INSTALLATION	DRAWING
1749 BUILT-IN SHOWER	9925-149-001
1730 S/T CABINET SHWR.	9925-111-003
1730 H&C CABINET SHWR.	9925-112-001
1730 FRONT ACCESS	9925-118-002

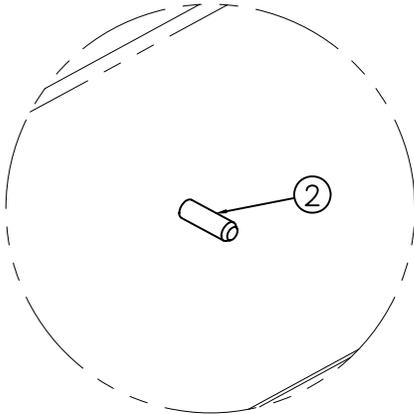
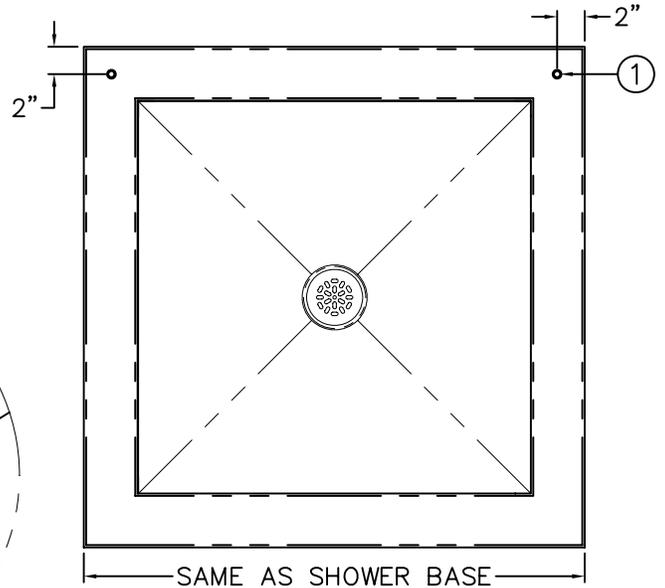


**DETAIL "A"**  
SCALE x 4

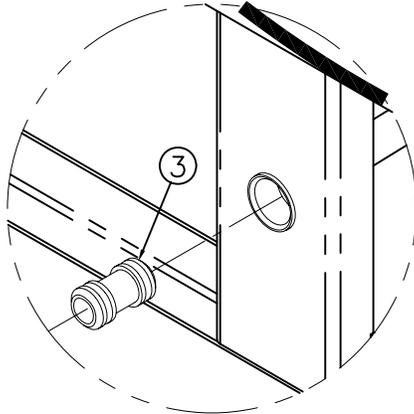

**DETAIL "B"**  
SCALE x 4

**PACKAGED HARDWARE**

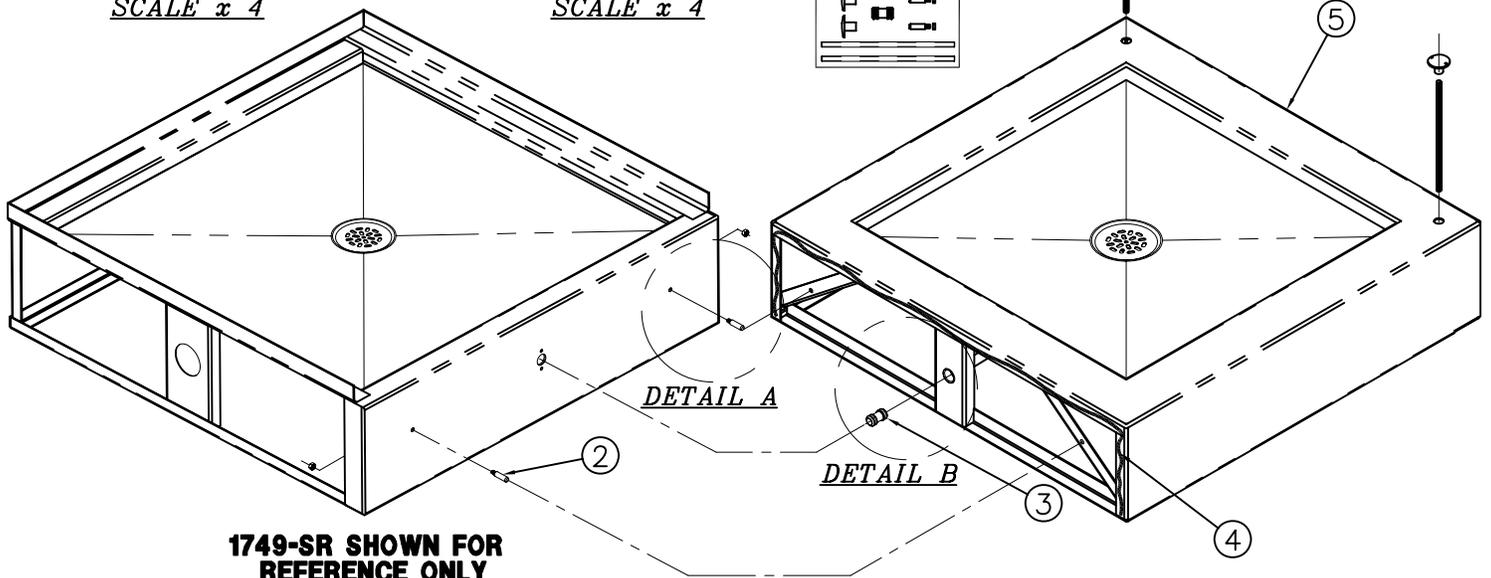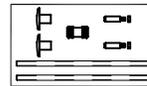

**1749-SR SHOWN FOR REFERENCE ONLY**

**INSTALLATION INSTRUCTIONS:**

- ROUGH IN INSTALLER PROVIDED FLOOR ANCHORS FOR ① 3/8"-16 UNC THRESHOLD ANCHORING HARDWARE PROVIDED.
- A- COMPLETE INSTALLATION OF STAINLESS STEEL SHOWER FIXTURE FOLLOWING MANUFACTURE'S INSTALLATION INSTRUCTIONS.
- B- INSTALL ② RECEPTOR ALIGNMENT PINS WITH HARDWARE PROVIDED, SEE DETAIL "A".

- C- ENSURE O-RINGS ARE ON SHOWER RECEPTOR ADAPTER ③ ASSEMBLY AND INSERT PARTIALLY ON SHOWER RECEPTOR, SEE DETAIL "B".
- D- APPLY A BEAD OF INSTALLER PROVIDED ④ SILICONE AROUND TOP AND SIDE EDGES OF RECEPTOR, SLIDE ⑤ RECEPTOR ALIGNING SHOWER RECEPTOR ALIGNMENT PINS ON STAINLESS STEEL SHOWER FLOOR WITH CORRESPONDING HOLES ON RECEPTOR AND "O" RING CONNECTOR.
- E- SECURE WITH ⑥ RECEPTOR THRESHOLD ANCHORING HARDWARE PROVIDED.



ACORN ENGINEERING COMPANY  
P.O. BOX 3527 INDUSTRY, CA. 91744  
(626) 338-4561 FAX (626) 961-2200

TITLE <b>-SR (SHOWER RECEPTOR) BUILT-IN SHOWER FLOOR</b>		
MANUFACTURE DATE <b>JULY 1974 TO PRESENT</b>	DATE ISSUED <b>06/15/10</b>	DRAWING NUMBER <b>9925-148-001</b>
	DATE REVISED	