





**REPAIR PARTS**

CONICAL TUB SPOUT | 9970-040-001

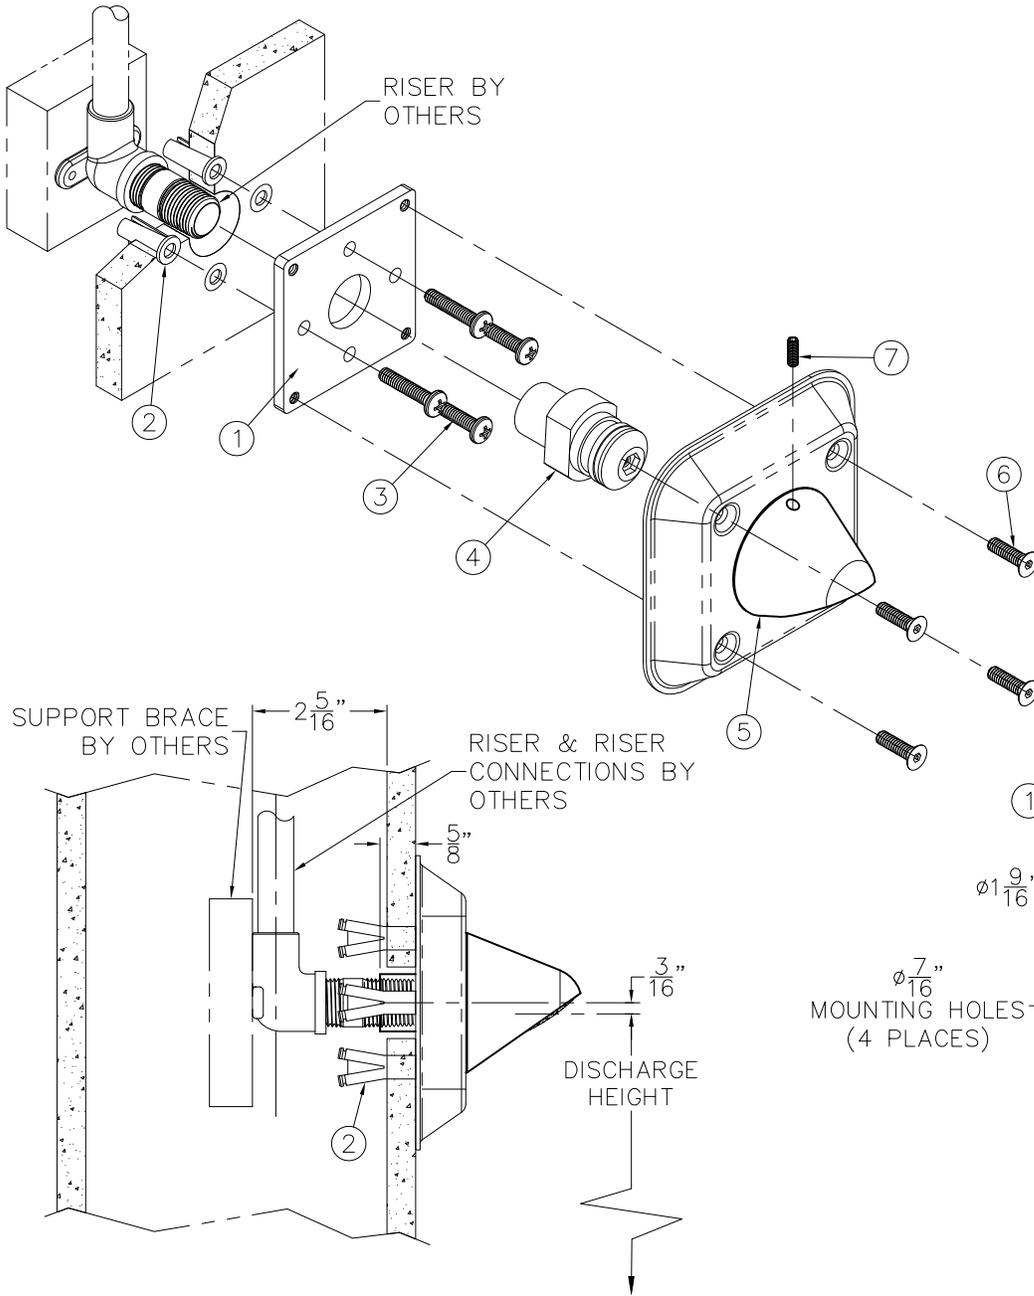

**NOTE:**  
USE OF TEFLON TAPE ON ALL THREADED CONNECTIONS IS RECOMMENDED

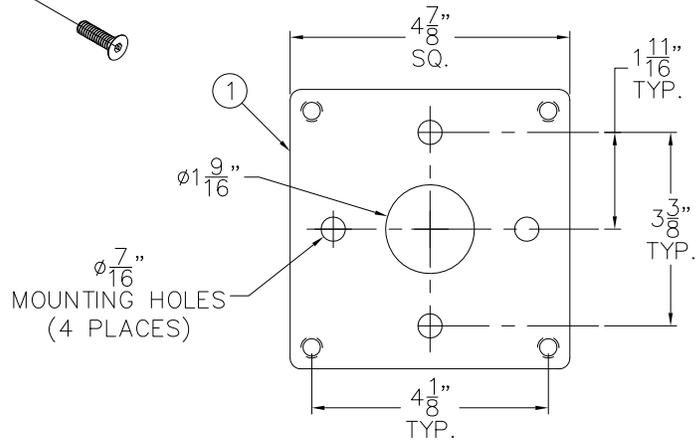

**INSTALLATION INSTRUCTIONS:**

- A- PRIOR TO MAKING UP CONNECTIONS TO VALVE ASSEMBLY, FLUSH SUPPLY LINES THOROUGHLY.
- B- USING ANCHOR PLATE (1) AS A TEMPLATE, LOCATE AND MARK MOUNTING POINTS TO INSTALL WALL ANCHOR (2) BY OTHERS FOR 1/4"-20 x 1-1/4" LONGS SCREWS (3) PROVIDED.

- C- SECURE ANCHORING PLATE (1) TO WALL USING SCREWS (3) PROVIDED.
- D- MAKE UP SPOUT RISER CONNECTION FROM VALVE TO 1/2" NPT SPOUT O-RING ADAPTER (4).
- E- INSTALL AND SECURE TUB SPOUT (5) ONTO WALL ANCHORING PLATE (1) USING SCREWS (6) AND SET SCREW (7) PROVIDED.

<p>WHITEHALL MANUFACTURING P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 968-6681 FAX (626) 855-4862</p>	<b>TITLE</b>	
	<b>WHCTS CONICAL TUB SPOUT</b>	
	MANUFACTURE DATE	DATE ISSUED
<b>MARCH 2015</b>	<b>10/01/15</b>	DRAWING NUMBER
<b>TO PRESENT</b>	DATE REVISED	<b>9918-030-001</b>