

REFERENCE DRAWINGS/PARTS	
PART	DRAWING
SECURITY NUT DRIVER	0355-000-001
SECURITY SCREW DRIVER BIT	0296-025-199
THRESHOLD ANCHOR	0391-029-001



INSTALLATION INSTRUCTIONS:

- A-LOCATE AND ROUGH IN 3" IPS WASTE FOR INSIDE GASKET DRAIN. NOTE: PROVIDE 1/4" CLEARANCE BETWEEN MOP SINK AND UNFINISHED WALL(S) FOR SELECTED -TF TILING FLANGE OPTIONS.
- B-FOR OPTIONAL -TA THRESHOLD ANCHORS: LOCATE AND INSTALL FLOOR ANCHORS BY OTHERS FOR 3/8"-16 UNC ANCHORING HARDWARE PROVIDED.
- C-REMOVE GRID STRAINER AND POSITION OPEN END OF FIXTURE TOWARDS WALL ALIGNING WASTE CONNECTION OVER EXPOSED 3" IPS ROUGH. CAULK DRAIN FROM INSIDE OF MOP SINK. REPLACE GRID STRAINER.


- D-FOR OPTIONAL -TA THRESHOLD ANCHORS SECURE FIXTURE WITH ANCHORING STUDS AND SECURITY NUTS. TIGHTEN SECURITY NUTS WITH SPECIAL DRIVER.
- E-FOR OPTIONAL -TF TILING FLANGE:
 - 1- DO NOT LET ROUGH WALL MATERIAL OVERLAP FLANGE.
 - 2- DO NOT ATTACH FLANGE TO BUILDING WALL.
 - 3- LET FINISHED WALL (TILE, ETC) OVERLAP AND REST ON SHOULDER.

NOTE: NON-PICK SECURITY CAULKING RECOMMENDED

ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200	TITLE 1636 MOP SINK, STAINLESS STEEL		
	MANUFACTURE DATE JANUARY 2008 TO PRESENT	DATE ISSUED 04/02/14	DRAWING NUMBER 9925-326-002
		DATE REVISED	

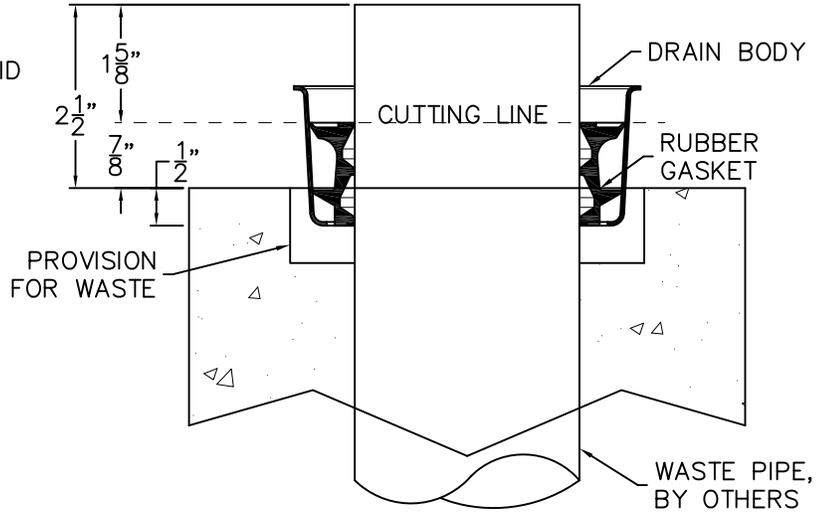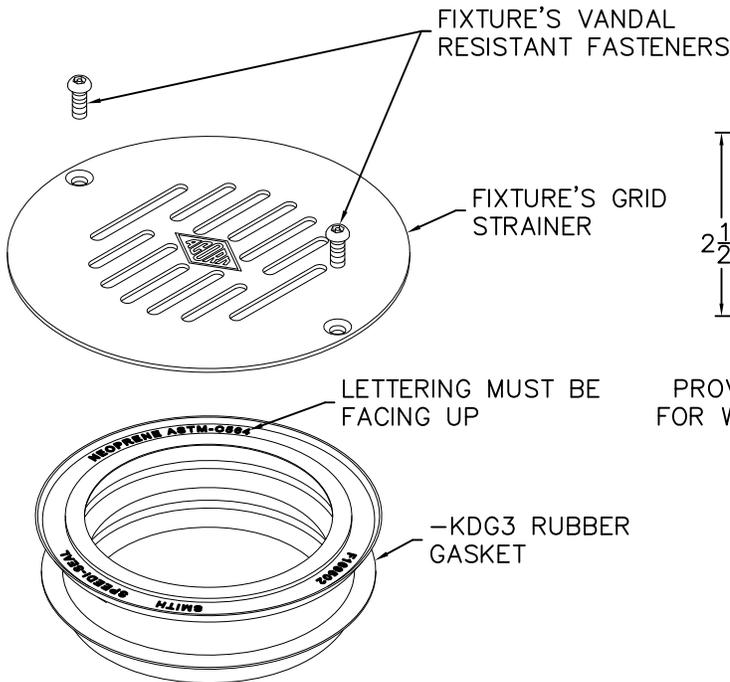

WASTE PIPE CUTTING DETAIL

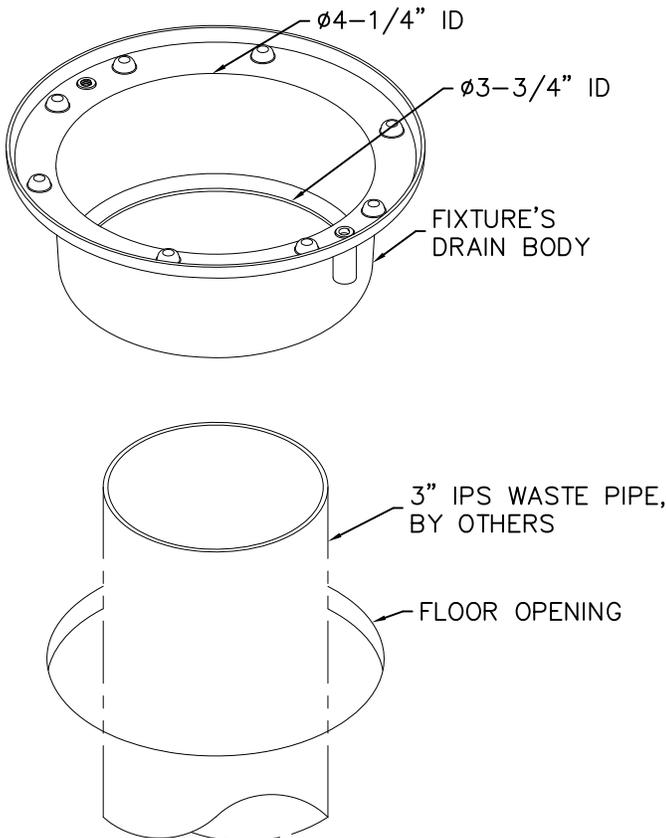

INSTALLATION INSTRUCTIONS:

- A-ROUGH-IN FOR WASTE AT DESIRED LOCATION AND PER FIXTURE'S INSTALLATION INSTRUCTIONS. WASTE SHOULD EXTEND APPROXIMATELY 3" ABOVE THE FINISHED FLOOR.
- B-WITH WASTE PROTRUDING ABOVE FINISHED FLOOR, REFERENCE CUTTING DETAIL FOR WASTE TRIMMING. WASTE PIPING SHOULD BE EVEN WITH GASKET WHEN INSTALLATION IS COMPLETE.
- C-PLACE FIXTURE OVER WASTE PIPING MAKING SURE DRAIN BODY IS CENTERED TO WASTE PIPING. LUBRICATE GASKET WITH SOAP SOLUTION AND STRETCH OVER WASTE PIPING WITH LETTERS FACING UP.
- D-USING A HAMMER AND CAULKING TOOL WORK AROUND THE GASKET WITH A SERIES OF BLOWS AND GRADUALLY DRIVE GASKET INTO DRAIN BODY UNTIL IT'S EVEN WITH TOP OF WASTE PIPING.
- E-TEST CONNECTION BEFORE INSTALLING GRID STRAINER. TO TEST: PLUG DRAIN AND FILL FIXTURE WITH WATER. CHECK FOR LEAKS. VERIFY PROPER DRAINAGE.

<p>ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE -KDG3 3' MOP SINK QUICK SEAL GASKET</p>		
	<p>MANUFACTURE DATE</p> <p>APRIL 2014</p> <p>TO PRESENT</p>	<p>DATE ISSUED</p> <p>04/08/14</p>	<p>DRAWING NUMBER</p> <p>9925-321-001</p>
		<p>DATE REVISED</p>	