




TOP VIEW

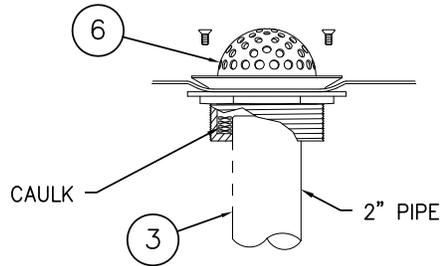


**DETAIL A
IC WASTE**

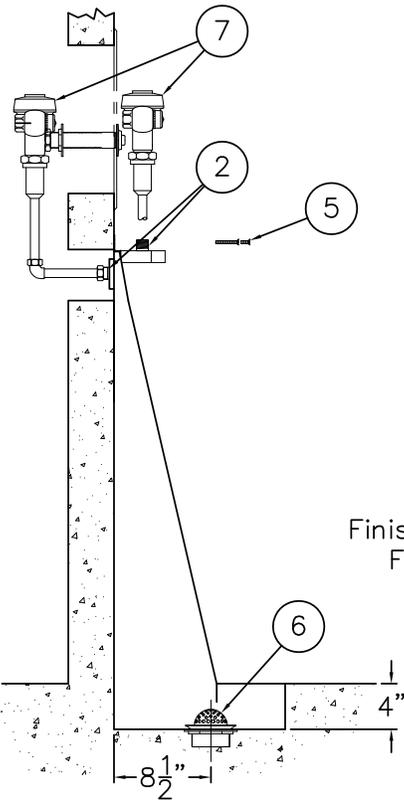

SIDE VIEW

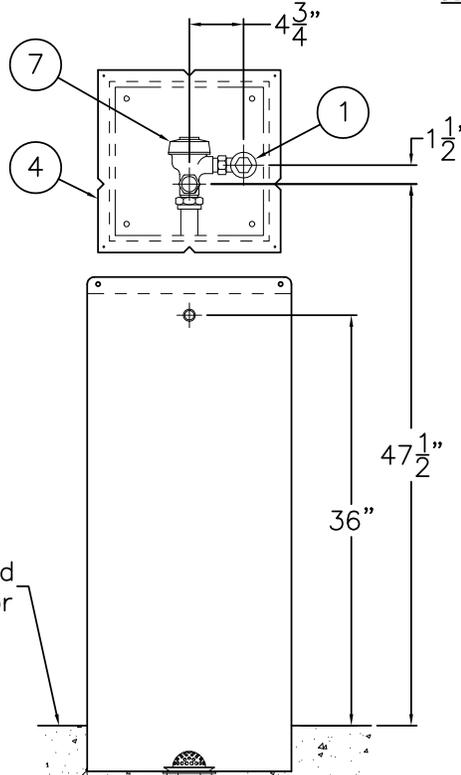

**ROUGH-IN REAR VIEW OF
-W WALL SUPPLY UNIT**

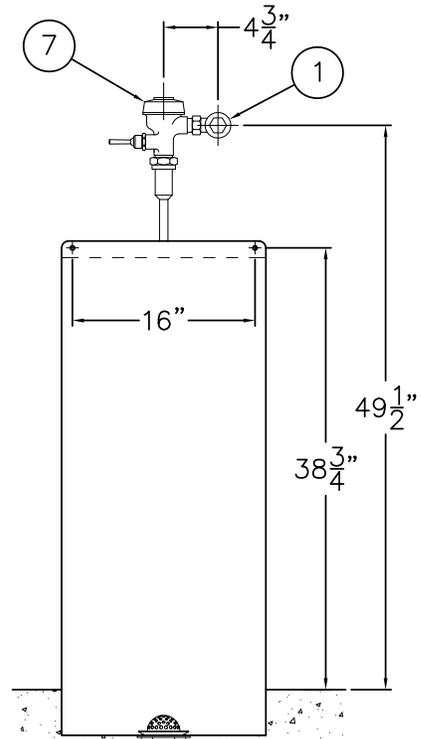

**ROUGH-IN REAR VIEW OF
-T TOP SUPPLY**

INSTALLATION INSTRUCTIONS

A- REMOVE EXISTING FLOOR (OR BLOCKOUT ON NEW CONSTRUCTION) PER DIMENSIONS SHOWN IN TOP VIEW.

B- ROUGH-IN FOR THE FOLLOWING:
 • FLUSH VALVE INLET 3/4" NPT (1).
 • FIXTURE FLUSHING INLET 3/4" NPT (2).
 • FIXTURE 2" INSIDE CAULK WASTE (3).

C- IF AN OPTIONAL 2898 FLUSH VALVE ACCESS PANEL (4) IS REQUIRED (FOR BACK SUPPLY FLUSH VALVES), INSTALL SLEEVE. SEE DRAWING 9908-399-001.

D- INSTALL WALL ANCHORS (BY OTHERS) FOR 1/4"-20 X 2" LONG SCREWS (5).

E- INSTALL FIXTURE. ATTACH WITH (2) MOUNTING SCREWS (5). REMOVE BEEHIVE STRAINER (6). CAULK AT DRAIN. SEE DETAIL "A".

F- CONNECT FLUSH VALVE (7) PER MANUFACTURER'S RECOMMENDATIONS.

ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200	TITLE STALL TYPE WASHOUT URINAL CAT. #2180		
	MANUFACTURE DATE FEB 1974 TO PRESENT	DATE ISSUED 06/01/90	DRAWING NUMBER 9908-320-001
		DATE REVISED 11/01/10	