


ENVIRO-FLO®II SHALLOW END CAP ASSEMBLY INSTRUCTIONS


STEP 1: CUT OFF TOP OF SHALLOW END CAP AT LINE WITH NUMBER DESIGNATING THE CHANNEL IT WILL BE ATTACHED TO.

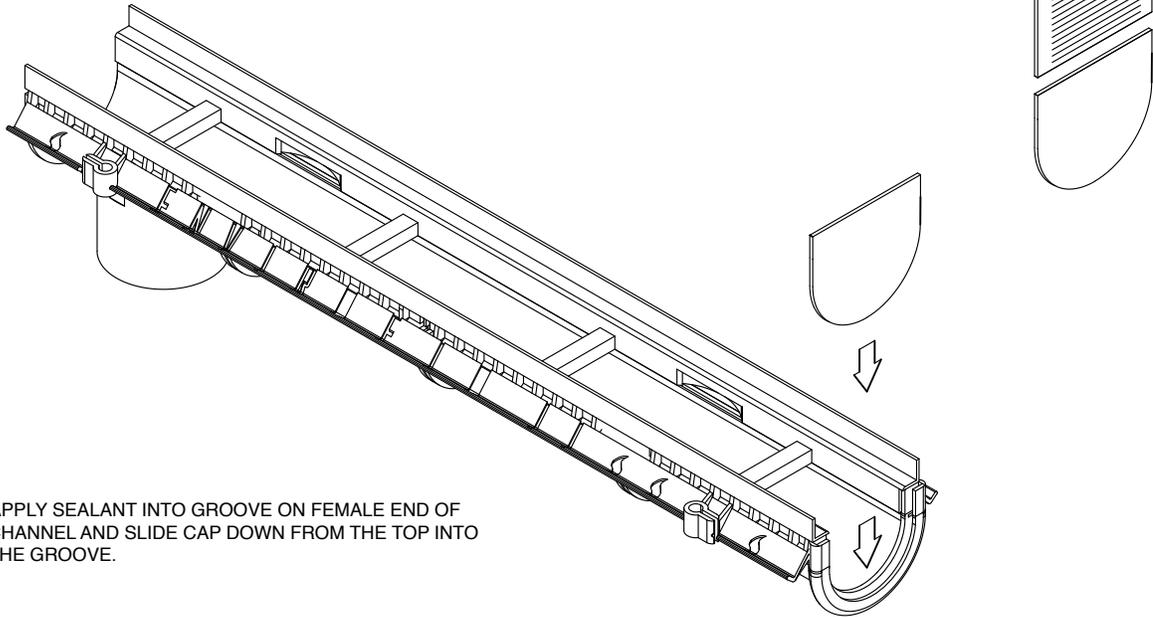

STEP 2: APPLY SEALANT INTO GROOVE ON FEMALE END OF CHANNEL AND SLIDE CAP DOWN FROM THE TOP INTO THE GROOVE.

ENVIRO-FLO®II DEEP END CAP ASSEMBLY INSTRUCTIONS

STEP 1: CUT OFF TOP OF END CAP AT LINE WITH NUMBER DESIGNATING THE CHANNEL IT WILL BE ATTACHED TO. EVERY 4TH CHANNEL IS MARKED WITH A NUMBER.

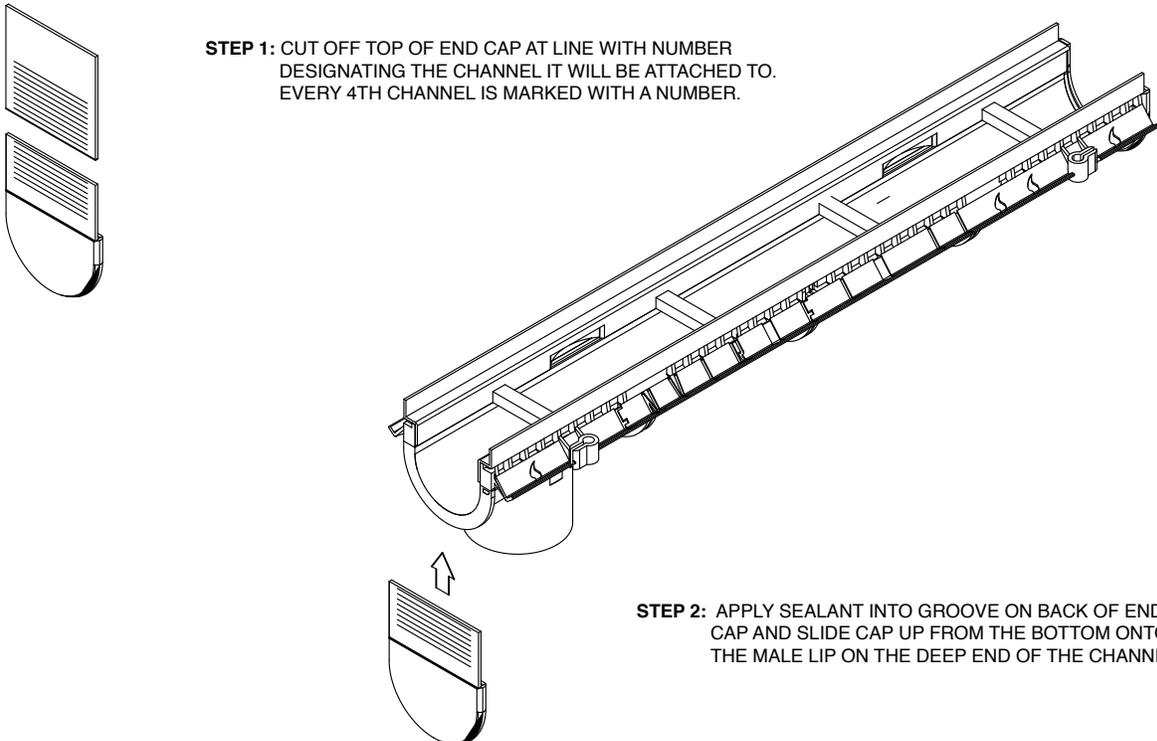

STEP 2: APPLY SEALANT INTO GROOVE ON BACK OF END CAP AND SLIDE CAP UP FROM THE BOTTOM ONTO THE MALE LIP ON THE DEEP END OF THE CHANNEL.