




Acorn-Sinks® Installation Instructions - Undermount Sinks

General:


- ◆ Paper Template for Cutout is provided with Undermount Sink for both 1/8" No Reveal and 1/2" Sink Rim reveal.
- ◆ Installer shall determine appropriate mounting methods to suit Countertop material and site conditions.
- ◆ Acorn recommends Countertop fabricator precut Sink cutout and holes for Optional Mounting Brackets (If required).
- ◆ Inspect Sink for damage prior to installation. Caution is advised when handling Sink as edges may be sharp.
- ◆ Acorn Engineering Co.® is not responsible for damage to Sink or Countertop which may occur during installation .

Installation Profiles (Shown with Optional Mounting Bracket)

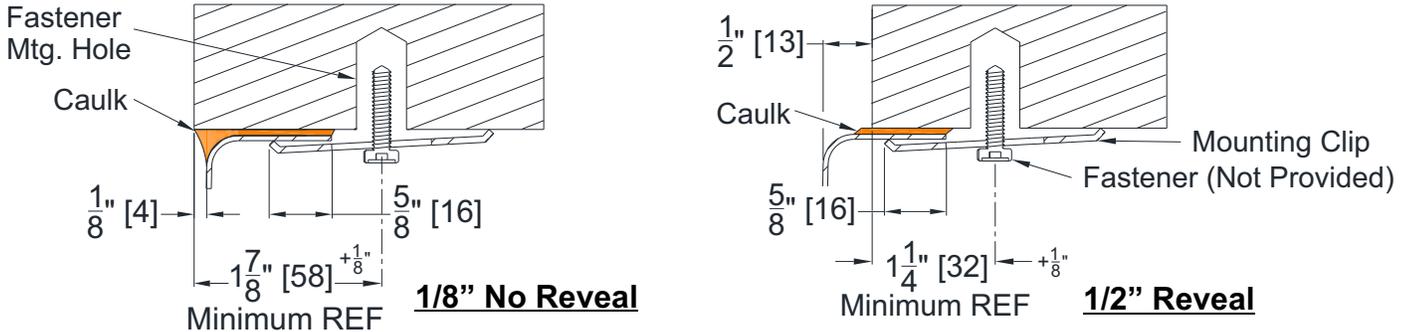


Installation Steps for Optional Mounting Brackets


1. Prepare the Mounting Brackets by loosely placing into the Countertop at pre-drilled mounting holes; Figure [A]. (Detail is not to scale)

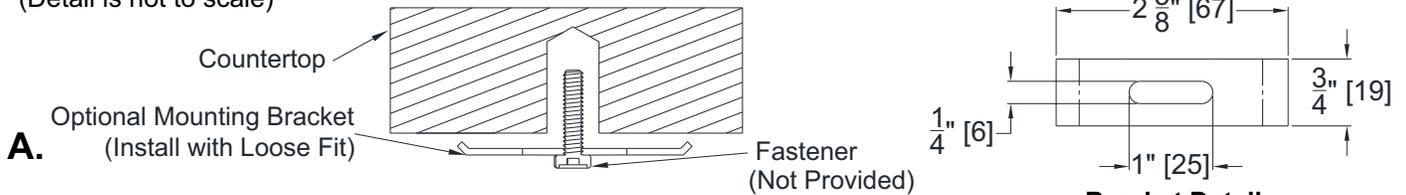

2. Apply Silicone Caulk (not included) evenly around the top flange of the Sink; Figure [B].
3. Align the Sink into position under the Countertop cutout opening; [C]. Press Sink up against the Countertop; [D].

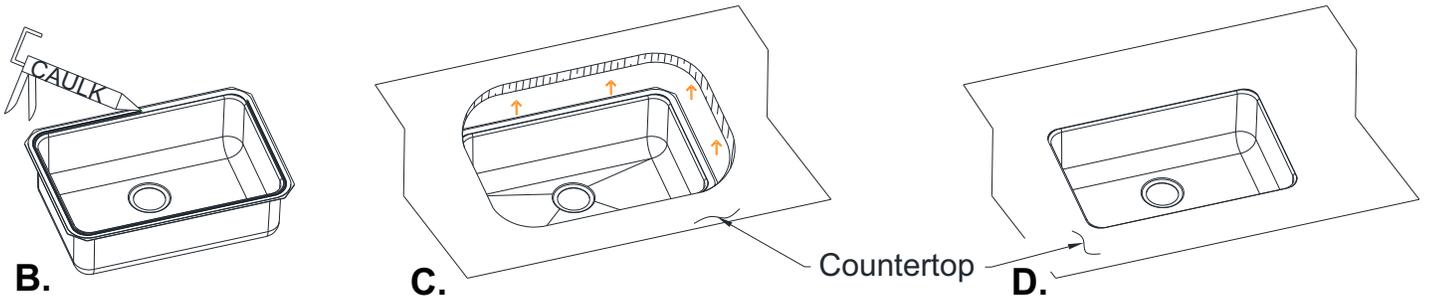

4. From Underside: Orient Brackets and tighten Fasteners until Brackets are only snug against the Countertop [E]. From Above: Check Sink position within Cutout and adjust for correct "reveal". Tighten Fasteners to complete install. **NOTE: USE CAUTION NOT TO OVERTIGHTEN.** Wipe away any excess Caulk.

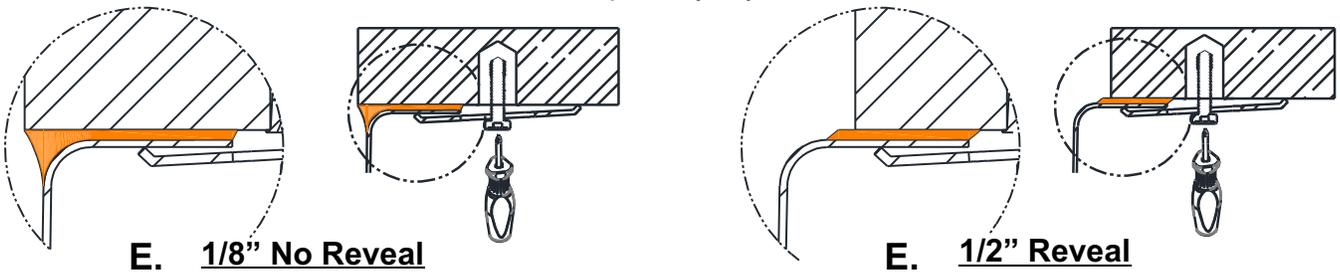

Verify all applicable Plumbing Code requirements prior to installation. Mounting Faucet to Sink prior to installation may reduce time and labor.
 Note: For ADA Sink models: Compliance is subject to the interpretation and requirements of the Local Code Authority.

TECHNICAL ASSISTANCE TOLL FREE TELEPHONE NUMBER: 1-800-743-8259