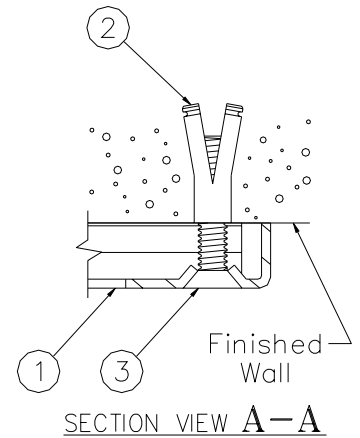
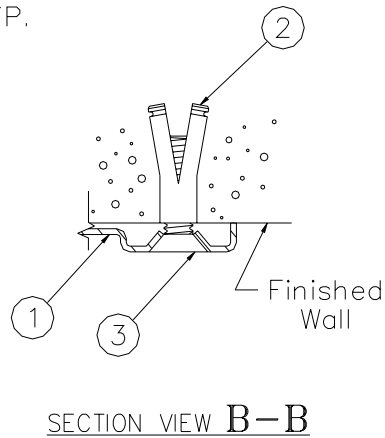
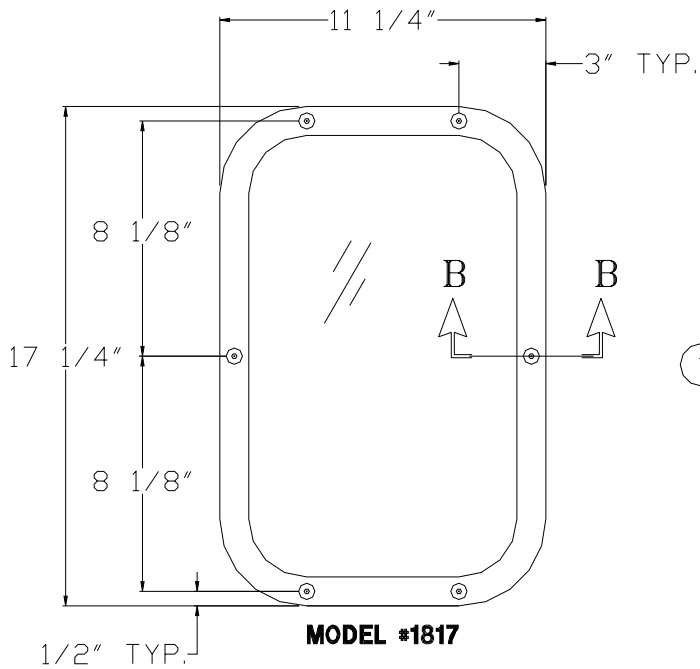
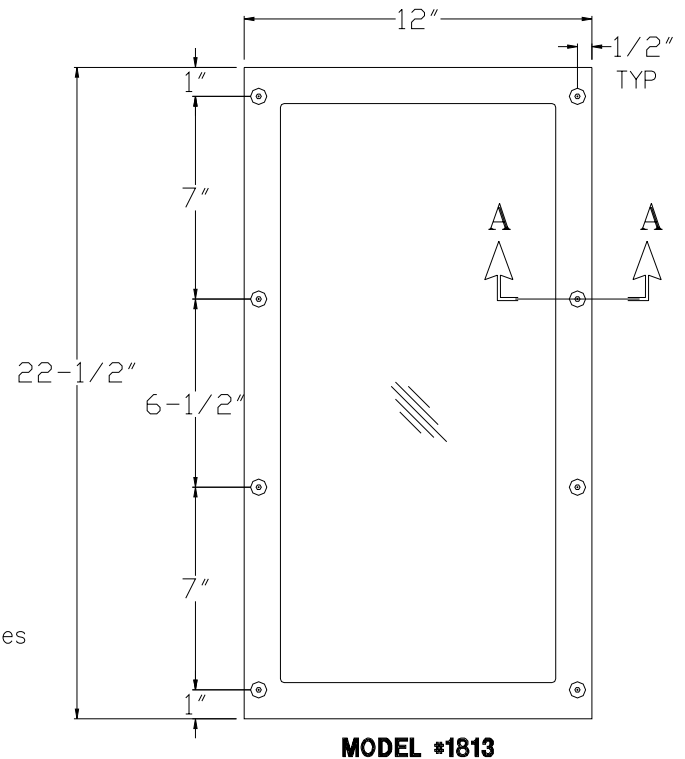
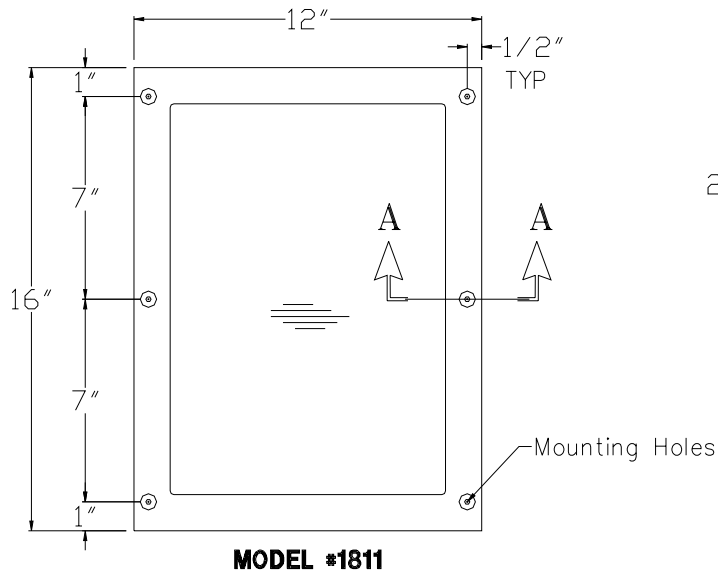


**REFERENCE DRAWING**

Fasteners	9951-005-001
-----------	--------------

**INSTALLATION INSTRUCTIONS:**

A—USE PUNCHED MOUNTING HOLES ON MIRROR ① AS A TEMPLATE FOR MARKING THE LOCATIONS FOR THE WALL ANCHORS ② (BY OTHERS) ON THE WALL.

B—INSTALL WALL ANCHORS ② (BY OTHERS).

C—FASTEN MIRROR ① TO WALL USING SCREWS ③ PROVIDED.



ACORN ENGINEERING COMPANY
P.O. BOX 3527 INDUSTRY, CA. 91744
(626) 336-4561 FAX (626) 961-2200

TITLE

FRONT MOUNTED SECURITY MIRRORS CAT #1811, #1813 & #1817

MANUFACTURE DATE

DECEMBER 1971
TO PRESENT

DATE ISSUED

4/8/97

DATE REVISED

DRAWING NUMBER

9925-133-001