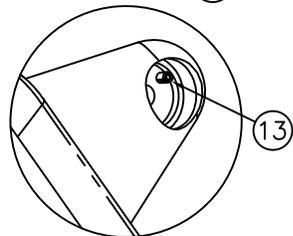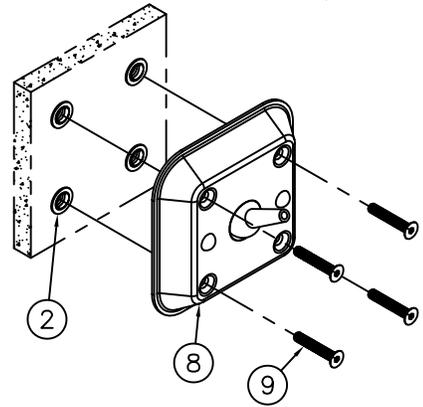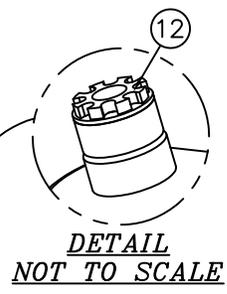RISER BY OTHERS
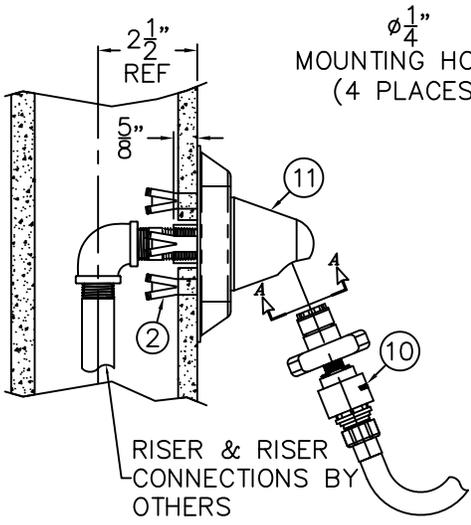
NOTE:
USE OF TEFLON TAPE ON ALL THREADED CONNECTIONS IS RECOMMENDED

DETAIL
NOT TO SCALE

DETAIL A–A
NOT TO SCALE

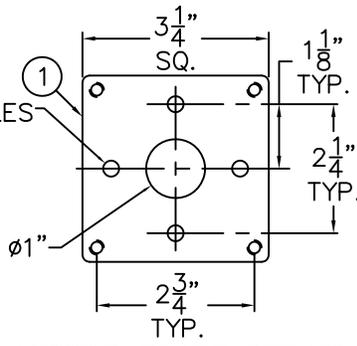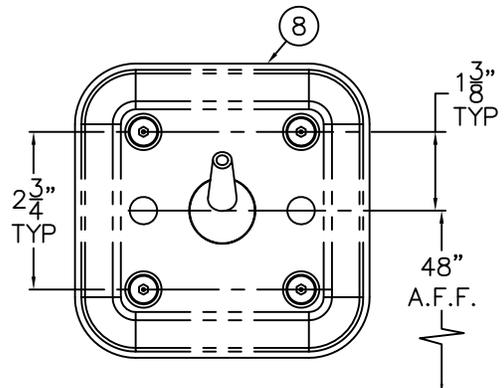$2\frac{1}{2}$" REF

$\frac{5}{8}$"

RISER & RISER CONNECTIONS BY OTHERS

$3\frac{1}{4}$" SQ.

$\varnothing\frac{1}{4}$" MOUNTING HOLES (4 PLACES)

$1\frac{1}{8}$" TYP.

$2\frac{1}{4}$" TYP.

$\varnothing 1$"

$2\frac{3}{4}$" TYP.

ANCHOR PLATE DETAIL
SCALED x 1-1/2

$2\frac{3}{4}$" TYP

$1\frac{3}{8}$" TYP

48" A.F.F.

HANDHELD SHOWER HANGER
MOUNTING DETAIL SCALED x 1-1/2

REFER TO ADA GUIDELINES OR LOCAL CODE AUTHORITY FOR COMPLETE INSTALLATION REQUIREMENTS FOR YOUR COMPARTMENT.

COMPLIANCE IS SUBJECT TO THE INTERPRETATION AND REQUIREMENTS OF THE LOCAL CODE AUTHORITY.

INSTALLATION INSTRUCTIONS:

A— PRIOR TO MAKING UP CONNECTIONS TO VALVE ASSEMBLY, FLUSH SUPPLY LINES THOROUGHLY.

B— USING ANCHOR PLATE ① AS A TEMPLATE, LOCATE AND MARK MOUNTING POINTS TO INSTALL WALL ANCHOR ② BY OTHERS FOR 1/4"–20 x 1-1/4" LONGS SCREWS ③ PROVIDED.

C— SECURE ANCHORING PLATE ① TO WALL USING SCREWS ③ PROVIDED.

D— MAKE UP SHOWER RISER CONNECTION FROM VALVE TO 1/2" NPT SHOWER ADAPTER ④.

E— INSTALL AND SECURE SHOWERHEAD ⑤ ONTO WALL ANCHORING PLATE ① USING SCREWS ⑥ AND SET SCREW ⑦ PROVIDED.

F— USE THE HANDHELD SHOWER HANGER BRACKET ⑧ TO MARK LOCATIONS FOR INSTALLER PROVIDED WALL ANCHORS ② FOR PROVIDED 1/4"–20 UNC x 1-1/2" LONG SCREWS ⑨.

G— SECURE HANDHELD SHOWER HANGER BRACKET ⑧ WITH PROVIDED 1/4"–20 UNC x 1-1/2" LONG SCREWS ⑨.

H— INSERT HANDHELD SHOWER EXPANSION PLUG ⑩ INTO SHOWERHEAD ⑪ ENSURING THE ANTI–ROTATION SLOT ⑫ LINES UP WITH ANTI–ROTATION PIN ⑬ AND TURN KNOB ⑭ CLOCKWISE UNTIL HAND TIGHT, IF LEAKING TIGHTEN FURTHER.

I— TURN KNOB ⑭ COUNTER–CLOCKWISE TO LOOSEN AND REMOVE HANDHELD SHOWER EXPANSION PLUG ⑩

TITLE
WHCHS LIGATURE RESISTANT CONICAL HANDHELD SHOWER

MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
APRIL 2019 **TO PRESENT**	**04/20/19** DATE REVISED	**9918-043-001**

3/16