


**NOTE:** INSTALLATION SHOWN FOR RIGHT LOW CONFIGURATION. REVERSE FOR LEFT LOW CONFIGURATION.

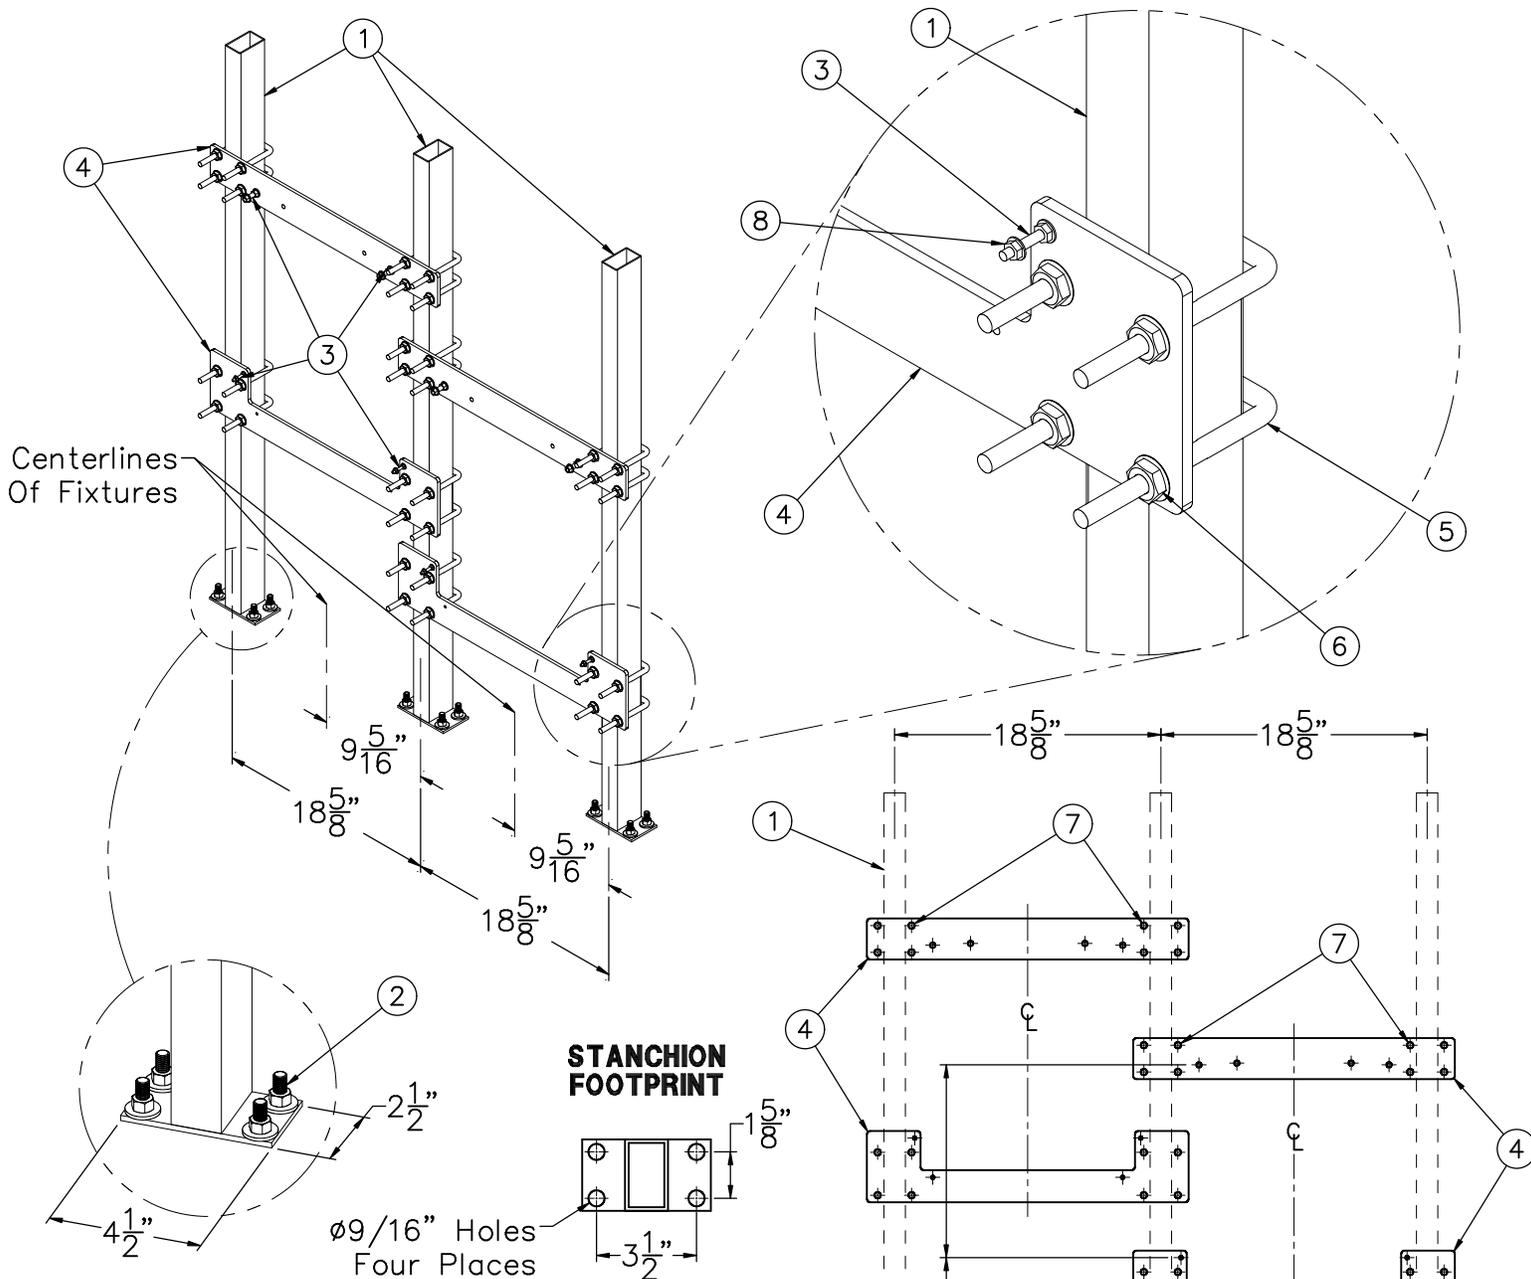

**INSTALLATION INSTRUCTIONS:**

- A- ANCHOR STANCHIONS (1) TO FLOOR AT SPACING SHOWN USING HARDWARE (2) BY OTHERS THROUGH 9/16" DIAMETER HOLES IN FLOOR FLANGE AS SHOWN IN STANCHION FOOTPRINT.
- B- SECURE STUDS (3) THROUGH APPROPRIATE HOLES ONTO ALL MOUNTING PLATES (4). TWO SMALL STUDS ON LOWER PLATES. TWO LARGER STUDS ON THE UPPER PLATES. USE NUTS AND WASHERS (8) ON FRONT AND BACK OF PLATE WITH STUDS PROTRUDING 1/2" MAXIMUM BEYOND FINISHED WALL FACE.
- C- ASSEMBLE ALL PLATES (4) AT APPROPRIATE HEIGHTS TO STANCHIONS (1) USING SUPPLIED U-BOLTS (5) AND NUTS AND WASHERS (6) THROUGH 1/2" DIAMETER HOLES (7). U-BOLTS MAY NEED TO BE TRIMMED DEPENDING ON DEPTH OF FINISHED WALL MATERIAL.

DIMENSIONS VARY BY FIXTURE. REFER TO FIXTURE ROUGH-INS.

- D- MAKE APPROPRIATE SUPPLY AND WASTE ROUGH-INS.
- E- COMPLETE INSTALLATION OF FINISHED WALL LEAVING STUDS (3) PROTRUDING AND ROUGH-INS ACCESSIBLE.
- F- SECURE MOUNTING BRACKETS PROVIDED WITH COOLER TO THE UPPER STUDS (3) WITH NUTS & WASHERS (8). COMPLETE INSTALLATION REFERENCING THE FIXTURE INSTRUCTIONS.