


MOUNTING DETAIL

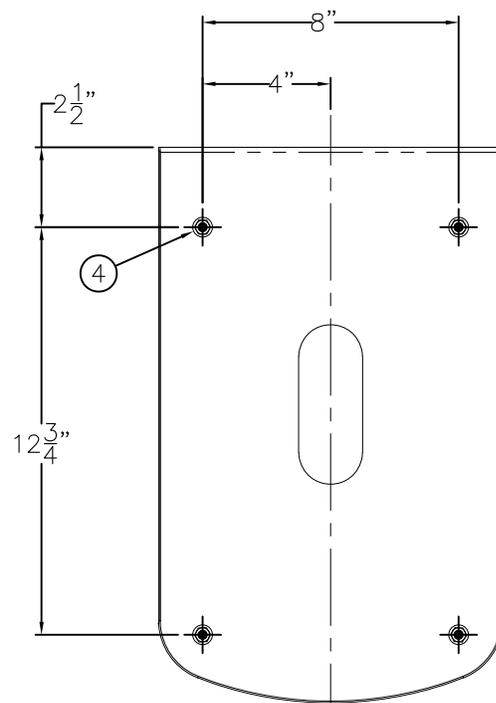

INSTALLATION INSTRUCTIONS:

- A- REMOVE BASIN (1) FROM DRINKING FOUNTAIN (2) ASSEMBLY BY REMOVING THE CENTER DRAIN SCREW (3). DISCONNECT BUBBLER (4) FROM BASIN SETTING ASIDE SAFEGUARDING PARTS TO PREVENT LOSS OR DAMAGE.
- B- DRILL 5/16" THROUGH HOLES ON DRINKING FOUNTAIN (2) BOTTOM AS INDICATED (4).
- C- REMOVE BOTTOM ACCESS PANEL (5) FROM CANE DETECTION SKIRT (6) AND BOLT TO DRINKING FOUNTAIN (2) THROUGH BOTTOM OPENING USING 1/4-20 UNC SCREWS, & HARDWARE PROVIDED.
- D- RECONNECT BUBBLER (4) AND ASSEMBLE BASIN (1) TO DRINKING FOUNTAIN (2).

 P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave., City of Industry, CA 91746 (800) 453-7465 (626) 333-2543 www.murdockmfg.com	TITLE -SK3-18 A152 SERIES 18 GAUGE STAINLESS STEEL CONTOUR SKIRT		
	MANUFACTURE DATE JANUARY 2006 TO PRESENT	DATE ISSUED 05/18/22	DRAWING NUMBER 9938-015-002
		DATE REVISED	