


**REFERENCE DRAWING**

TANK INSTALLATION 9935-011-001

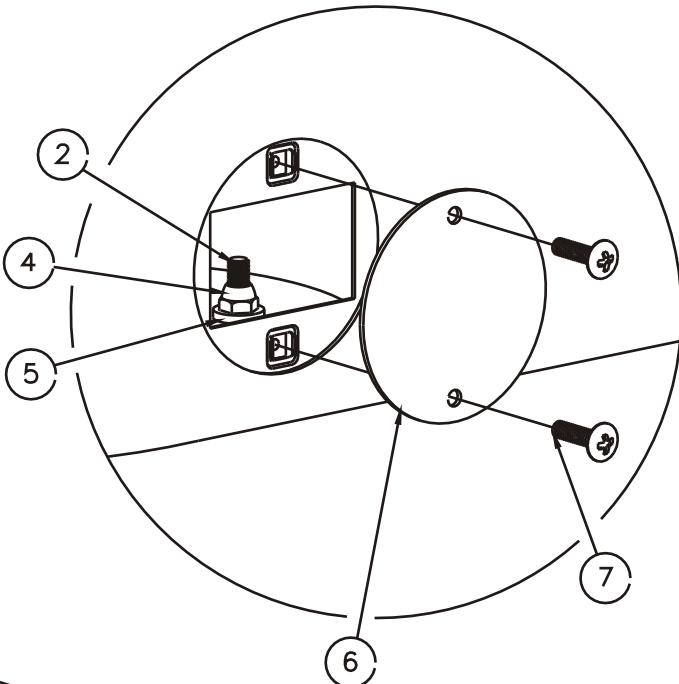

**INSTALLATION INSTRUCTIONS**

**INSTALLING TOILET BOWL TO CLOSET FLANGE:**

NOTE: Installation of toilet waste connection is comparable to china units.

- A- Center line of closet flange waste connection (1) should be 12" from finished wall and flush with finished floor.
- B- Clean any construction debris out of floor flange, then install the mounting bolts (2) into the side slots of floor flange.
- C- Place wax ring (3) centered on top of floor flange (1), pressing firmly into place.

D- Remove access plates (6) from toilet housing both sides, exposing mounting holes for toilet. Lift toilet bowl and set onto wax ring (3), making sure the mounting bolts (2) go thru mounting holes in base of toilet housing. apply pressure evenly all around toilet bowl to insure proper seal.

E- Assure toilet is perpendicular to wall, adjust if necessary. Install nuts (4) and washers (5), tighten firmly and replace access plate (6) with mounting screws (7).

F- For further instructions see drawing number 9935-011-001.