



**-T TOP SUPPLY  
VIEW IS FROM REAR OF FIXTURE**

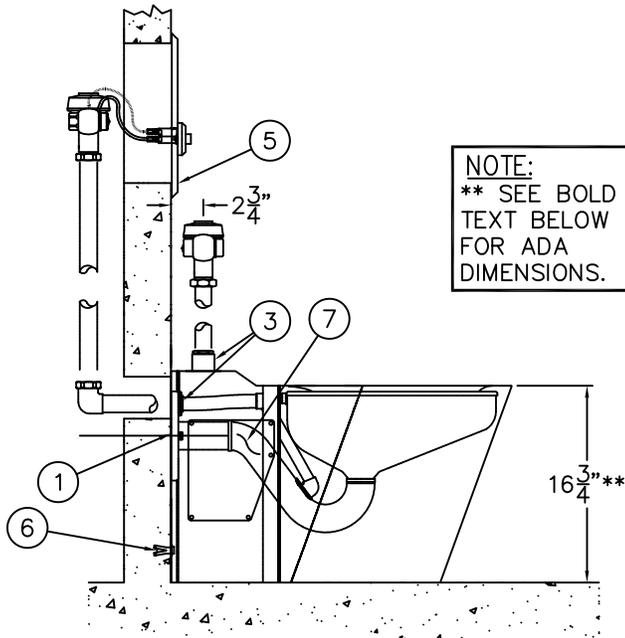

**NOTE:**  
\*\* SEE BOLD  
TEXT BELOW  
FOR ADA  
DIMENSIONS.

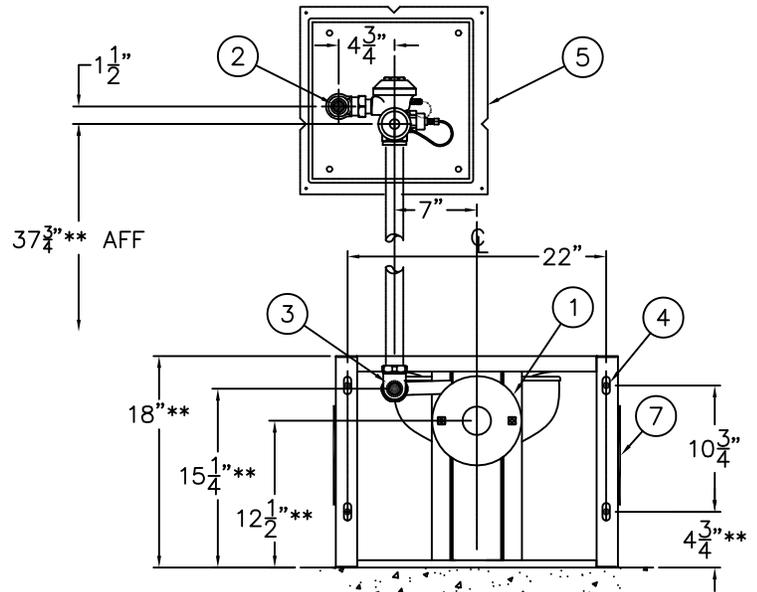

**-W-FVR WALL SUPPLY, FLUSH VALVE RIGHT SHOWN  
-W-FVL WALL SUPPLY, FLUSH VALVE LEFT OPPOSITE  
VIEW IS FROM REAR OF FIXTURE**

**INSTALLATION INSTRUCTIONS:**

- A-ROUGH-IN FOR THE FOLLOWING:
- 7-1/2" RECESSED GASKET FLANGE (1).
  - FLUSH VALVE INLET 1" NPT (2).
  - FIXTURE FLUSHING INLET 1-1/2" NPT (3).
  - WALL & FLOOR ANCHORS AT LOCATIONS INDICATED (4). WALL & FLOOR ANCHORS BY OTHERS.
- B- FOR DURA-WARE FLUSH VALVE ACCESS PANELS (5), FOR CONCEALED FLUSH VALVE INSTALLATION REFER TO DRAWING #9908-399-001.
- C- LOCATE AND PROVIDE ANCHORING POINTS (4) AS INDICATED TO REINFORCED WALL. WALL ANCHORING HARDWARE (6) ARE BY OTHERS.


- D- REMOVE ACCESS COVERS (7). POSITION FIXTURE ON FLOOR ALIGNING MOUNTING LOCATIONS. MAKE UP WASTE CONNECTION AND FIX TO WALL AND TIGHTEN TO 60FT/LBS USING NUTS, WASHERS AND BOLTS BY OTHERS.

- E- FLUSH SUPPLY LINE BEFORE MAKING SUPPLY CONNECTION (3). MOUNT FLUSH VALVE PER MANUFACTURER'S RECOMMENDATIONS.

**NOTE:** FOR ADA UNITS REFER TO ADA ACCESSIBILITY GUIDELINES FOR COMPLETE INSTALLATION REQUIREMENTS. FLUSH VALVE MUST BE SUPPLIED WITH AN ADA COMPLIANT ACTUATOR. MAXIMUM CONTROL HEIGHT IS 44" ABOVE FINISHED FLOOR.

**ALL VERTICAL DIMENSIONS INDICATED \*\* INCREASE PROPORTIONATELY WITH OPTIONAL -LPFS LESS PUNCHING FOR HINGED SEAT. 16-3/4" FLOOD RIM RIM HEIGHT BECOMES 17" AFF TO MEET ADA.**

<p><b>MORRIS GROUP INTL</b> P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE <b>BLOWOUT JET, FRONT MOUNT, ON-FLOOR WALL OUTLET #2125A-2</b></p>		
	<p>MANUFACTURE DATE</p> <p><b>AUGUST 2008</b></p> <p><b>TO PRESENT</b></p>	<p>DATE ISSUED</p> <p><b>10/09/08</b></p>	<p>DRAWING NUMBER</p> <p><b>9908-410-001</b></p>
	<p>DATE REVISED</p> <p><b>01/25/13</b></p>		

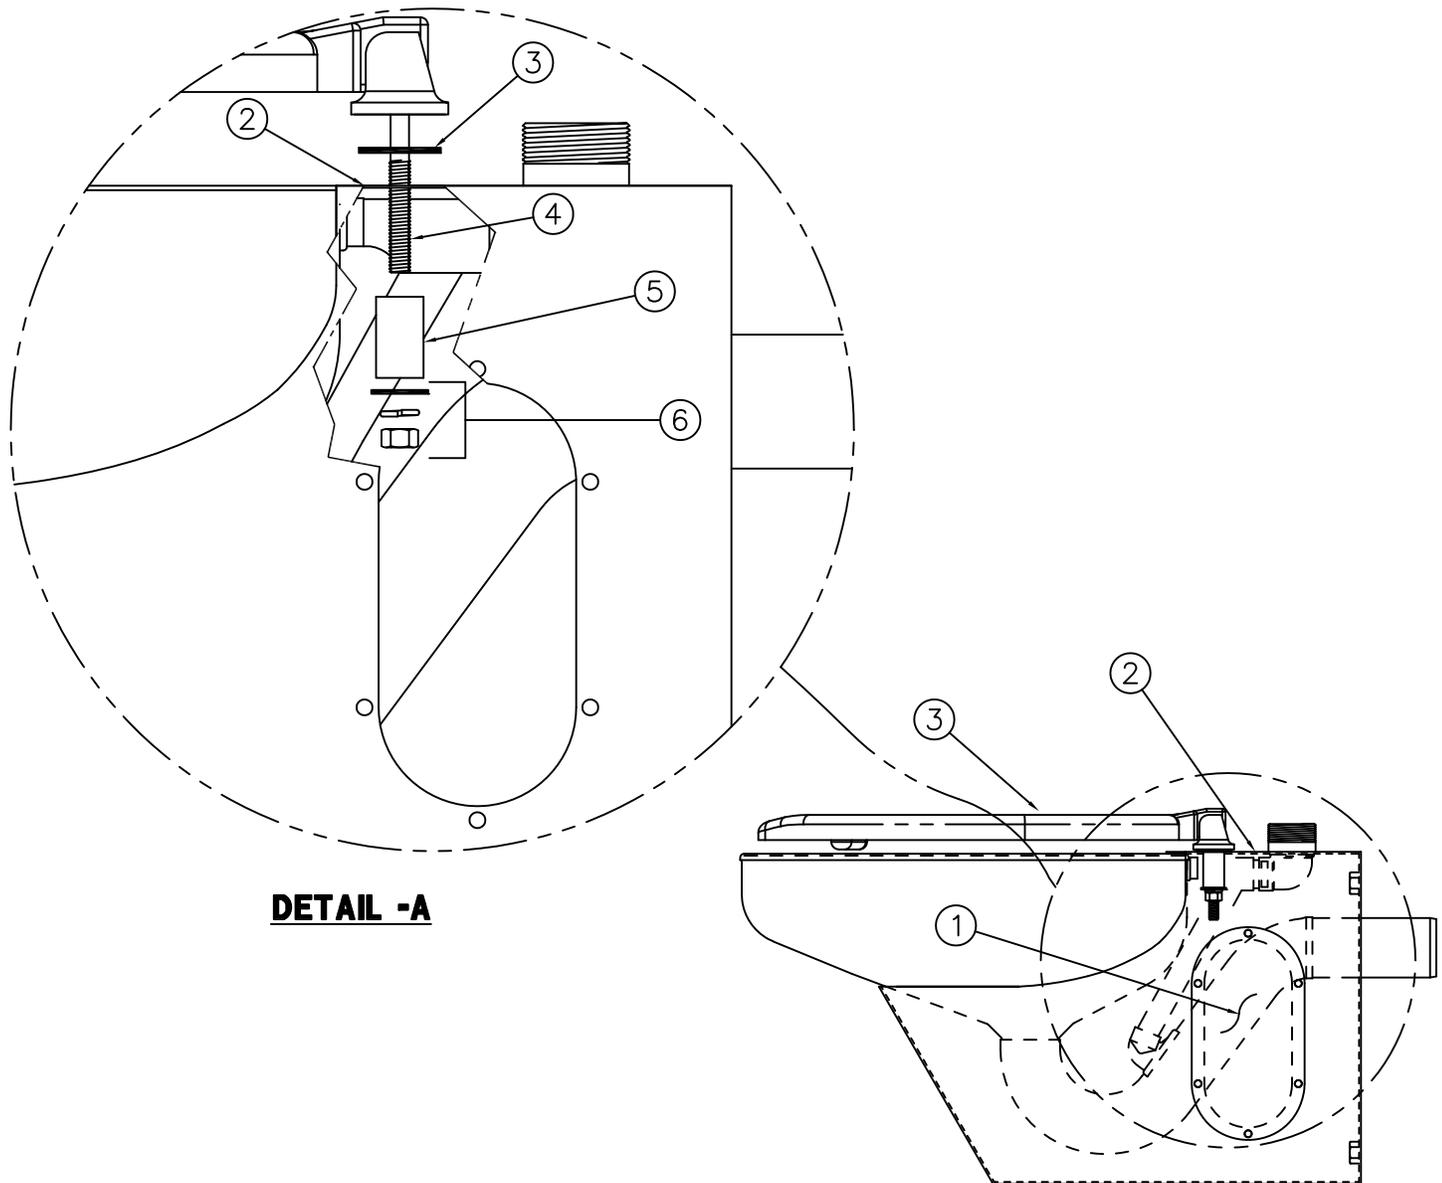

**DETAIL -A**

**INSTALLATION INSTRUCTIONS- HINGED SEAT AFTER MOUNTING FIXTURE TO WALL**

- A- REMOVE ACCESS PANEL (1) FROM BOTH SIDES OF HOUSING (2).
- B- PLACE RUBBER GASKET (3) ONTO SEAT'S THREADED RODS (4).
- C- POSITION SEAT ONTO TOILET HOUSING (2) AND SLIDE SEAT THREADED RODS (4) THROUGH SPACER (5).
- D- ASSEMBLE HARDWARE (6) AS SHOWN IN DETAIL "A".
- E- ENSURE ALL HARDWARE IS TIGHT AND REPLACE ACCESS PANELS (1) TO HOUSING (2).

 <p><b>MORRIS GROUP INTL</b> P.O. BOX 3527 Industry, CA 91744 MORRIS GROUP 15125 Proctor Ave Industry, CA 91746 INTERNATIONAL (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE <b>-HS HINGED SEAT INSTALLATION DETAIL MERIDIAN TOILETS</b></p>	
	<p>MANUFACTURE DATE <b>APRIL 2008</b> <b>TO PRESENT</b></p>	<p>DATE ISSUED <b>04/08/08</b></p> <p>DATE REVISED</p>