


TOP VIEW


FOR -ADA MODELS -FLUSH VALVE MUST BE HYDRAULICALLY ACTUATED OR SUPPLIED WITH A SPECIAL HANDLE. MAX. CONTROL HEIGHT IS 36" ABOVE FINISHED FLOOR. CONTROLS MUST BE LOCATED ON OPEN SIDE OF TOILET.

NOTE: REFER TO A.D.A. ACCESSIBILITY GUIDELINES FOR COMPLETE INSTALLATION REQUIREMENTS.


NOTE: FOR UNITS WITH SUFFIX OPTION -ADA, ALL VERTICAL DIMENSIONS INDICATED * WILL INCREASE PROPORTIONALLY WITH ADA SEAT HEIGHT.

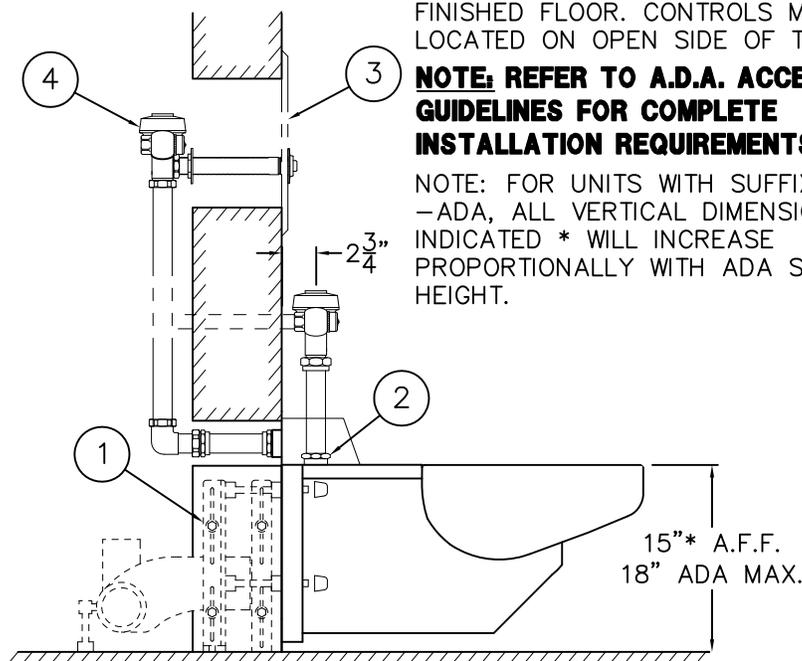

SIDE VIEW

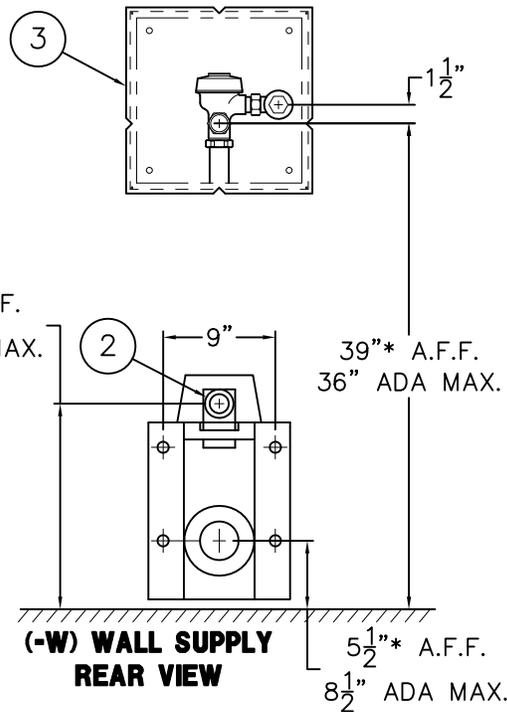

(-W) WALL SUPPLY REAR VIEW

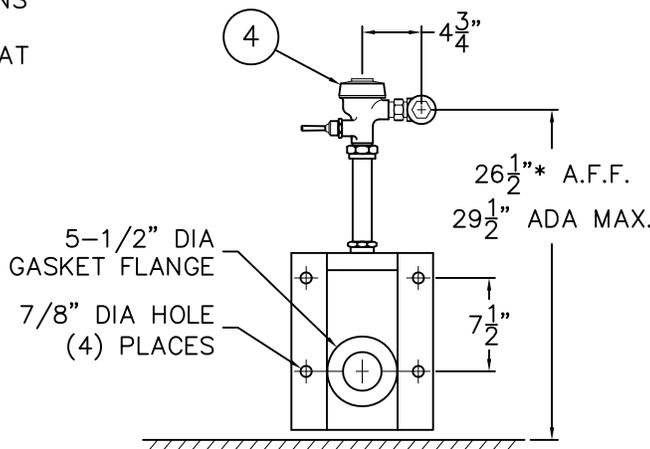

(-T) TOP SUPPLY REAR VIEW

NOTE: 2105BAR BARIATRIC TOILETS ARE RATED AT 1000 LBS ONLY WHEN USED WITH THE OPTIONAL -MC MOUNTING CARRIER OR EQUIVALENT.

NOTE: FOR UNITS WITH -W WALL SUPPLY FLUSH VALVE, ACCESS FOR CONNECTING AND SERVICING FLUSH VALVE IS REQUIRED.

INSTALLATION INSTRUCTIONS:

A-CARRIER AND WASTE FITTINGS (1) BY OTHERS. CARRIERS ARE NORMALLY FURNISHED COMPLETE WITH WASTE CONNECTION, SUPPORTING STUDS AND CAP NUTS. CONTACT THE CARRIER MANUFACTURER OF YOUR CHOICE FOR DETAILS.

B-ROUGH-IN FOR FLUSHING INLET 1-1/2" NPT (2).

C-FOR DURA-WARE FLUSH VALVE ACCESS PANELS (3), FOR CONCEALED FLUSH VALVES INSTALLATION REFER TO DRAWING #9908-399-001.


D-MOUNT FIXTURE TO THE WALL CARRIER. PLACE ON 5/8" STUDS BY OTHERS AND ATTACH WITH CAP NUTS.

E-SUFFIX -FV OPTIONAL FLUSH VALVE. CONNECT FLUSH VALVE (4) PER MANUFACTURER'S RECOMMENDATIONS.




ACORN ENGINEERING COMPANY
P.O. BOX 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
(626) 336-4561 FAX (626) 961-2200


TITLE SIPHON JET TOILET - OFF FLOOR (CAT. 2105BAR)		
MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
AUGUST 2009	01/25/11	9908-394-001
TO PRESENT	DATE REVISED 04/08/13	

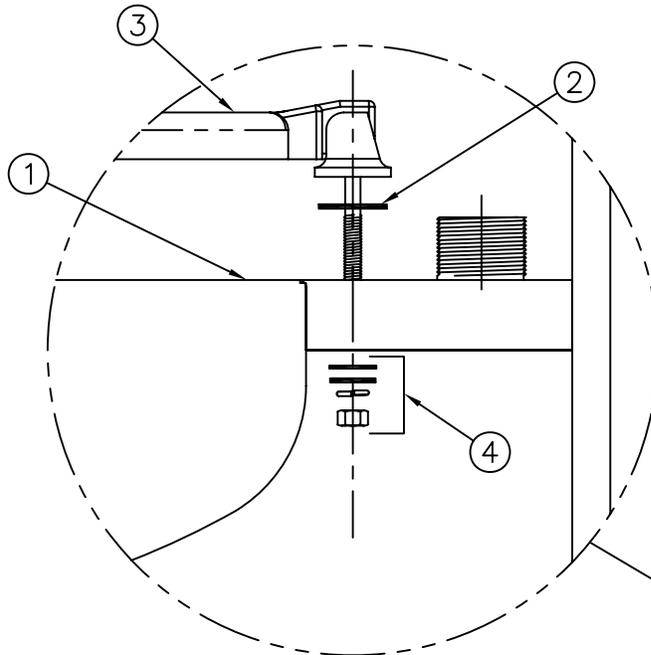

DETAIL "A"

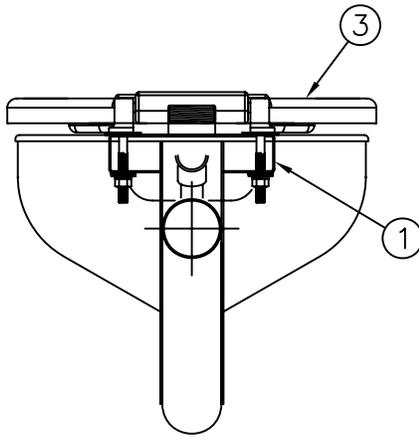

SECTION A-A

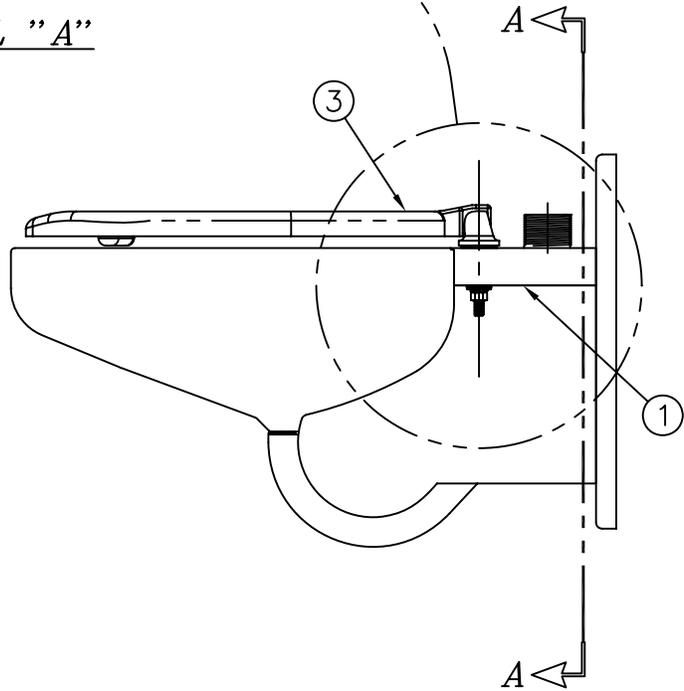


INSTALLATION INSTRUCTIONS-HINGED SEAT AFTER MOUNTING FIXTURE ON WALL:

- A-LOCATE HINGED SEAT MOUNTING HOLES IN FIXTURE ①.
- B-INSERT WASHERS ② BETWEEN TOP OF TOILET AND HINGE SEAT ③.


- C-POSITION HINGED SEAT ③ ON TOP OF UNIT.
- C-ASSEMBLE HARDWARE ④ AS SHOWN IN MOUNTING DETAIL "A".

ACORN ENGINEERING COMPANY
P.O. BOX 3527 INDUSTRY, CA. 91744
(626) 336-4561 FAX (626) 961-2200


TITLE -HS HINGED SEAT OPTION INSTALLATION DETAIL - TOILETS		
MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
APRIL 2008	04/09/08	
TO PRESENT	DATE REVISED	9908-415-001

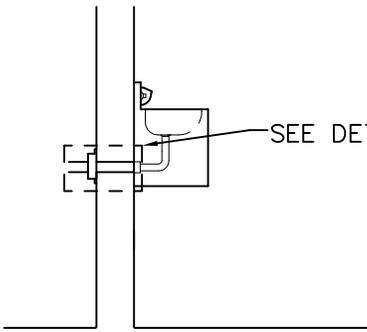


Lavy Waste Connection

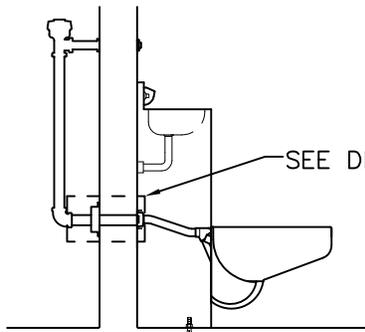

Comby Flushing Inlet Connection

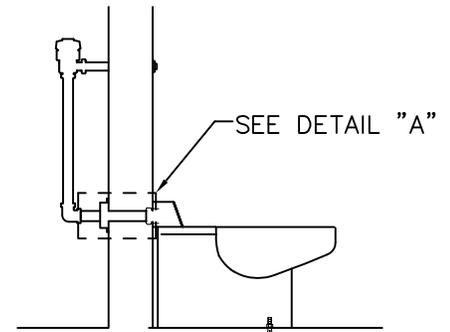

Toilet Flushing Inlet Connection

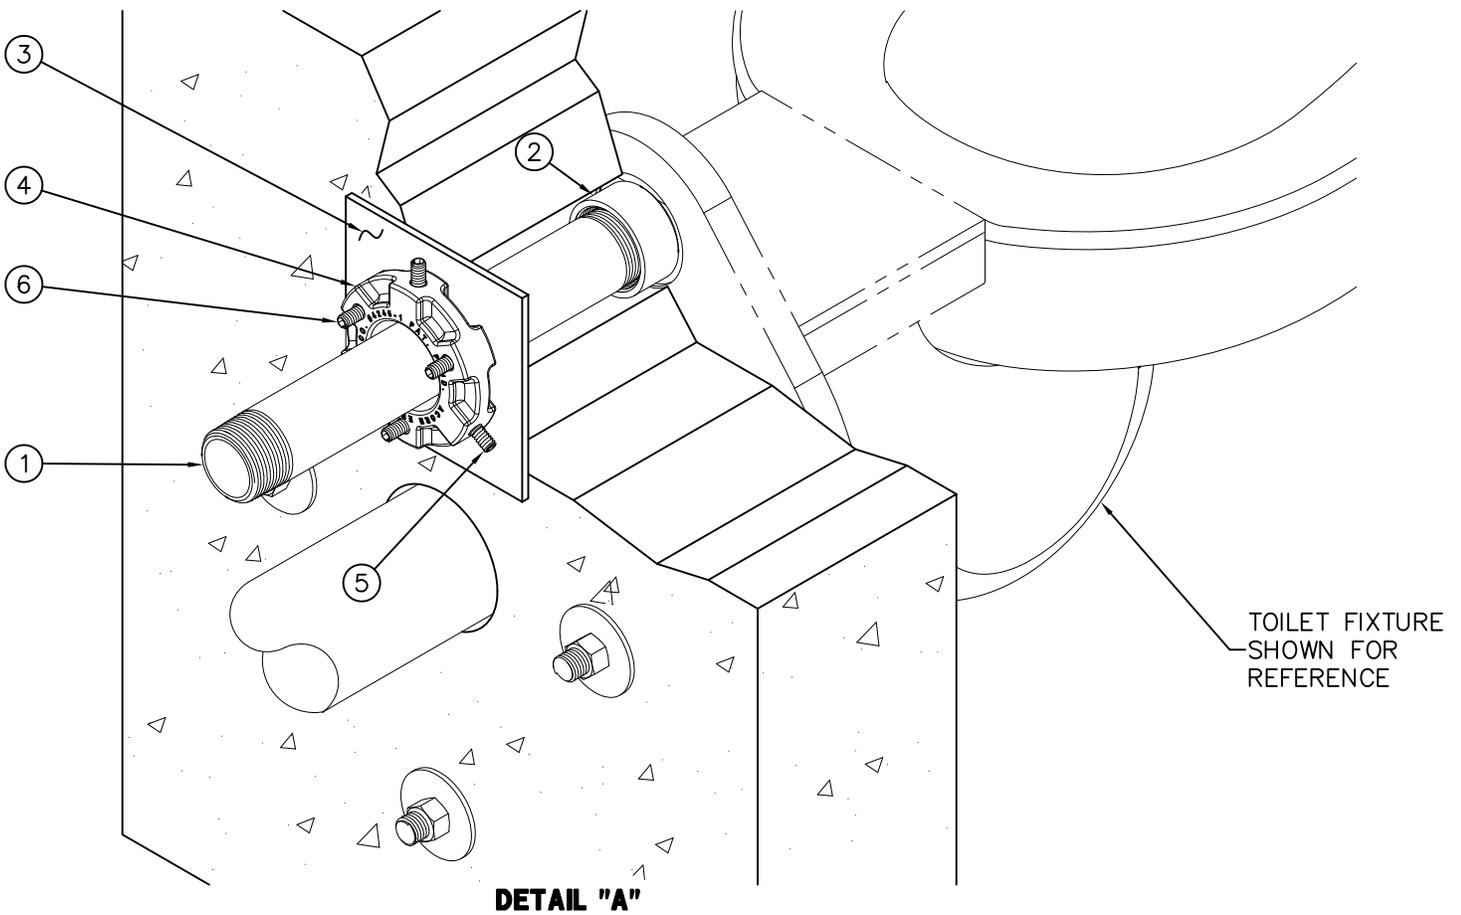

INSTALLATION INSTRUCTIONS:

- A- SECURE PIPE (1) TO FIXTURE CONNECTION (2) THROUGH WALL.
- B- PLACE THRUST PLATE (3) FLUSH AGAINST WALL.
- C- PLACE ANCHORING COLLAR (4) FLUSH AGAINST THRUST PLATE (3).
- D- HOLD UNIT AGAINST WALL, PARALLEL TO THE FLOOR.

- E- TIGHTEN SCREWS (5) (3 PLACES) TO SECURE ANCHORING COLLAR (4) TO PIPE (1).
- F- TIGHTEN SCREWS (6) (3 PLACES) TO PULL PIPE (1) AND PUSH AGAINST THRUST PLATE (3) IN ORDER TO HOLD FIXTURE WITH TENSION AGAINST WALL.



ACORN ENGINEERING COMPANY
 P.O. BOX 3527 Industry, CA 91744
 15125 Proctor Ave Industry, CA 91746
 (626) 336-4561 FAX (626) 961-2200

TITLE **3395 ANCHORING ASSEMBLY**

MANUFACTURE DATE
MAY 1998
TO PRESENT

DATE ISSUED
10/06/99
 DATE REVISED
04/08/11

DRAWING NUMBER
9925-759-001