


ATTACHING A CHANNEL OTHER THAN #20 TO A 9935 OR 9936 CATCH BASIN

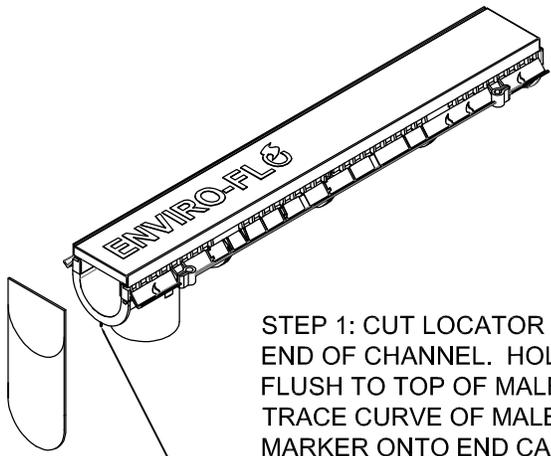


STEP 1: CUT LOCATOR PIN OFF BOTTOM OF MALE END OF CHANNEL. HOLD SHALLOW END CAP FLUSH TO TOP OF MALE END OF CHANNEL. TRACE CURVE OF MALE END OF CHANNEL WITH MARKER ONTO END CAP.

LOCATOR PIN



STEP 2: CUT TOP OF CAP ALONG MARKED LINE AS SHOWN.

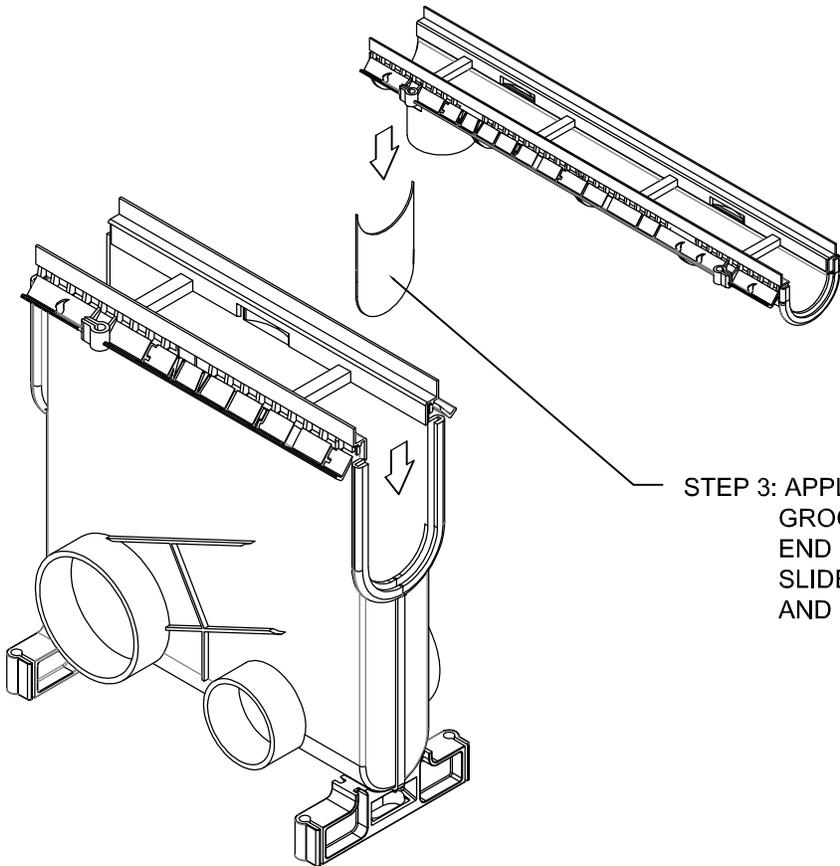

STEP 3: APPLY CHEMCALK 900 SEALANT INTO GROOVE IN CATCH BASIN. SLIDE SHALLOW END CAP INTO CATCH BASIN SLOT, THEN SLIDE TRENCH CHANNEL ON TOP OF END CAP AND SEAL WITH CHEMCALK 900 SEALANT



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov