

INSTALLATION INSTRUCTIONS

A-ROUGH-IN FOR THE FOLLOWING.

- 7-1/2" RECESSED GASKET FLANGE ①
- FLUSH VALVE INLET 1" NPT ②



- -W OR -T FIXTURE FLUSHING INLET 1-1/2" NPT ③

B-FLOOR WASTE CONNECTION COMPARABLE TO CHINA UNITS. THE FLOOR WASTE CLOSET FLANGE (BY OTHERS) CENTERLINE SHOULD BE 12" $\pm 1/8$ " FROM FINISHED WALL AND FLUSH WITH THE FINISHED FLOOR.

C-FLANGE MOUNTING BOLTS ④ (BY OTHERS) MUST BE 1" MAXIMUM ABOVE THE FINISHED FLOOR LEVEL.

D-PRESS FLANGE SEALING GASKET (BY OTHERS) IN PLACE. SET TOILET OVER WASTE FLANGE ENSURING MOUNTING BOLTS ④ GO THRU HOLES IN TOILET BASE FLANGE ①.

E-ENSURE TOILET IS PERPENDICULAR TO WALL. APPLY EVEN PRESSURE ALL AROUND TOILET TO ENSURE PROPER SEAL. ANCHOR BASE TO WASTE FLANGE WITH NUTS ⑤ PROVIDED.

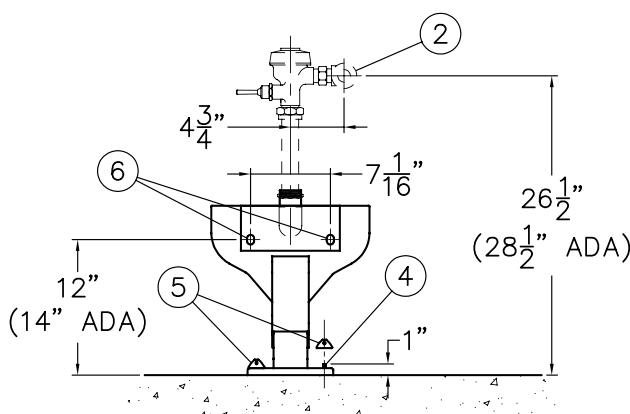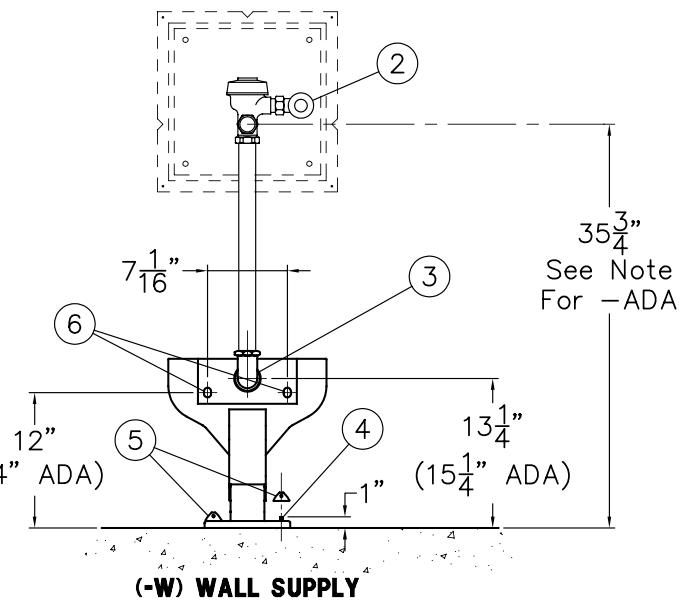

VIEW FROM BACK OF FIXTURE

F-ANCHOR TOILET HOUSING TO THE WALL AT SLOTS ⑥ USING ANCHORS AND FASTENERS BY OTHERS.

G-CONNECT FLUSH VALVE AS REQUIRED FOR CONCEALED -W WALL SUPPLY ⑦ OR EXPOSED -T TOP SUPPLY ⑧ INSTALLATION PER MANUFACTURERS' RECOMMENDATIONS.

NOTES:

FOR SUFFIX OPTION -ADA UNITS, REFER TO ADA ACCESSIBILITY GUIDELINES FOR COMPLETE INSTALLATION REQUIREMENTS.

1-ALL VERTICAL DIMENSIONS CHANGE ACCORDING TO ADDITIONAL SEAT HEIGHT FOR -ADA I.E. FOR 17" INTEGRAL SEAT HEIGHT, -W FLUSHING INLET BECOMES 15-1/4".

2-FLUSH VALVE MUST BE HYDRAULICALLY ACTUATED OR SUPPLIED WITH AN -ADA HANDLE, MAX. CONTROL HEIGHT IS 44" ABOVE FINISHED FLOOR. CONTROLS MUST LOCATED WIDE SIDE TOILET.

NEO-METRO P.O. BOX 3527 * CITY OF INDUSTRY, CA 91744 USA 800-591-9050 * 626-855-4854 * www.neo-metro.com	TITLE METAAL FLOOR OUTLET FLUSH VALVE SUPPLY TOILET - MODEL # 8956-W/T-3
MANUFACTURE DATE OCTOBER 2004 TO PRESENT	DATE ISSUED 03/03/05 DATE REVISED

DRAWING NUMBER
9935-038-001