


MOUNTING DETAIL

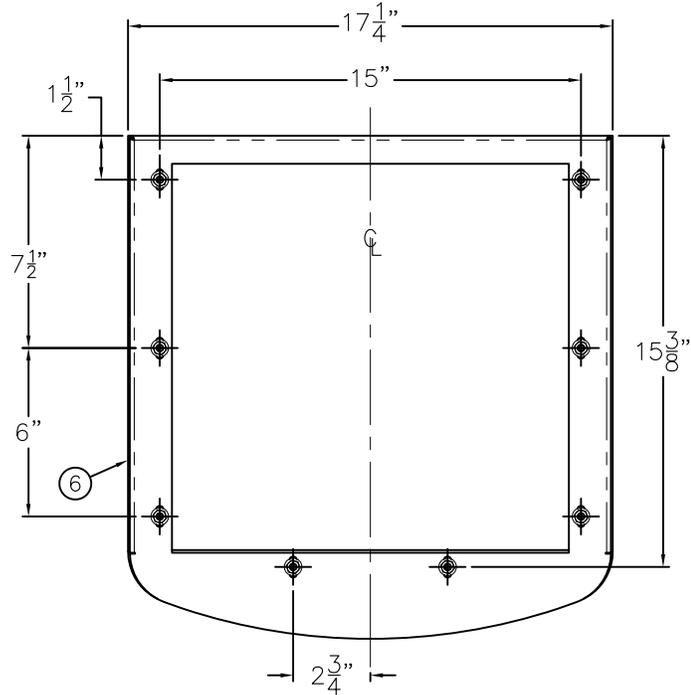

INSTALLATION INSTRUCTIONS:

- A- REMOVE BASIN ① FROM DRINKING FOUNTAIN ② ASSEMBLY BY REMOVING THE CENTER DRAIN SCREW ③. DISCONNECT BUBBLER ④ TUBING FROM BUBBLER SETTING BASIN ASIDE, SAFEGUARDING PARTS TO PREVENT LOSS OR DAMAGE.
- B- DRILL 5/16" THROUGH HOLES ON DRINKING FOUNTAIN ② BOTTOM AS INDICATED ⑥.
- C- REMOVE BOTTOM ACCESS PANEL ⑤ FROM CANE DETECTION SKIRT ⑥ AND BOLT TO DRINKING FOUNTAIN ② THROUGH BOTTOM OPENINGS USING 1/4-20 UNC SCREWS & HARDWARE PROVIDED.
- D- RECONNECT BUBBLER ④ AND ASSEMBLE BASIN ① TO DRINKING FOUNTAIN ②. REPLACE ACCESS PANEL ⑤.



| | | |
|---|-----------------|---------------------|
| TITLE SK11 CANE DETECTION SKIRT FOR A192 SERIES DRINKING FOUNTAINS | | |
| MANUFACTURE DATE | DATE ISSUED | DRAWING NUMBER |
| JUNE 2023 | 06/12/23 | 9938-029-001 |
| TO PRESENT | DATE REVISED | |