

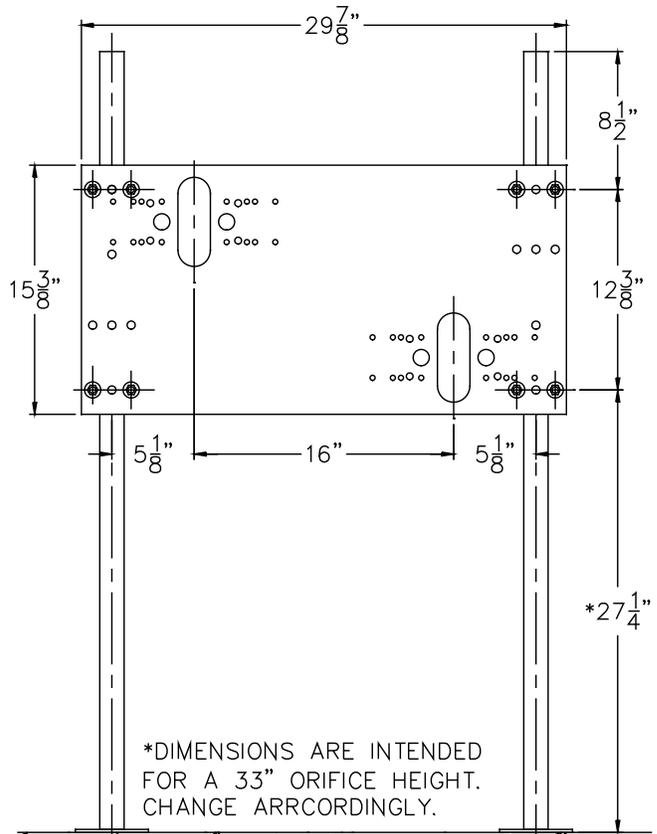


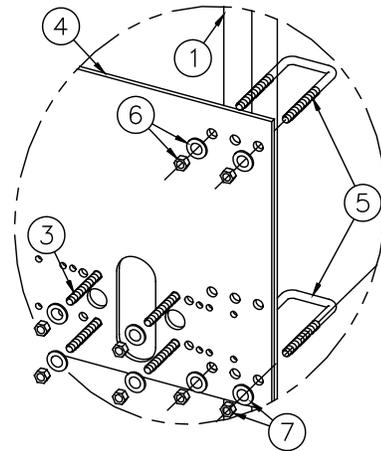

NOTE: WHEN THIS ACORN DRINKING FOUNTAIN INSTALLATION DRAWING IS REVISED, THE CORRESPONDING MURDOCK-SUPER SECUR INSTALLATION DRAWING MUST ALSO BE REVISED. (9938-100-001 = 9938-100-0M1)

INSTALLATION INSTRUCTIONS

ACCESSORIES

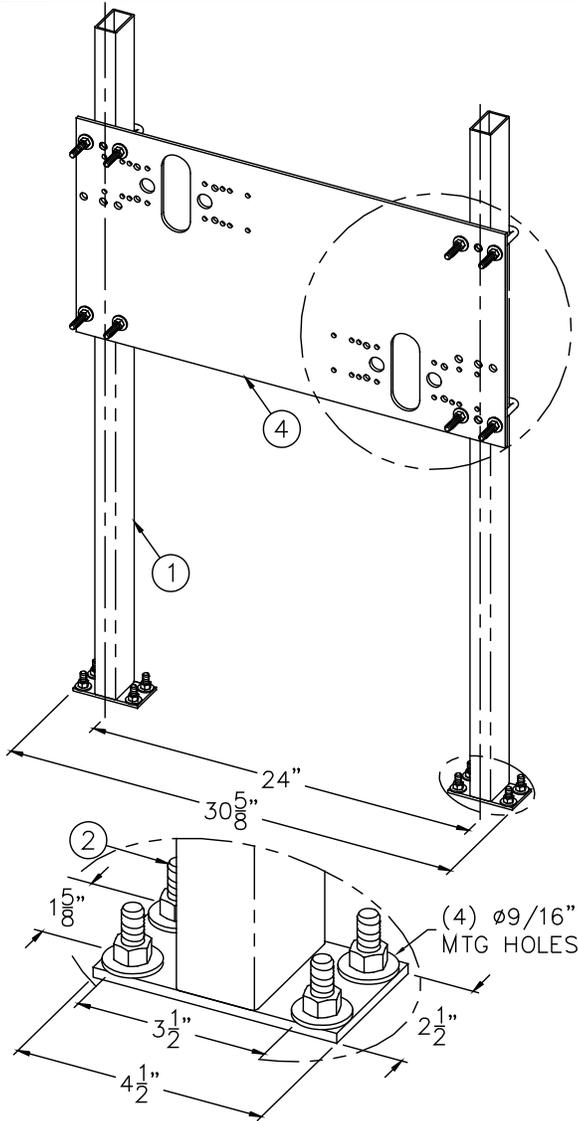

STANCHION FOOTPRINT

INSTALLATION INSTRUCTIONS:

- A- ANCHOR STANCHIONS (1) TO FLOOR AT SPACING SHOWN USING HARDWARE (2) BY OTHERS THROUGH 9/16" DIAMETER HOLES IN FLOOR FLANGE AS SHOWN IN STANCHION FOOTPRINT.
- B- THREAD 5/16" ALL-THREAD STUDS (3) THROUGH MOUNTING PLATE (4) SO THAT MINIMUM 1-1/4" OF STUD WILL PROTRUDE BEYOND FINISHED WALL FACE.
- C- ASSEMBLY PLATE (4) AT APPROPRIATE HEIGHT TO STANCHIONS (1) USING SUPPLIED U-BOLTS (5) AND NUTS AND WASHERS (6) THROUGH 1/2" DIAMETER HOLES. U-BOLTS MAY NEED TO BE TRIMMED DEPENDING ON DEPTH OF FINISHED WALL MATERIAL.

- D- MAKE APPROPRIATE SUPPLY AND WASTE ROUGH-INS THRU THE MOUNTING PLATE (4).
- E- COMPLETE INSTALLATION OF FINISHED WALL LEAVING STUDS (3) PROTRUDING AND ROUGH-INS ACCESSIBLE.
- F- SLIDE FIXTURE OVER STUDS (3) UP AGAINST FINISHED WALL AND SECURE WITH NUTS AND WASHERS (7). COMPLETE THE INSTALLATION REFERENCING THE FIXTURE INSTRUCTIONS.



ACORN ENGINEERING
15125 Proctor Ave Industry, CA 91746
Phone: (800) 591-9360 Fax: (626)855-4894
www.acorndrinkingfountains.com

TITLE OPTIONAL -CSC BI-LEVEL FOUNTAIN CONCEALED SUPPORT CARRIER		
MANUFACTURE DATE MAY 2013 TO PRESENT	DATE ISSUED 05/08/13	DRAWING NUMBER 9938-325-001
	DATE REVISED	