



Sink-Ware™ Installation Instructions Drop-In Sinks

NOTE:



- ◆Verify all applicable Plumbing code requirements prior to installation.
- ◆For ADA Sink Models: ADA Compliance is subject to the interpretation and requirements of Local Code Authority

Tools Recommended:

- ◆Tape Measure
- ◆Contractors Pencil/ Marker
- ◆Jig Saw
- ◆Water Resistant Caulking
- ◆Drill
- ◆Flat Head Screwdriver

Installation

1. Position the sink upside down on the countertop. **[A]**
2. Using a Marking tool trace the edge of the sink. Mark a line $5/16"$ on the **INSIDE** of the outline of the sink **[B]**. Cut corners with $1-1/2"$ Radius. Do not square corners. Your Cut Away area will be slightly smaller than the original sink outline.
3. Drill a Pilot hole on the 4 corners of the **INSIDE** line. Using Jig Saw cut out Cut Away. Place something to prevent the cutaway from falling.

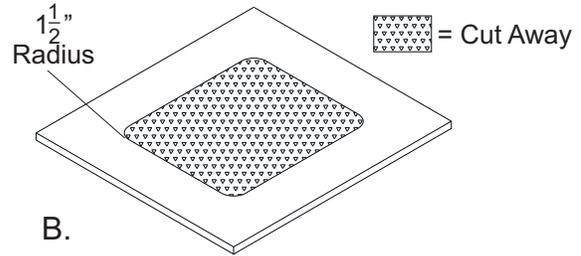
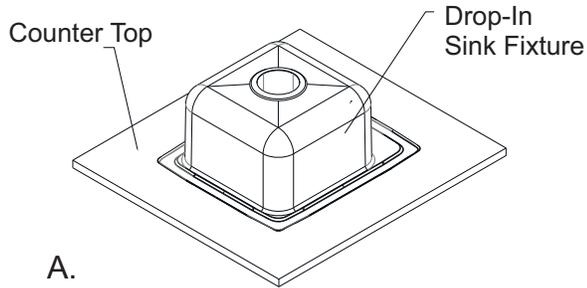


4. Apply Silicone Caulk (by others) to topside of countertop along the cutout **[C]**


5. Carefully lower sink into cutout. **[C1]**

6. Assemble the clips and Screws as shown in figure **[E1]**.

7. From the underside, place a clip in the center along each side and hand tighten to hold sink in place. Fasten the remaining clips along the edge and space them approximately 3" from each end and equally along the front, back, and sides. Refer to Figure **[D]** as reference.

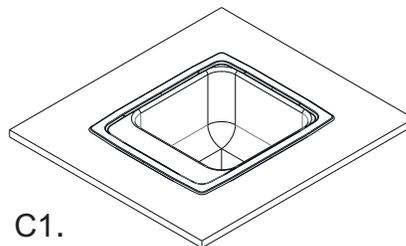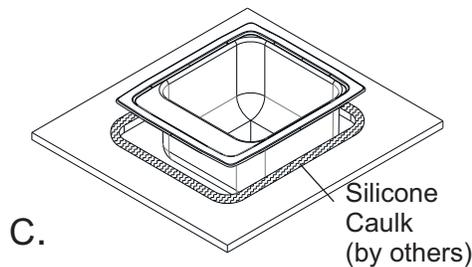


Bottom View

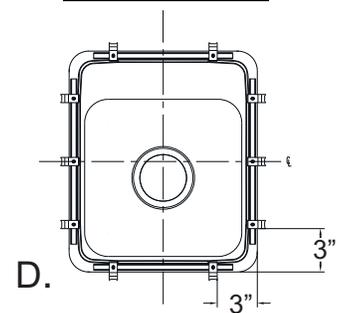

8. Check the Seal Between the Sink edge and countertop. Lightly tighten clips evenly until the sink is tight to the countertop. Do not over tighten. **[E2]**

Wipe any excess Caulk.

Side Section View

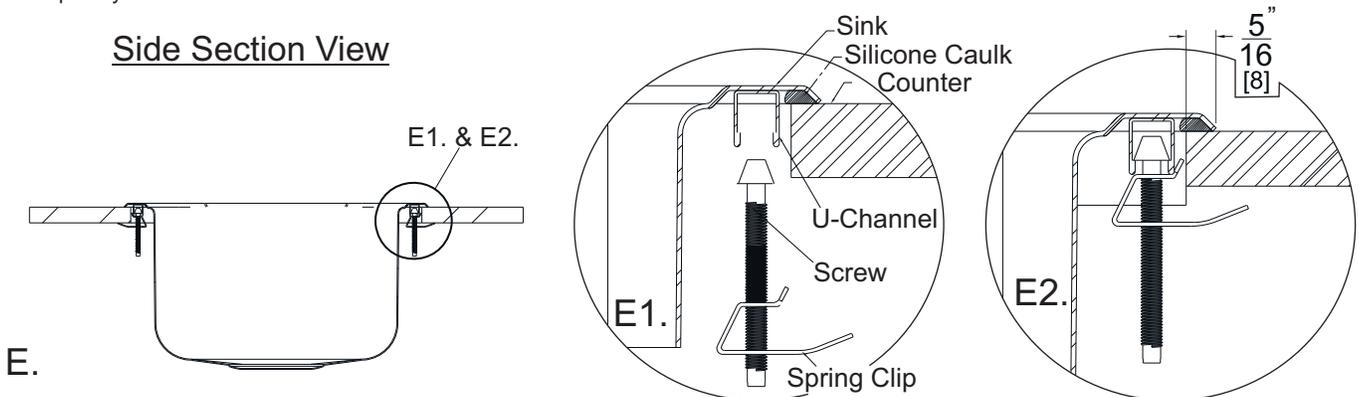

TECHNICAL ASSISTANCE TOLL FREE TELEPHONE NUMBER: 1-800-591-9360

ACORN ENGINEERING COMPANY

P.O. BOX 3527 • CITY OF INDUSTRY, CA 91744 U.S.A.
TOLL FREE 800-743-8259

Drawing # 9000-M00-002 04/20/23