

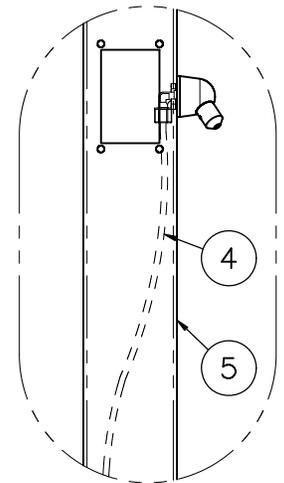


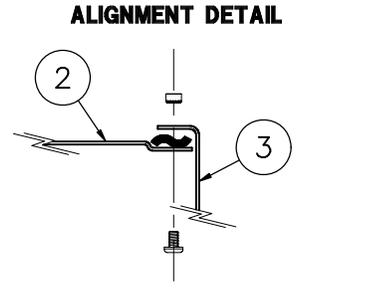

OPTIONAL -TA ANCHOR SPACING	
MODEL No.	A
1730-KD	19-3/4"
1732-KD	21-3/4"
1736-KD	25-1/2"

REFERENCE DRAWINGS	
INSTALLATION	DRAWING
S/T CABINET SHOWER INSTALLATION	9925-111-003
H & C CABINET SHOWER INSTALLATION	9925-112-001
WALL SLEEVE	9925-262-001
CABINET CLOSURE PANEL INST.	9925-119-001
CABINET CLOSURE TYPES	9925-117-001

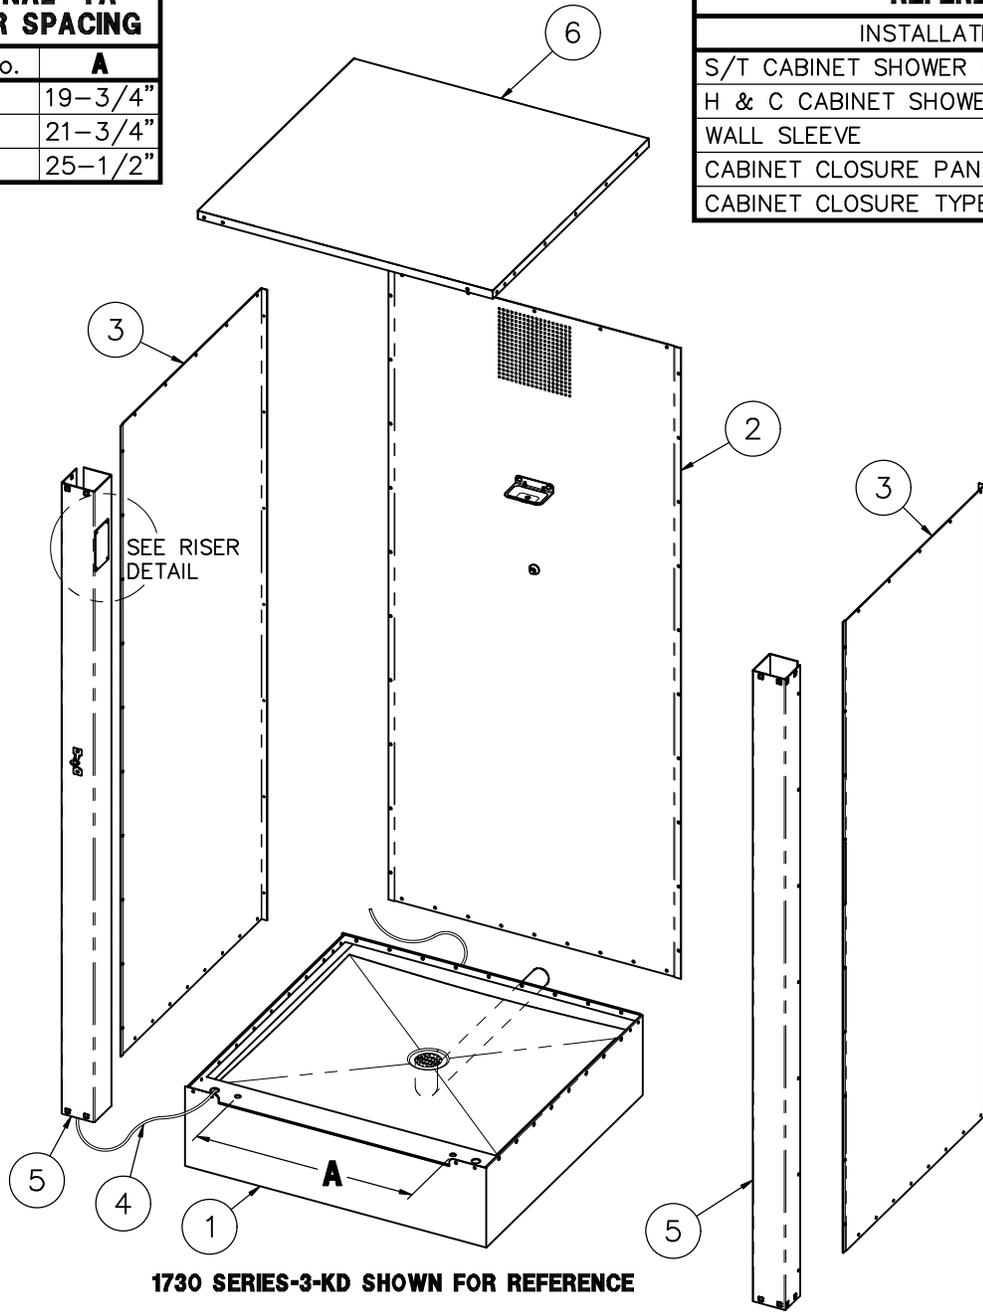

RISER DETAIL
2.5X SCALE
REAR MOUNT FIXTURE RISER ROUTES THROUGH COLUMN TO RECEPTOR AND OUT TO CHASE

INSTALLATION INSTRUCTIONS:

- A- LOCATE RECEPTOR (FLOOR PAN) ① CLOSE TO POINT OF INSTALLATION.
- B- CAULK BACK PANEL ② AND BOLT LOOSELY TO RECEPTOR ①.
- C- CAULK SIDE PANELS ③. BOLT LOOSELY TO RECEPTOR ① AND BACK PANEL ②. SEE ALIGNMENT DETAIL.
- D- THREAD 1/4" OD RISER TUBE ④ THROUGH COLUMN ⑤, RECEPTOR OPENING ① AND OUT CHASE SIDE.

- E- CAULK CORNER POSTS ⑤ & BOLT LOOSELY TO RECEPTOR ① AND SIDE PANELS ③.
- F- CAULK AND SET TOP PANEL ⑥ IN PLACE AND THEN FASTEN TO ASSEMBLY LOOSELY.
- G- PLUMB FIXTURE AND TIGHTEN ALL SCREWS AND BOLTS.
- H- SEE APPROPRIATE DRAWINGS FOR OTHER OPTIONS AND VALVE INSTALLATION.

ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200	TITLE KD KNOCK-DOWN CABINET SHOWERS, #1730-KD, #1732-KD, #1736-KD	
	MANUFACTURE DATE APRIL 1972 TO PRESENT	DATE ISSUED 03/01/90 DATE REVISED 03/15/10