

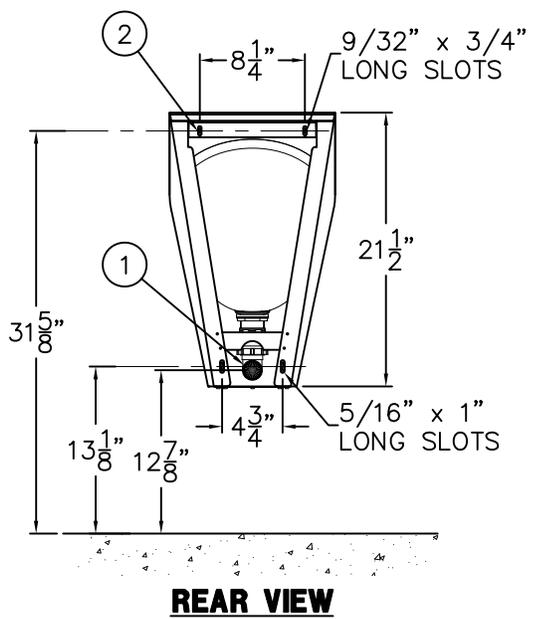
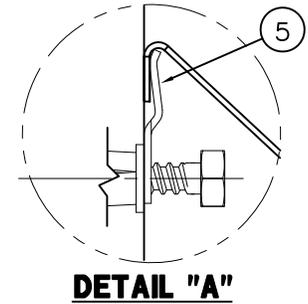


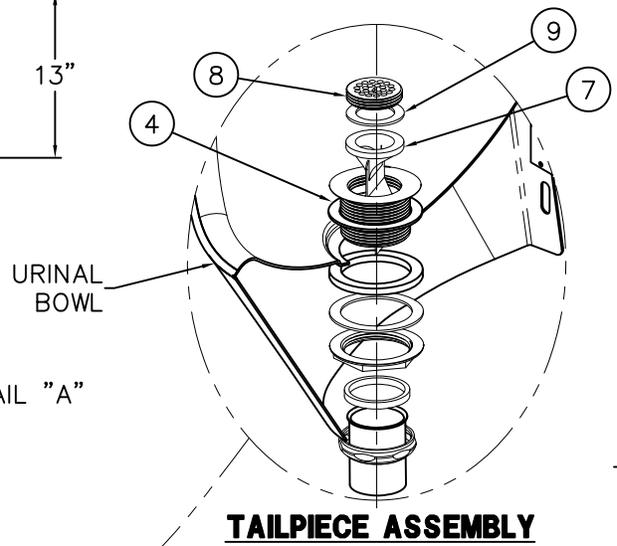

REFERENCE DRAWING	
TAILPIECE ASSEMBLY	9985-101-W01

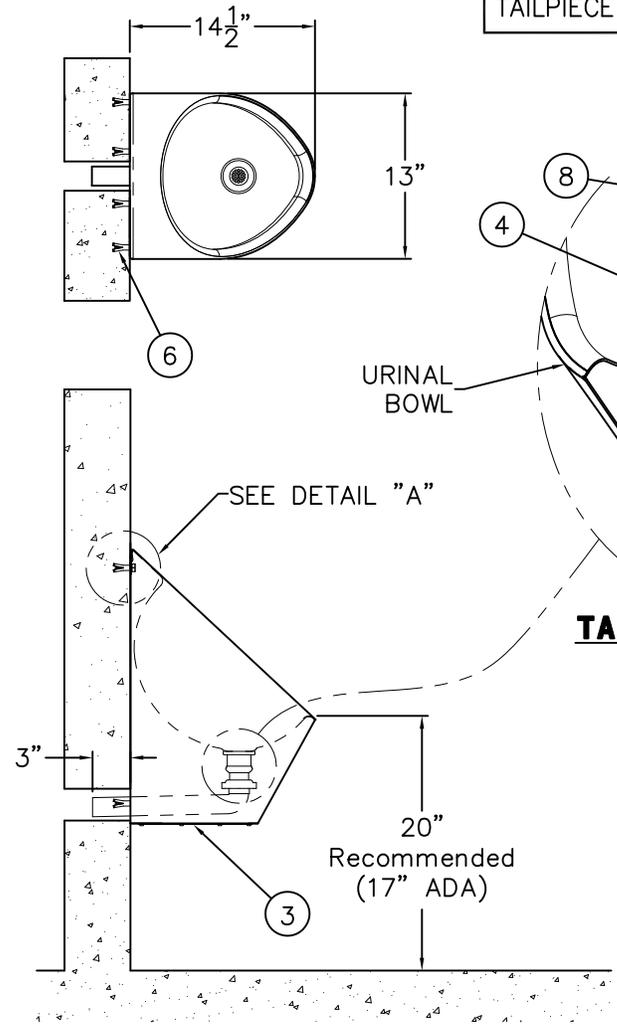

INSTALLATION INSTRUCTIONS:

- A- ROUGH-IN FOR THE FOLLOWING:
 - WASTE OUTLET 1-1/2" SLIP JOINT ①.
 - MOUNTING POINTS ② AS SHOWN FOR ANCHORING HARDWARE BY OTHERS.
- B- REMOVE BOTTOM ACCESS PANEL ③ FROM FIXTURE.
- C- PLACE DRAIN GASKET ④ OVER DRAIN OPENING AND ASSEMBLE TAILPIECE TO FIXTURE AS SHOWN. CONNECT 1-1/2" SLIP JOINT WASTE ARM ① TO TAILPIECE ASSEMBLY.
- D- ANCHOR S-CLIP ⑤ TO WALL WITH ANCHORING HARDWARE BY OTHERS ⑥. PLACE URINAL ABOVE S-CLIP AND AGAINST WALL, SLIDE HOUSING DOWN TO ENGAGE S-CLIP WHILE INSERTING SLIP JOINT WASTE CONNECTION. FASTEN LOWER REMAINING ANCHORING POINTS.
- E- MAKE UP WASTE CONNECTION.

- F- WHEN INSTALLING OR REPLACING DUCK BILL DIAPHRAGM ⑦ REMOVE DRAIN CHECK RETAINER ⑧ AND FRICTION WASHER ⑨ WITH 3/16" FLAT TIP SCREWDRIVER.
- G- REPLACE DUCKBILL DIAPHRAGM ⑦ IN TAILPIECE ASSEMBLY.
- H- REINSTALL FRICTION WASHER ⑨ AND DRAIN CHECK RETAINER ⑧.
- I- REPLACE BOTTOM ACCESS PANEL ③ TO COMPLETE INSTALLATION.

NOTE: URINAL MOUNTED AT 17" RIM HEIGHT COMPLIES WITH ADA ACCESSIBILITY REQUIREMENTS. REFER TO ADA ACCESSIBILITY GUIDELINES FOR COMPLETE INSTALLATION REQUIREMENTS.

WHITEHALL MANUFACTURING P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 968-6681 FAX (626) 855-4862	TITLE LIGATURE RESISTANT WATERLESS URINAL, #2159EB		
	MANUFACTURE DATE OCTOBER 2012 TO PRESENT	DATE ISSUED 10/08/12	DRAWING NUMBER 9918-013-001
		DATE REVISED 10/22/13 A	