


REFER TO LOCAL CODES AND/OR INDUSTRY STANDARDS FOR CORRECT WASTE DRAIN SLOPE.

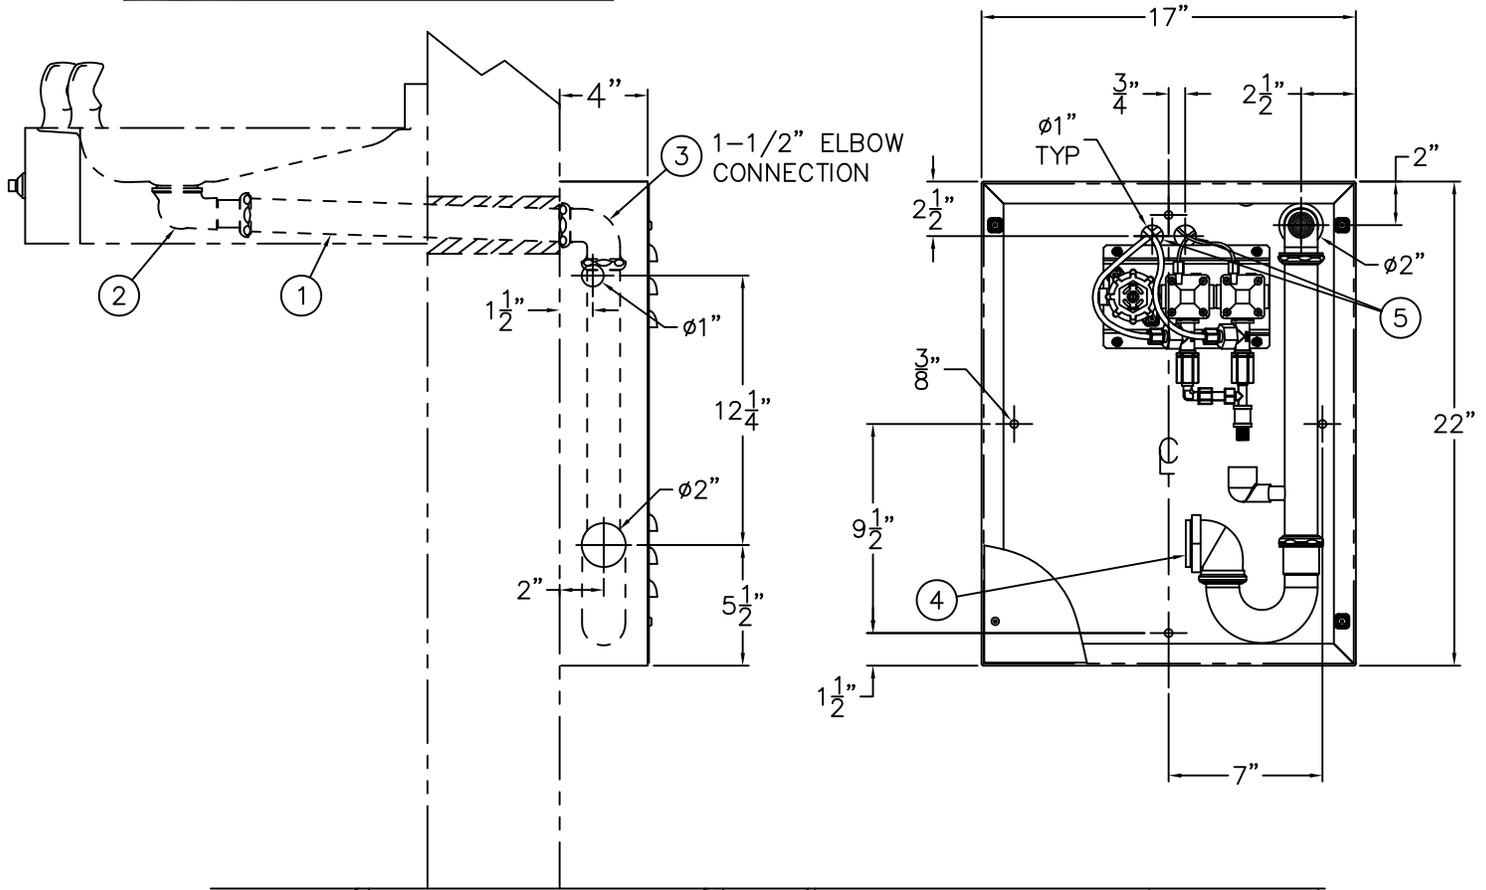

ALL WALL ANCHORS AND ANCHORING HARDWARE ARE PROVIDED BY THE INSTALLER. FREEZE RESISTANT BOX MUST BE INSTALLED BEHIND FIXTURE WALL WITH TEMPERATURES THAT REMAIN ABOVE FREEZING.

NOTE: 1/4" SUPPLY LINE FROM VALVE TO BUBBLER MUST NOT DIP DOWN BELOW THE VALVE. IT SHOULD ALSO MAINTAIN A DOWNHILL PATH WITHOUT DIPPING FROM THE BUBBLER TO THE VALVE.

INSTALLATION INSTRUCTIONS:

- A- INSTALL FIXTURE FOLLOWING APPROPRIATE INSTALLATION SHEETS AND PROVIDE THRU WALL OPENINGS FOR ELBOW WASTE EXTENSION (1) OUTLET AND AIR AND SUPPLY TUBING. NOTE: THRU WALL CONDUIT AND WALL INSULATION IS PROVIDED BY THE INSTALLER.
- B- ASSEMBLE WASTE EXTENSION TUBE (1) THRU WALL TO FIXTURE CLOSE ELBOW (2).
- C- ANCHOR VALVE AND WASTE BOX ON INTERIOR WALL BY ALIGNING FP ELBOW (3) WITH FIXTURE WASTE EXTENSION OUTLET (1).
- D- MAKE UP WASTE CONNECTIONS TO FP BOX 1-1/2" IPS P-TRAP WASTE OUTLET (4).
- E- CONNECT SUPPLY AND AIR TUBING FROM VALVE THRU BOX OPENING (5) TO FIXTURE BUBBLERS AND PUSHBUTTONS. (SEE NOTE ABOVE.)
- F- FLUSH WATER SUPPLY LINE OF ALL DEBRIS PRIOR TO CONNECTING TO VALVE. CONNECT SUPPLY LINE TO VALVE 1/2" NPS HOSE END VALVE INLET CONNECTION.
- G- ATTACH COVER TO BOX TO COMPLETE FP INSTALLATION.

<p>MORRIS GROUP INTL P.O. BOX 3527 Industry, CA 91744 MORRIS GROUP 15125 Proctor Ave Industry, CA 91746 INTERNATIONAL (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE 2-STATION FREEZE RESISTANT BOX</p>	
	<p>MANUFACTURE DATE</p> <p>SEPTEMBER 1991</p> <p>TO PRESENT</p>	<p>DATE ISSUED</p> <p>12/14/09</p> <p>DATE REVISED</p> <p>08/05/22 A</p>