




REFERENCE DRAWING	
DECK MOUNTED WRISTBLADE VALVE	9908-110-001

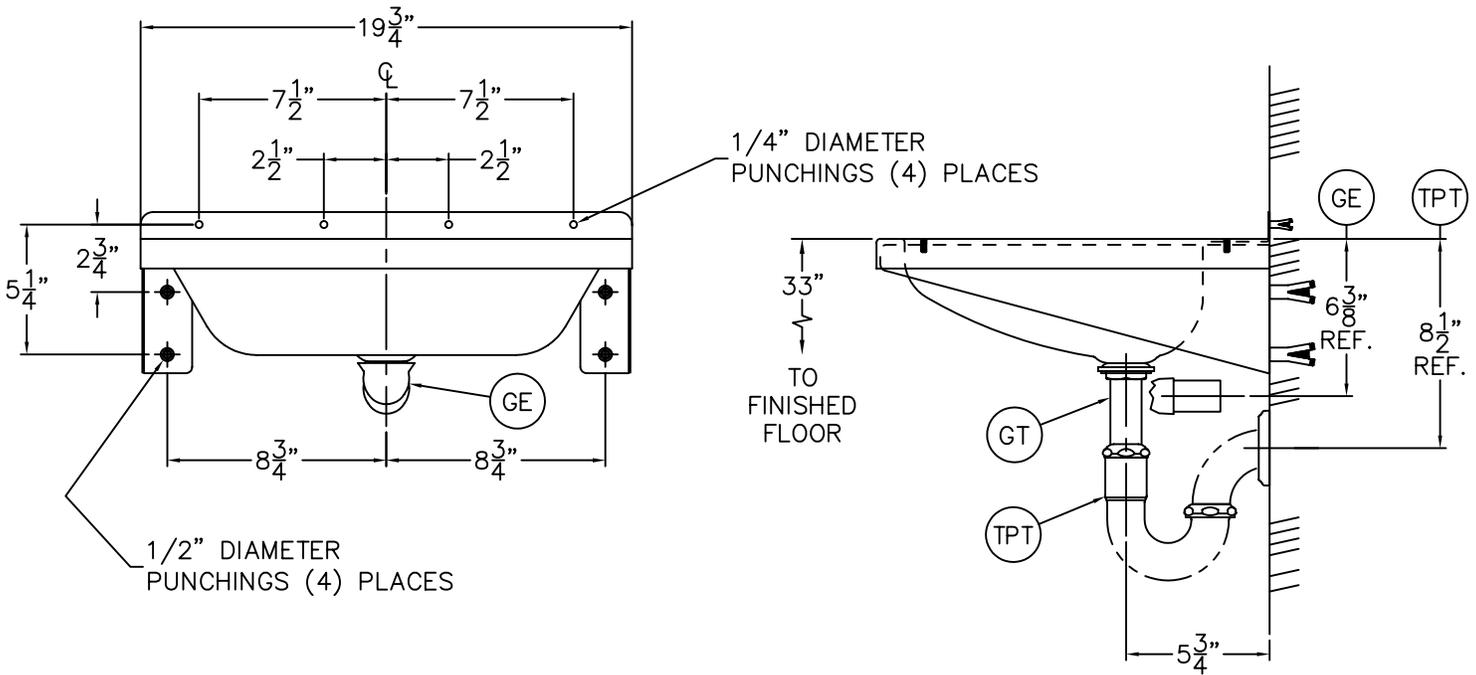

INSTALLATION INSTRUCTIONS

- A- REFER TO APPROPRIATE VALVE INSTALLATION SHEETS AND ROUGH-IN FOR SUPPLIES AND WASTE CONNECTIONS.
- B- ALL WALL ANCHORS AND ANCHORING HARDWARE ARE BY OTHERS.
- C- INSTALL WALL ANCHORS TO PROVIDE DESIRED COUNTERTOP HEIGHT FROM FINISHED FLOOR. 33" AFF COUNTERTOP HEIGHT IS RECOMMENDED. SECURE ANCHOR BRACES TO FIXTURE WITH HARDWARE PROVIDED. MOUNT FIXTURE ASSEMBLY TO WALL.

C- MAKE UP WASTE CONNECTIONS. WASTE ROUGHS ARE DEPENDENT ON OPTIONS SELECTED.




- (GE) GE -OPTIONAL GRID STRAINER WITH 1-1/4" O.D. CLOSE ELBOW
- (GT) GT -OPTIONAL GRID STRAINER WITH 1-1/4" O.D. TAILPIECE.
- (TPT) TPT -OPTIONAL CHROME PLATED 1-1/4" O.D. TUBULAR P-TRAP.

D- FLUSH SUPPLIES LINES THOROUGHLY BEFORE CONNECTING VALVES.



ACORN ENGINEERING COMPANY
P.O. BOX 3527 INDUSTRY, CA. 91744
(626) 336-4561 FAX (626) 961-2200

TITLE ECONO TRAPAZOIDAL WALL HUNG LAVATORY- CAT. #1955		
MANUFACTURE DATE APRIL 2005 TO PRESENT	DATE ISSUED 04/04/05	DRAWING NUMBER 9908-010-001
	DATE REVISED 04/05/06	

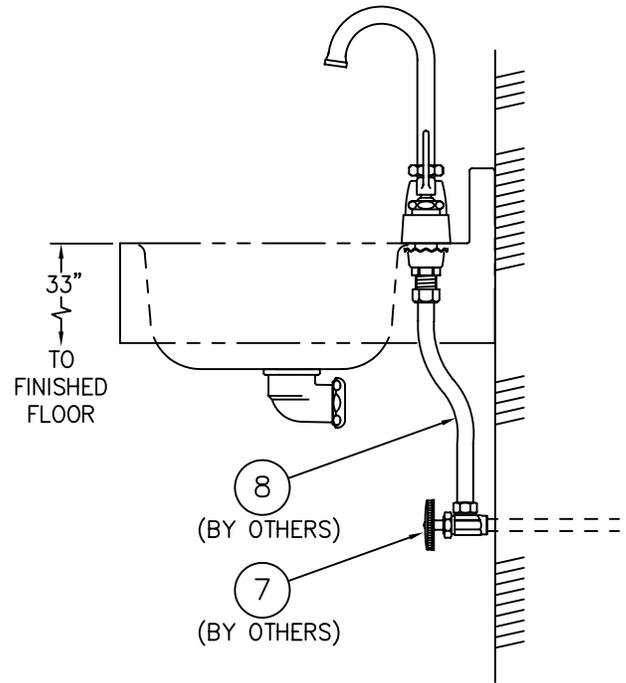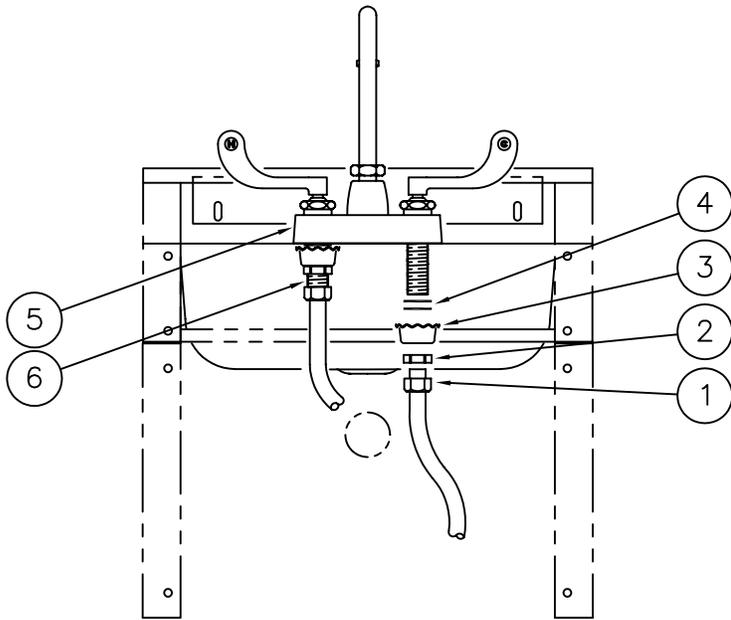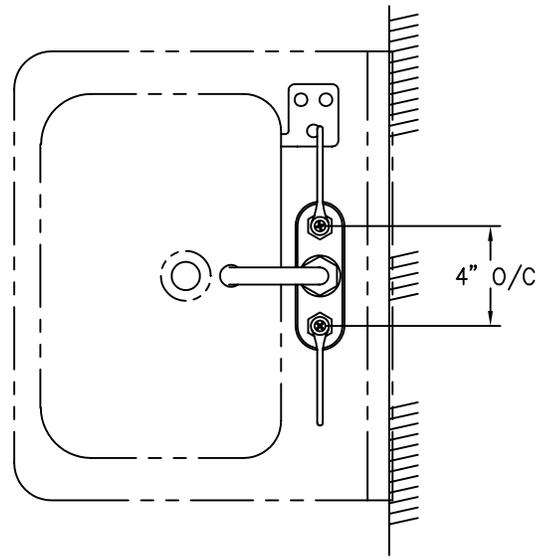

INSTALLATION INSTRUCTIONS

A- REMOVE THE FOLLOWING FROM THE GOOSENECK VALVE ASSEMBLY: COMPRESSION NUTS ①, LOCKNUTS ② BELL SPACERS ③ AND WASHERS ④. SEE DRAWING 2991-000-000 FOR REFERENCE.

B- MOUNT REMAINING GOOSENECK VALVE ASSEMBLY ⑤ TO LAVATORY, INSERTING THREADED INLETS ⑥ THRU CENTER SET HOLES (4" O/C).

C- REATTACH WASHERS ④, BELL SPACERS ③ AND LOCKNUTS ② TO THREADED INLETS ⑥. TIGHTEN.

D- INSTALL RISERS ⑦ (BY OTHERS) TO ANGLE STOPS ⑧ (BY OTHERS) AND TO COMPRESSION NUTS ①. SCREW ONTO THREADED STUBS ⑥.

ACORN ENGINEERING COMPANY P.O. BOX 3527 INDUSTRY, CA. 91744 (626) 336-4561 FAX (626) 961-2200	TITLE DECK MOUNTED WRISTBLADE VALVE CAT. *1950, *1951, & *1953		
	MANUFACTURE DATE JAN 1980 TO PRESENT	DATE ISSUED 6-1-90	DRAWING NUMBER 9908-110-001
	DATE REVISED		