


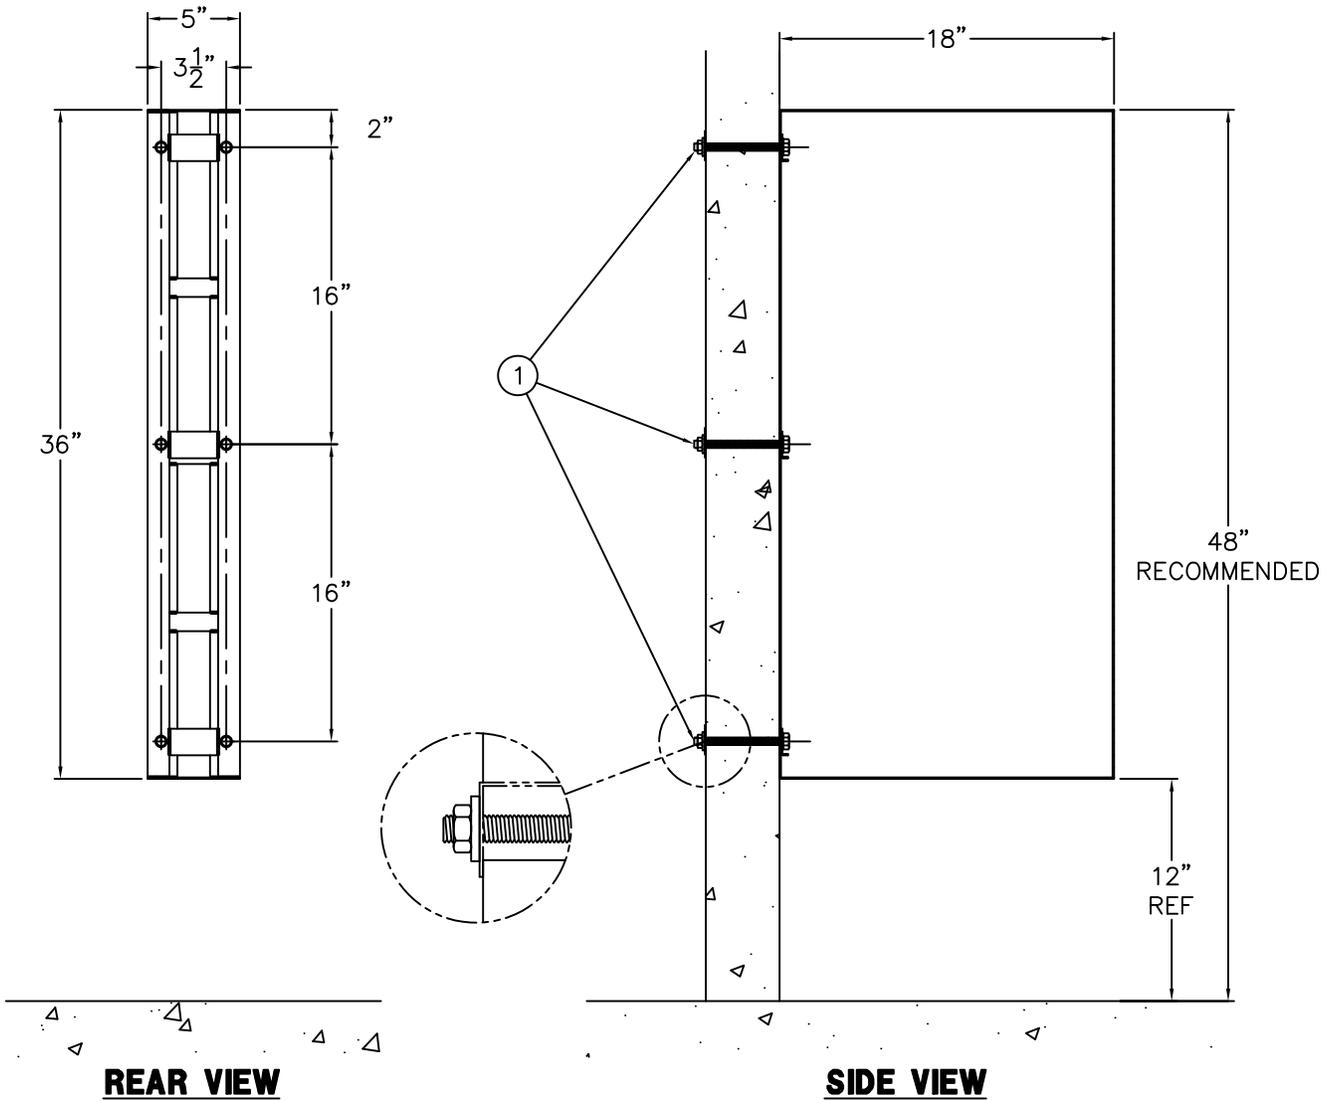

REFERENCE DRAWINGS

-SW WALL SLEEVE / -MT TEMPLATE 9925-274-001



INSTALLATION INSTRUCTIONS:

NOTE: SCREEN IS REAR MOUNT AND REQUIRES AN ACCESSIBLE REAR CHASE TO COMPLETE INSTALLATION

A- LOCATE CENTERLINE OF FIXTURE ON WALL BY STRIKING A VERTICAL CHALK LINE TO INDICATE THE CENTERLINE OF THE PRIVACY SCREEN.

B- STRIKE HORIZONTAL CHALK LINES TO INDICATE MOUNTING THROUGH WALL OPENINGS AS INDICATED.



C- CREATE THROUGH WALL OPENINGS FOR MOUNTING SCREEN BY PROVIDING 1" DIAMETER HOLES.

D- THREAD ALL 1/2"-13 STUDS ① PROVIDED TO ANCHOR TAPPING ON FIXTURE- MINIMUM 1/2" ENGAGEMENT THREAD THROUGH OPENINGS ON WALL.

D- ON CHASE SIDE OF THE WALL, SECURE USING NUTS AND WASHERS PROVIDED. TORQUE NUTS TO 60FT/LBS.

IMPORTANT: OPTIONS MAY SLIGHTLY ALTER INSTALLATION PROCEDURES. READ ALL SUPPLEMENTAL DRAWINGS BEFORE INSTALLATION OF FIXTURE. ALL FASTENERS, PLATES AND NUTS PROVIDED ARE ESSENTIAL IN PROPERLY ANCHORING THE FIXTURE. ACORN CANNOT ASSUME ANY RESPONSIBILITY FOR UNITS IMPROPERLY INSTALLED.

ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200	TITLE 1724-1 URINAL PRIVACY SCREEN ANCHORING INSTRUCTIONS		
	MANUFACTURE DATE JAN 1, 2000 TO PRESENT	DATE ISSUED 10/27/25	DRAWING NUMBER 9925-327-001
		DATE REVISED	

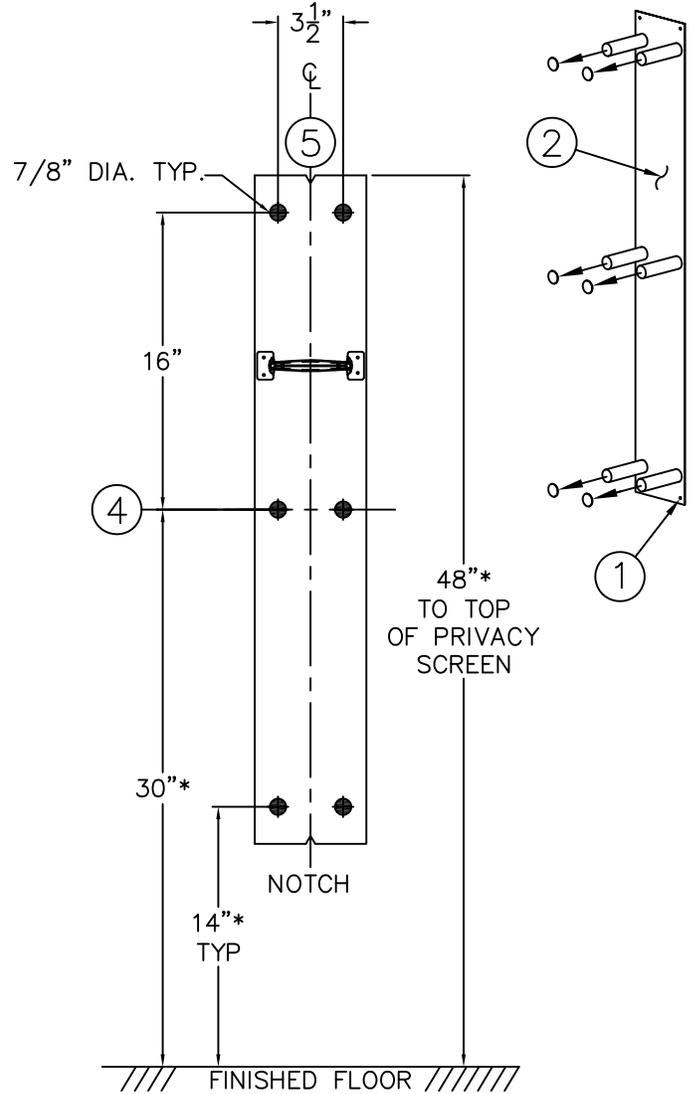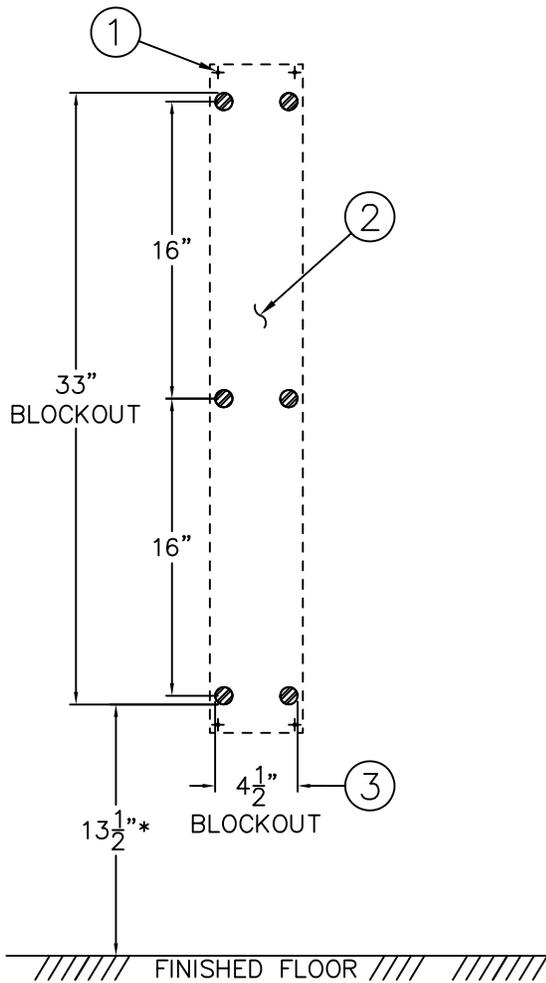

*NOTE: WALL SLEEVE AND METAL TEMPLATE DIMENSIONS SHOWN FOR TOP OF URINAL SCREEN AT 48" A.F.F.

WALL SLEEVE (-SW)

SLEEVES ARE INSTALLED IN FORMS (USING NAIL HOLES ① PROVIDED) OR GROUTED INTO BLOCK WALLS, BECOMING A PERMANENT PART OF WALL.

1. INSTALL SLEEVE AT DESIRED CELL SIDE HEIGHT WITH FLANGE ② ON CHASE SIDE OF WALL.
2. WHEN SLEEVES ARE NOT AVAILABLE BLOCKOUT FOR SLEEVE OPENING IN WALL PER DIMENSIONS SHOWN ③

METAL TEMPLATES (-MT)

TEMPLATES ARE USED TO LAYOUT REQUIRED WALL OPENINGS FOR SUBSEQUENT FLAME CUTTING OR CORE DRILLING.

- A. STRIKE A HORIZONTAL CHALKLINE ④ ON THE WALL AT DIMENSION SHOWN, MEASURED FROM THE FINISHED FLOOR ON CELL (FIXTURE) SIDE. THIS WILL LOCATE CENTERLINE FOR MOUNTING.
- B. STRIKE A VERTICAL CHALKLINE ⑤ ON THE WALL TO INDICATE CENTERLINE OF FIXTURE. THIS WILL LOCATE CENTERLINE FOR VERTICAL NOTCHES ON TEMPLATE.
- C. PLACE TEMPLATE AGAINST WALL. LOCATE NOTCHES ALONG CHALKLINE. MARK WALL FOR REQUIRED OPENING.

<p>ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE -SW WALL SLEEVE, -MT METAL TEMPLATE CAT. #1724-1</p>		
	<p>MANUFACTURE DATE JAN 1, 2000 TO PRESENT</p>	<p>DATE ISSUED 10/27/25</p> <p>DATE REVISED</p>	<p>DRAWING NUMBER 9925-274-001</p>