





OUTDOOR SHOWERS INSTALLATION/MAINTENANCE INSTRUCTIONS

INSTALLATION INSTRUCTIONS FOR -IAP IN-GROUND ANCHOR PLATE

Prior to installation:

- ❖ Read all instructions and refer to local codes.
 - ❖ Supply line must be flushed of all foreign materials such as pipe dope, chips, etc.
- 1.) Refer to roughs for desired location of the shower head.
 - 2.) Tap anchor plate, with threaded rods assembled, into ground at the recommended height and check that anchor plate is level.
 - 3.) Install supply line with 1/2" stub out above anchor plate
 - 4.) Assemble O-Ring adapter to supply stub out, aligning mounting holes in O-Ring adapter to holes on anchor plate and secure with provided bolts.
 - 5.) Pour 4" minimum concrete, or until concrete is level with top of anchor plate.
 - 6.) Position fixture over anchor plate while engaging O-Ring connection.
 - 7.) Secure fixture with vandal resistant fasteners and washers.

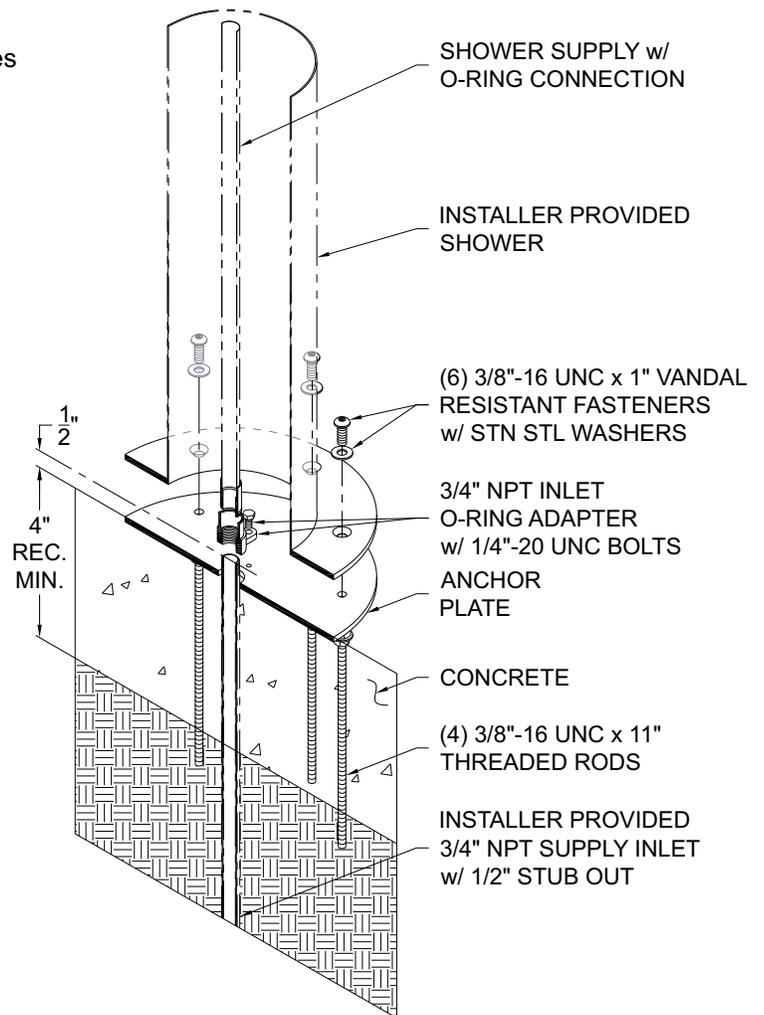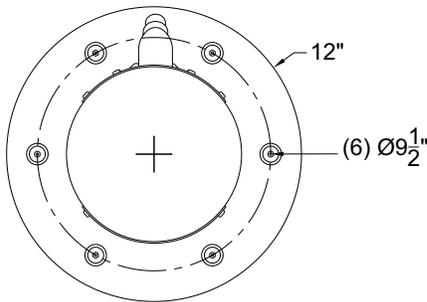

Please visit www.murdockmfg.com
for most current specifications.

MURDOCK MFG. • 15125 Proctor Avenue • City of Industry, CA 91746 USA
Phone 800-453-7465 or 626-333-2543 • Fax 626-855-4860 • www.murdockmfg.com

Member of
MORRIS GROUP
INTERNATIONAL