

9940 AND 9960 CATCH BASIN CHANNEL AND OUTLET CONNECTIONS

PIPE ADAPTOR (9960-PA6 SHOWN)

1. Place adaptor against side of basin at desired location and mark inside of opening onto basin with a marker. Drill or cut out inside of marked area.

3. Apply bead of sealant onto back of adaptor and place onto side of basin around opening. Secure with screws provided.






CHANNEL COLLAR ADAPTOR (9960-CCA SHOWN)

NOTE: 9940 AND 9960 CHANNEL COLLAR ADAPTORS WILL ONLY ACCEPT CHANNELS #6 THRU #12.

1. Trim adaptor to marked number of channel required at 4 places. Taller flange will extend all the way up to top of plastic part of basin and the lower part will fit under the overhanging lip. See enlarged view at right (9940-CCA similar)

2. Place adaptor against side of basin and mark inside of opening onto basin with a marker. Cut out inside of marked area. Stop opening underneath overhanging lip. Do not cut all the way to the top.

3. Apply bead of sealant onto back of adaptor and place onto side of basin around opening. Secure with screws provided.

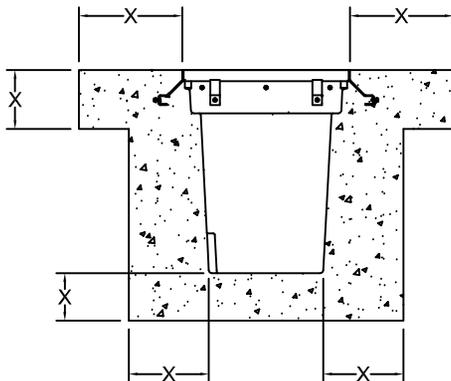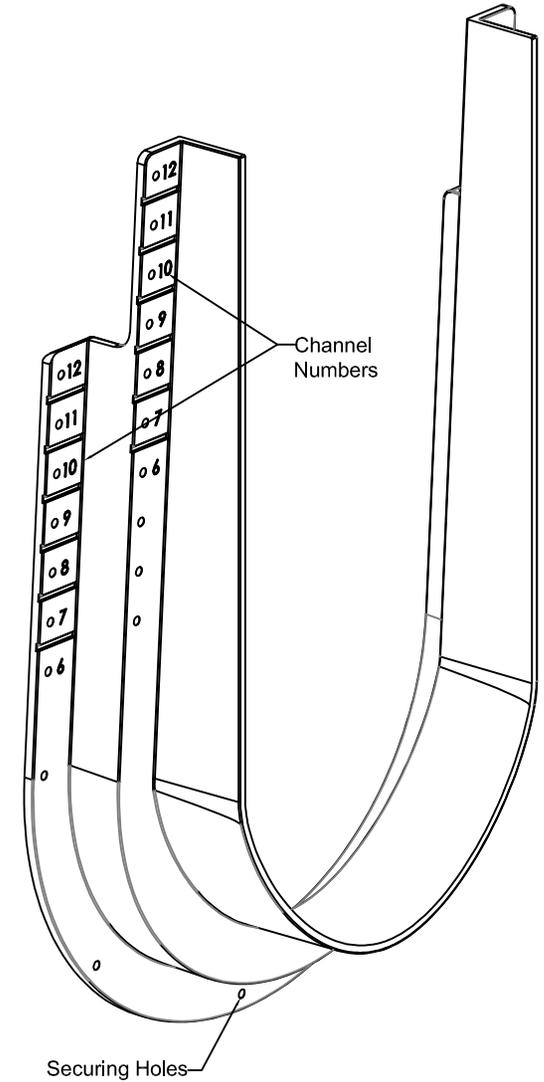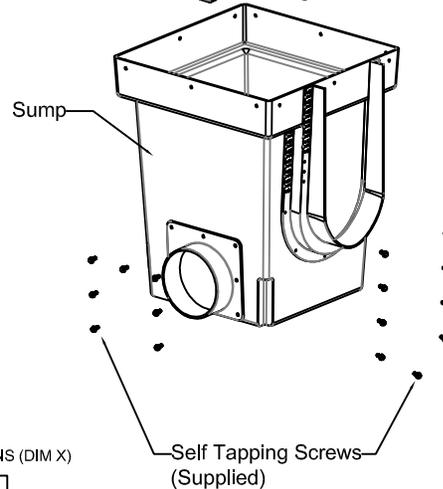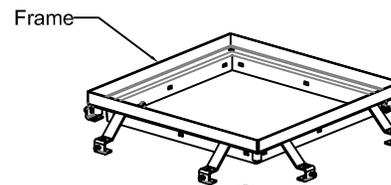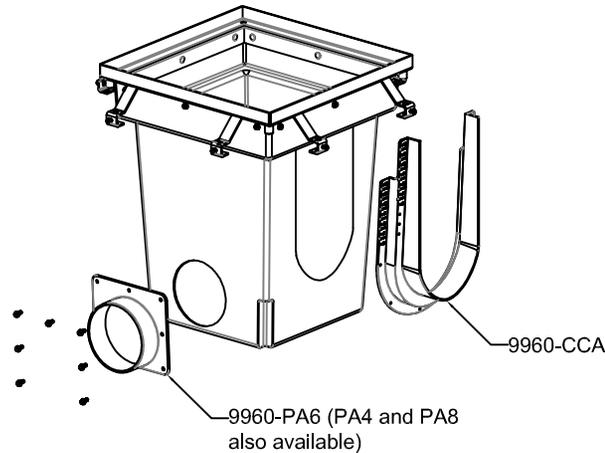

CONCRETE SURROUND DIMENSIONS (DIM X)

LOAD CLASS	C	E
9940 CHANNEL	6"	8"
9960 CHANNEL	10"	12"