


INSTALLATION INSTRUCTIONS:

- A- STRUCTURALLY REINFORCE THE WALL BEHIND THE FOUR 3/8" DIAMETER MOUNTING HOLES (1) AT THE DIMENSIONS SHOWN AND INSTALL WALL ANCHORS BY OTHERS.
- B- ROUGH-IN WASTE OUTLET FOR THE 1-1/4" OUTER DIAMETER PLAIN END TAILPIECE (2).
- C- ROUGH-IN WATER SUPPLY FOR THE 1/4" NOMINAL (3/8" O.D.) x 4" LONG COPPER TUBE CONNECTED TO IN-LINE STRAINER (3) PROVIDED. SHUTOFF VALVE RECOMMENDED ON SUPPLY TO BE SUPPLIED BY OTHERS.

- D- CAREFULLY REMOVE FIXTURE (4) AND COMPONENTS FROM THE PACKAGING PREVENTING SCRATCHING AND DAMAGE.
- E- SECURELY ANCHOR FIXTURE (4) TO WALL THRU MOUNTING HOLES (1) WITH ANCHORING HARDWARE BY OTHERS.
- G- MAKE-UP 1-1/4" O.D. WASTE CONNECTION TO TAILPIECE (2).
- H- FLUSH WATER SUPPLY BY OTHERS OF ALL DEBRIS PRIOR TO CONNECTING TO FIXTURE.
- I- CONNECT THE WATER SUPPLY BY OTHERS TO 1/4" NOMINAL COPPER TUBE INLET. STOP ON THE SUPPLY IS RECOMMENDED.

<p>MURDOCK-SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591-9880 www.murdock-supersecur.com</p>	<p>TITLE A4B1400P WALL MOUNTED ECONOMY DRINKING FOUNTAIN</p>		
	<p>MANUFACTURE DATE</p> <p>JULY 2007</p> <p>TO PRESENT</p>	<p>DATE ISSUED</p> <p>07/23/07</p> <p>DATE REVISED</p> <p>03/08/16</p>	<p>DRAWING NUMBER</p> <p>9938-252-001</p>

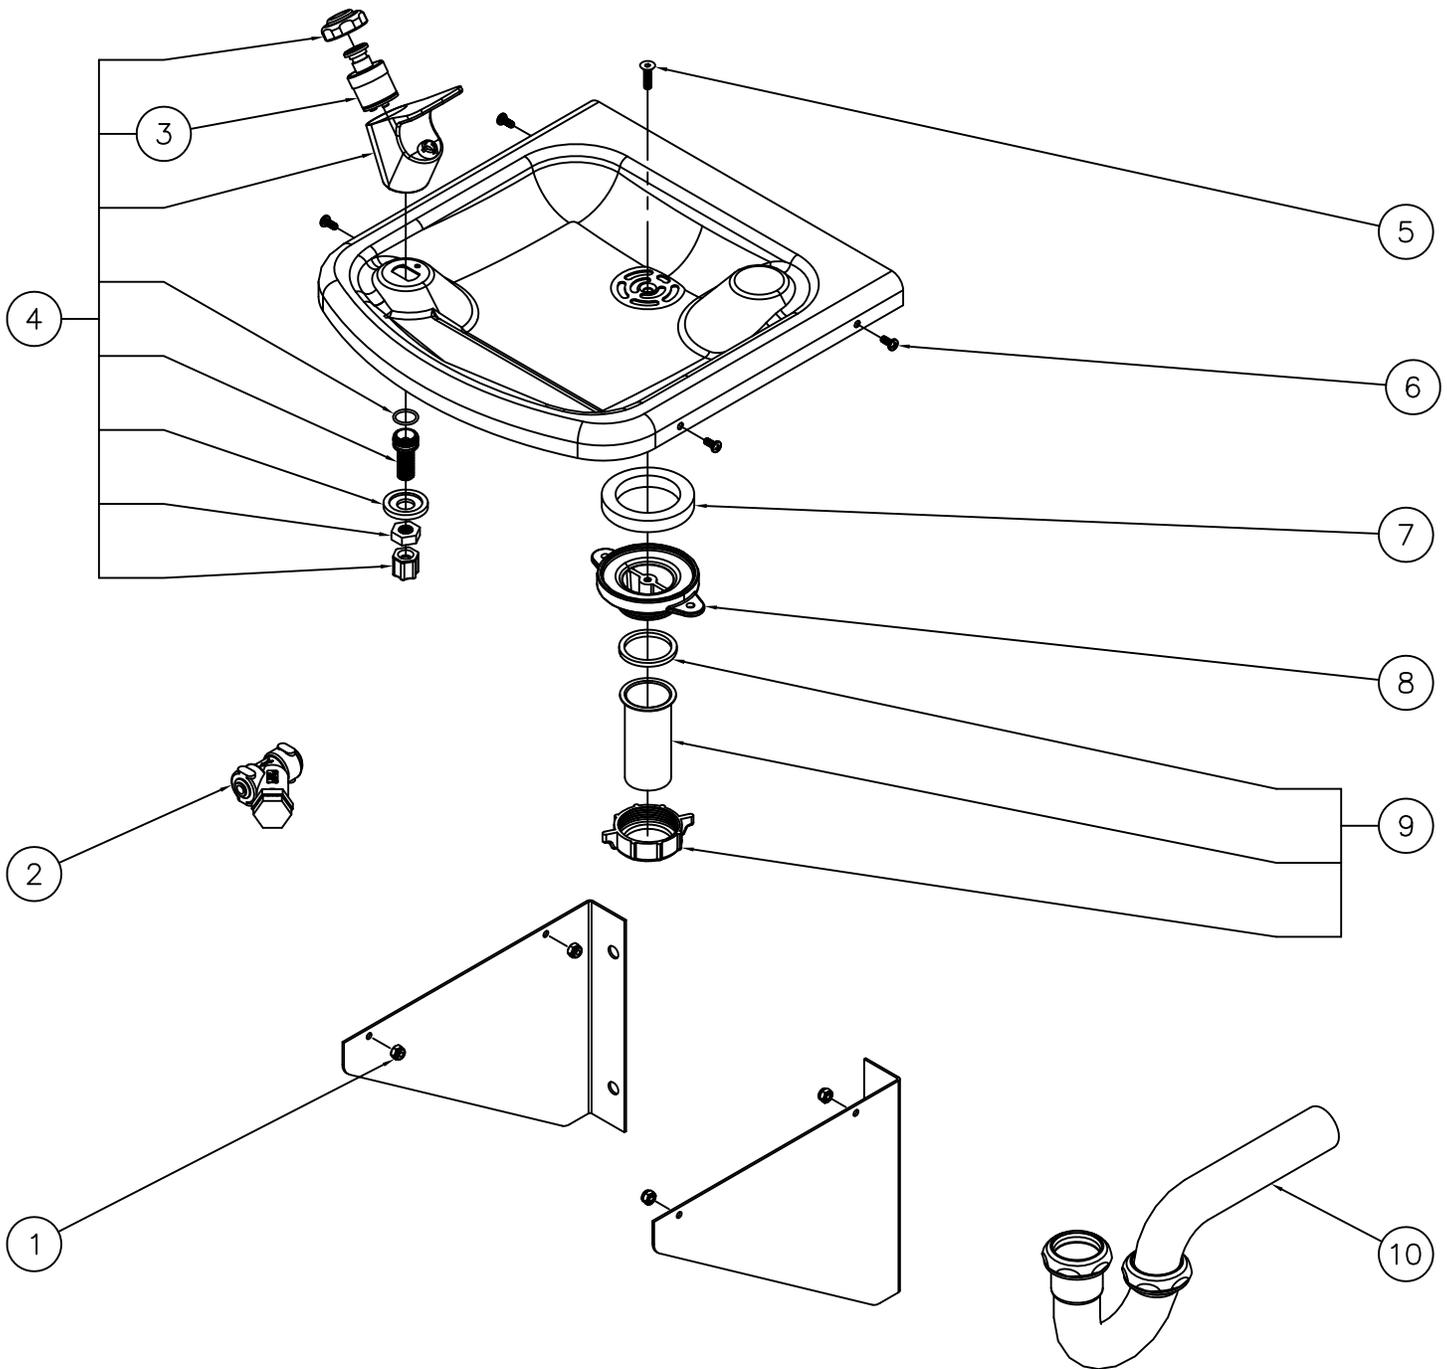

OPTIONAL -PT1 1-1/4" O.D. P-TRAP

1	0308-009-000	#8-32 NYLON INSERT LOCKNUT	7	7000-006-000	FLAT DRAIN ADAPTER GASKET
2	7000-021-001	1/2" STRAINER	8	7000-005-199	DRAIN ADAPTER
3	7000-060-000	VALVE CARTRIDGE WITH FOAM WASHER	9	7000-032-001	1-1/4" OUTER DIAMETER TAILPIECE ASSY
4	7000-011-001	DECK MOUNTED PUSHBUTTON BUBBLER ASSY	10	4953-002-000	1-1/4" x 1-1/4" OUTER DIAMETER P-TRAP
5	0152-006-000	ALLEN FLAT HEAD SCREW			
6	6502-100-000	#8-32 x 3/8" LONG PHILLIPS HEAD SCREW			
ITEM	PART NUMBER	DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION



MURDOCK-SUPER SECUR
P.O. Box 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
Phone: (800) 591-9880
www.murdock-supersecur.com

TITLE A4B1400P WALL MOUNTED ECONOMY DRINKING FOUNTAIN

MANUFACTURE DATE
JULY 2007
TO PRESENT

DATE ISSUED
07/23/07
DATE REVISED
03/08/16

DRAWING NUMBER
9938-252-500




INSTALLATION INSTRUCTIONS

STANDARD PUSH PAD / PUSH BUTTON DRINKING FOUNTAIN

CONDITION:

SOLUTION:

NO WATER FLOW:

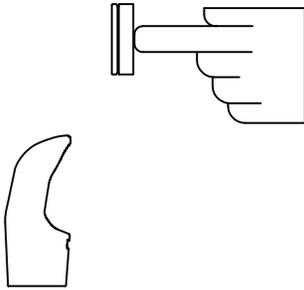


- 1.1 Check water main supply – open.
- 1.2 Inspect stop (by others) – open & no debris.
- 1.3 Inspect in–line strainer for debris – clean.
- 1.4 Replace valve cartridge.

WATER DRIPS / WILL NOT SHUT OFF:



- 2.1 For push pad activated drinking fountains only: Open fixture and move valve bracket assembly further back from push pad.
- 2.2 Replace valve cartridge.

REDUCED WATER FLOW:

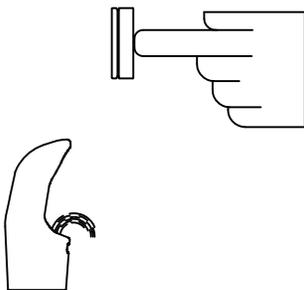

- 3.1 Adjust the valve flow rate. See appropriate fixture installation instructions.
- 3.2 Check water main supply for 20 psig minimum flow pressure.
- 3.3 Inspect stop (by others) – open & no debris.
- 3.4 Inspect in–line strainer for debris – clean.
- 3.5 Inspect bubbler for debris – clean.
- 3.6 Inspect all tubing for twists or kinks.
- 3.7 Replace valve cartridge.

 <p>MURDOCK-SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591-9880 www.murdock-supersecur.com</p>	<p>TITLE DRINKING FOUNTAIN VALVE MAINTENANCE INSTRUCTIONS</p>		
	<p>MANUFACTURE DATE JANUARY 2006 TO PRESENT</p>	<p>DATE ISSUED 09/28/05</p> <p>DATE REVISED 03/02/16</p>	<p>DRAWING NUMBER 9940-200-001</p>