




Whitehall Manufacturing®
Manufacturer of Healthcare and Rehabilitation Products since 1946

Dignity Suite™ Ligature Resistant Recessed Hydraulic Flush Valve Cover Assembly





WHD2898

FRONT VIEW

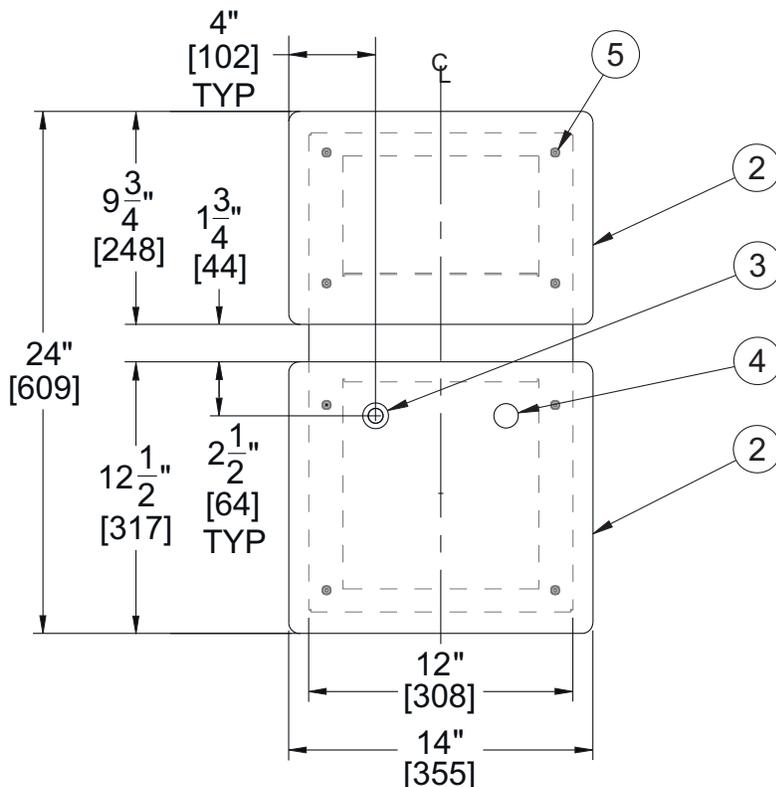

MODEL# WHD2898

SIDE VIEW

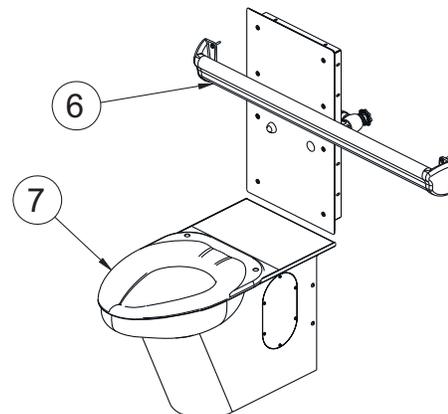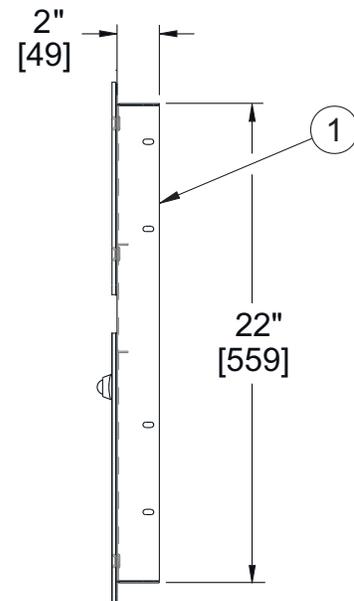


NOTES:

1. In-wall Mounting Frame
2. Upper and Lower Access Panels
3. Ligature Resistant Pushbutton
4. Stainless Steel Blank Escutcheon
5. 1/4" Vandal Resistant Fasteners
6. Whitehall WHD-GB36 Grab Bar (Shown for reference only)
7. Whitehall BestCare® Toilet WH2142-ADA-W (Shown for reference only)



WHD2898 FIXTURE ANCHORING

1 Install 12" x 22" Mounting Frame Assembly into Wall Opening and Secure using Installer Provided Fasteners (12) Places. Ensure frame is level.

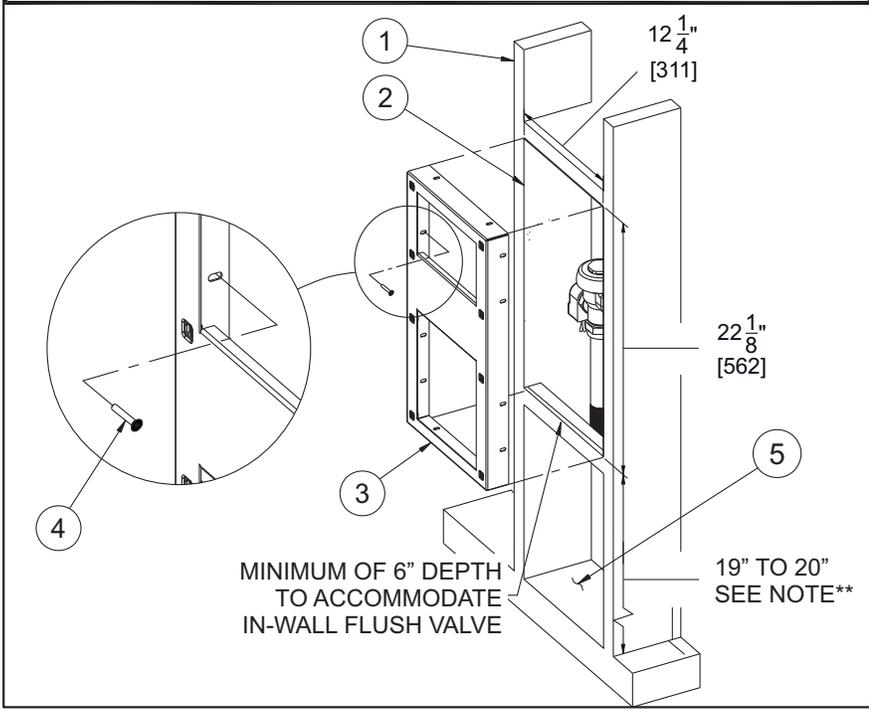


NOTE: Accessibility standards may dictate grab bar height for reach range. Verify requirements.



- ① Stud Wall Reference
- ② Blockout Area
- ③ Mounting Frame Assembly
- ④ Installer Provided Fasteners to suit wall conditions
- ⑤ Finished Floor

NOTE** RECOMMENDED HEIGHT TO POSITION WHITEHALL WHD-GB AT 34.5" TO 35.5" TO TOP OF GRIPPING SURFACE.

2 Install Finished Wall and ensure a Wall Opening with the dimensions shown.

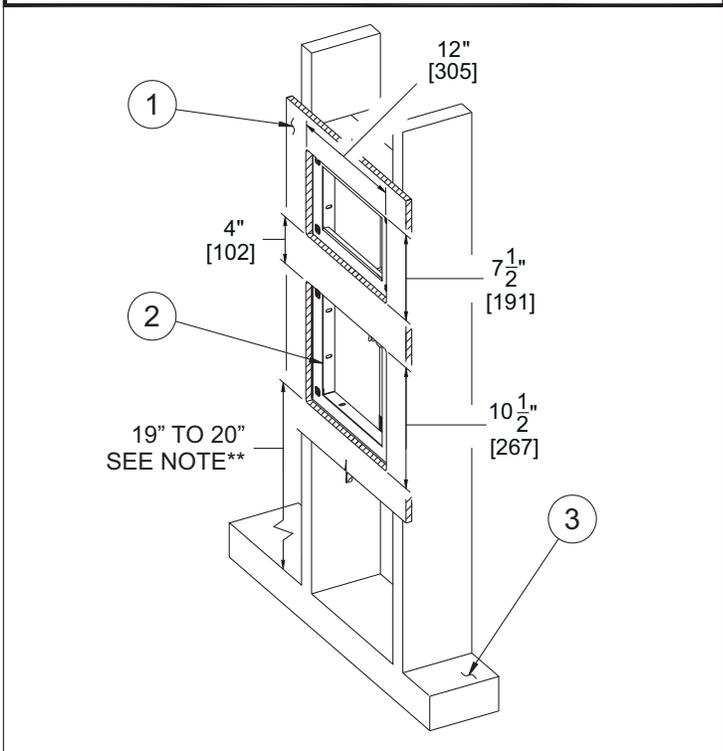


- ① Finished Wall (Suggested Thickness = 0.5" ± 0.25")
- ② Mounting Frame Assy.
- ③ Finished Floor



WHD2898 FIXTURE ANCHORING

3 Install Pushbutton Assembly and Blank Escutcheon onto Flush Valve Lower Access Panel.

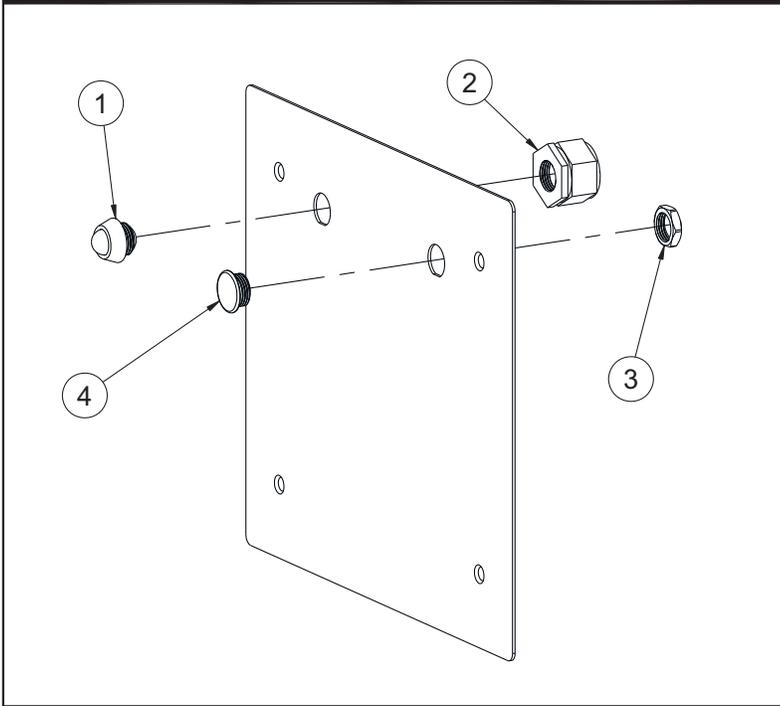


NOTE: Accessibility standards may dictate grab bar height for reach range. Verify requirements.



- 1 Pushbutton/Escutcheon Assembly (Provided)
- 2 Pushbutton/Actuator Adapter (Provided)
- 3 Stainless Steel Hex Nut (Provided)
- 4 Stainless Steel Blank Escutcheon (Provided)

4 Install Flush Valve Upper Access and Lower Access Panels to Mounting Frame and Secure using 1/4" Screws (Provided).

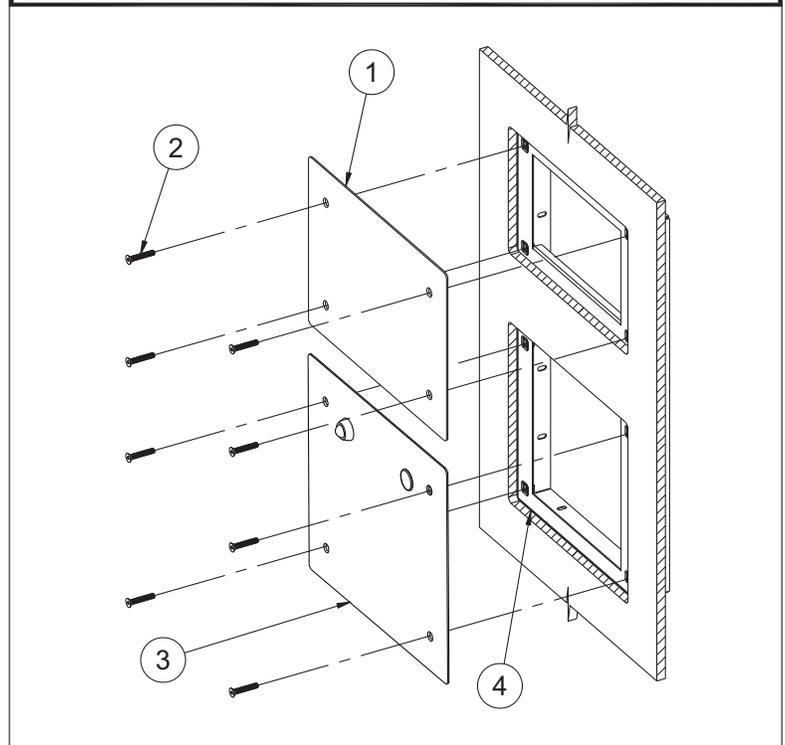

- 1 Flush Valve Upper Access Panel
- 2 1/4" Screws (Provided)
- 3 Push Button Operated Flush Valve Lower Access Panel
- 4 Mounting Frame Assembly