



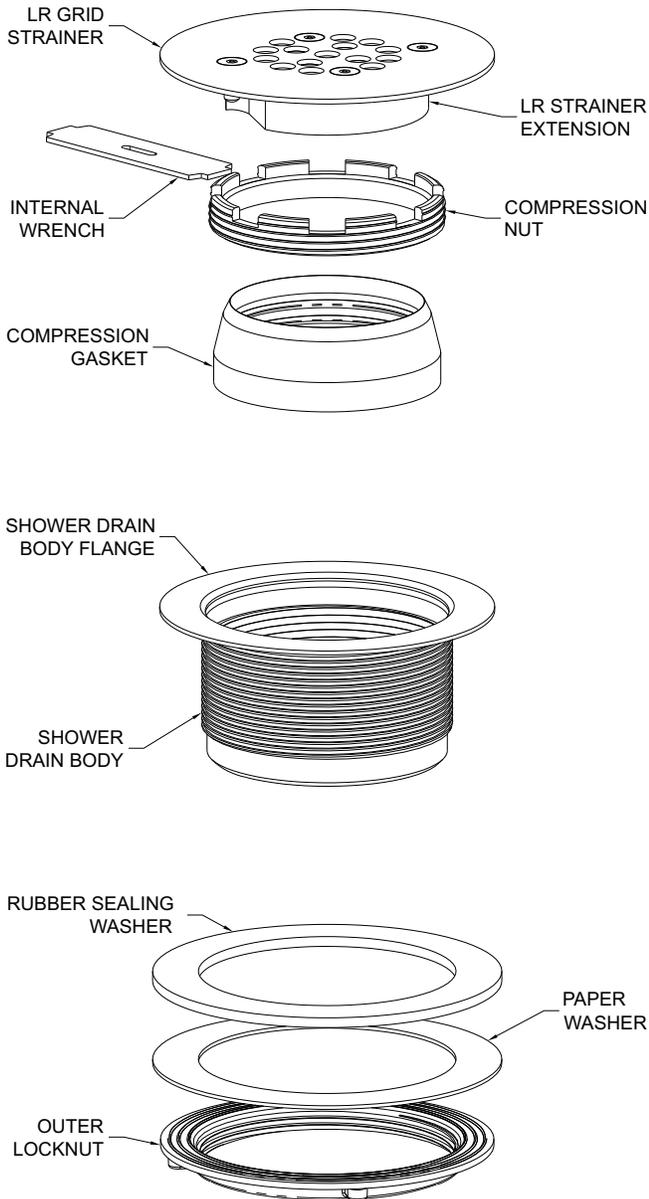

**Whitehall Manufacturing®**  
Manufacturer of Healthcare and Rehabilitation Products since 1946

# WHPD-2NH Ligature Resistant Shower Drain

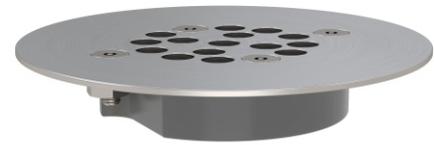

## REQUIRED ITEMS FOR INSTALLATION - NOT SUPPLIED

- ✗ Silicone Caulk
- ✗ Pipe Wrench
- ✗ Large Flat Tip Screwdriver
- ✗ 1/4" Nut Driver

## ITEMS FOR INSTALLATION - PROVIDED

- ✗ Shower Base Drain
- ✗ BestCare Ligature Resistant Strainer
- ✗ 1/4" Hex Key Socket w/ Center Reject  
Part # 0296-026-000

1. Before starting, disassemble Drain assembly, laying out the Strainer, Compression Nut, Compression Gasket, Outer Locknut, Washers, and Internal Wrench.
2. Prior to setting Shower Base, apply a bead of Silicone Caulk around the Drain hole opening and underside of the Drain Body Flange. Thread Drain Body through opening.
3. From the bottom of the Shower Base, add the sealing Rubber Washer and Friction Paper Washer and hand-tighten Outer Locknut.




**WHITEHALL MANUFACTURING** • P.O. BOX 3527 • City of Industry, CA 91744-0527 U.S.A.  
Phone (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862 • Web: [www.whitehallmfg.com](http://www.whitehallmfg.com)



4. Use a Wrench to tighten Locknut to Drain Body. Be sure to wipe away any excess Caulking from top and bottom of Drain. **DO NOT OVER TIGHTEN.**
5. Lower Base and Drain assembly over stub-out Pipe. **Fit stub-out Pipe so that the top of the Pipe is 3/4" to 7/8" below the top of the Drain Body.**
6. Once Shower Base is lowered, adjust the Pipe or Base so that the Pipe is centered within the Drain Body. **Confirm the top of the pipe is between 3/4" to 7/8" below the top of the Drain Body.**
7. Insert the Compression Gasket with the tapered end up. The top of the Gasket should be flush with the top of the Drain Pipe or slightly lower. NOTE: "THIS SIDE UP" is indicated on the Gasket.
8. Carefully thread Compression Nut onto Drain Body and tighten using the Internal Wrench and large flat tipped Screwdriver to form a tight seal between Gasket and Pipe. Again, confirm the top of the Pipe is between 3/4" to 7/8" from top of Drain Body.
9. Allow 24 hours for Caulk to cure before attempting to check for leaks. Turn on water in Shower and from below Shower Floor (if accessible) check for leaks.
10. If water leaks between Pipe and Compression Nut, use the Internal Wrench to tighten Compression Nut.
11. If water leaks between the Base and Sealing Washer, tighten Outer Locknut.

## STRAINER INSTALLATION

1. Discard Grid Strainer. This will be replaced with the BestCare Strainer assembly.
2. Position Eccentric Washers next to the Strainer Extension.
3. Insert Whitehall Ligature Resistant Strainer into Drain Body.
4. Using 5/32" Allen Center Reject bit, tighten Strainer Screws down. The Eccentric Washers will swivel into groove at the top of the Drain Body securing the Strainer to the Drain Body.

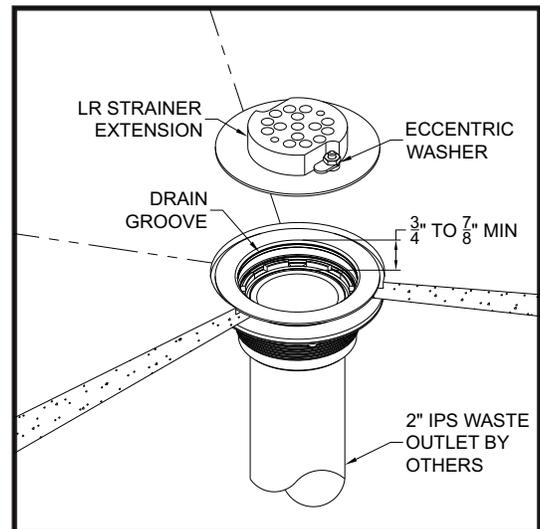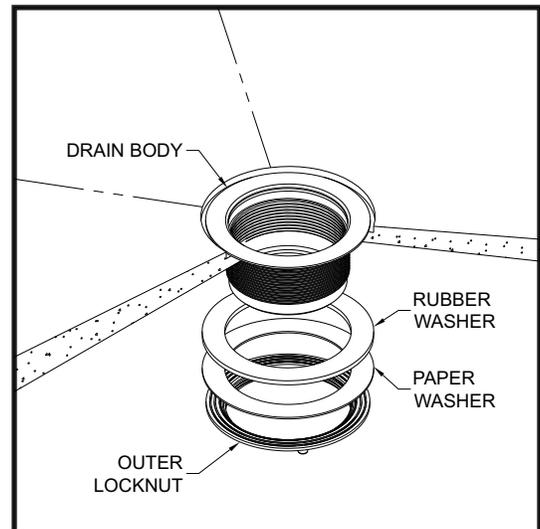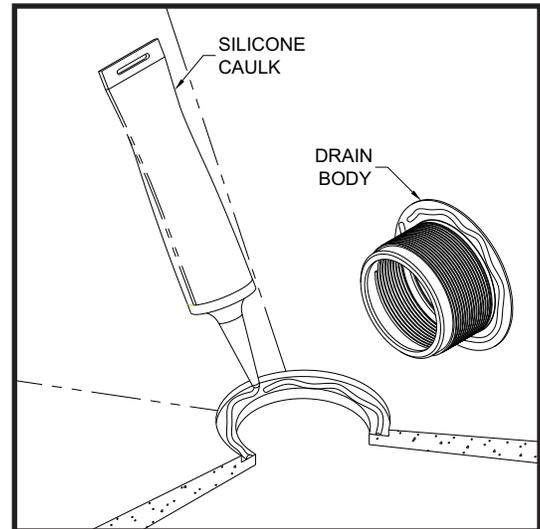



**Whitehall Manufacturing®**  
Manufacturer of Healthcare and Rehabilitation Products since 1946

**Mailing Address:**

P.O. Box 3527 • City of Industry, CA 91744-0527 U.S.A.

**Physical Address:**

15125 Proctor Avenue • City of Industry, CA 91746 U.S.A.

Phone 800-782-7706 • 626-968-6681

Fax 626-855-4862

Web: [www.whitehallmfg.com](http://www.whitehallmfg.com)

E-mail: [info@whitehallmfg.com](mailto:info@whitehallmfg.com)

**MANUFACTURER'S WARRANTY**

Go to [www.whitehallmfg.com](http://www.whitehallmfg.com) to fill out warranty Registration, keyword search: WARRANTY.

Whitehall Manufacturing Company warrants that its products are free from defects in material or workmanship under normal use and service for a period of one year from date of shipment. Whitehall's liability under this warranty shall be discharged solely by replacement or repair of defective material, provided Whitehall is notified in writing within one year from date of shipment, F.O.B. Industry, California.

**This warranty does not cover installation or labor charges, and does not apply to materials which have been damaged by other causes such as mishandling or improper care or abnormal use.** The repair or replacement of the defective materials shall constitute the sole remedy of the Buyer and the sole remedy of Whitehall under this warranty. Whitehall shall not be liable under any circumstances for incidental, consequential or direct charges caused by defects in the materials, or any delay in the repair or replacement thereof. This warranty is in lieu of all other warranties expressed or implied. Product maintenance instructions are issued with each fixture, and disregard or non-compliance with these instructions will constitute an abnormal use condition and void the warranty. If you have any questions or require technical assistance, please call 800-743-8219.

**NOTICE TO KEEP ORIGINAL PACKAGING-** Regarding warranty claims: customer must retain original packaging for one year upon receipt of product. If packaging is discarded, it is the customer's responsibility to provide adequate packaging. Any shipping claims that are a direct result of customer-provided packaging materials will be handled by the shipper.

Member of   
MORRIS GROUP  
INTERNATIONAL

---

**WHITEHALL MANUFACTURING** • P.O. BOX 3527 • City of Industry, CA 91744-0527 U.S.A.  
Phone (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862 • Web: [www.whitehallmfg.com](http://www.whitehallmfg.com)