




**Whitehall Manufacturing**  
Manufacturer of Healthcare and Rehabilitation Products since 1946

# Model WHB-GB

LIGATURE RESISTANT  
UNIVERSAL GRAB BAR

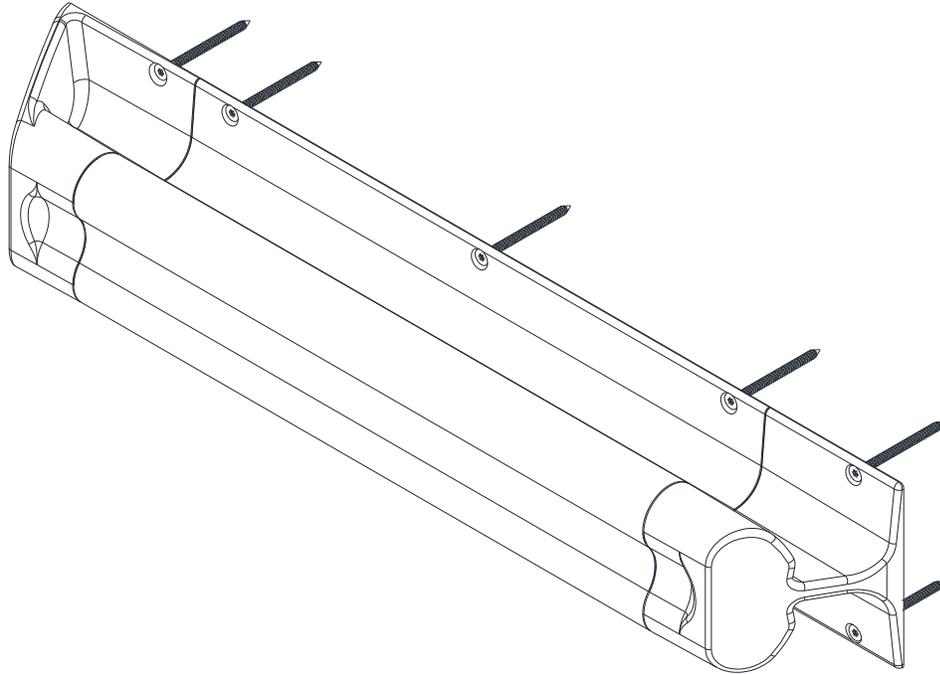

---

**TECHNICAL ASSISTANCE TOLL FREE TELEPHONE NUMBER:  
1-800-743-8259**

Technical Assistance E-mail: [Fieldservice@acorneng.com](mailto:Fieldservice@acorneng.com)



## **IMPORTANT**

**ANSI, UFAS, or ADA compliance is subject to the interpretation and requirements of the local code authority and is the responsibility of the installer for verification.**

Important: Some options may slightly alter installation. To ensure proper installation review the manual thoroughly and verify rough-ins before beginning any work. File this manual with the owner or maintenance personnel upon completion of installation.

Industry standard wall backing, for wall hung fixtures, is required. Installer provided wall anchors and wall anchoring hardware must be appropriate for wall construction.

**Please refer to the Link or QR code provided.**

For Cleaning & Care Guide:

<https://www.whitehallmfg.com/uploads/fileLibrary/9900-008-W01.pdf>






## GRAB BAR INSTALLATION



- Locate item to conform with applicable codes for accessibility.
- Installer to ensure adequate Wall Backing.
- In-wall anchors are provided by others. Installer to use industry standards of best and most common practice to suit wall construction and site conditions.

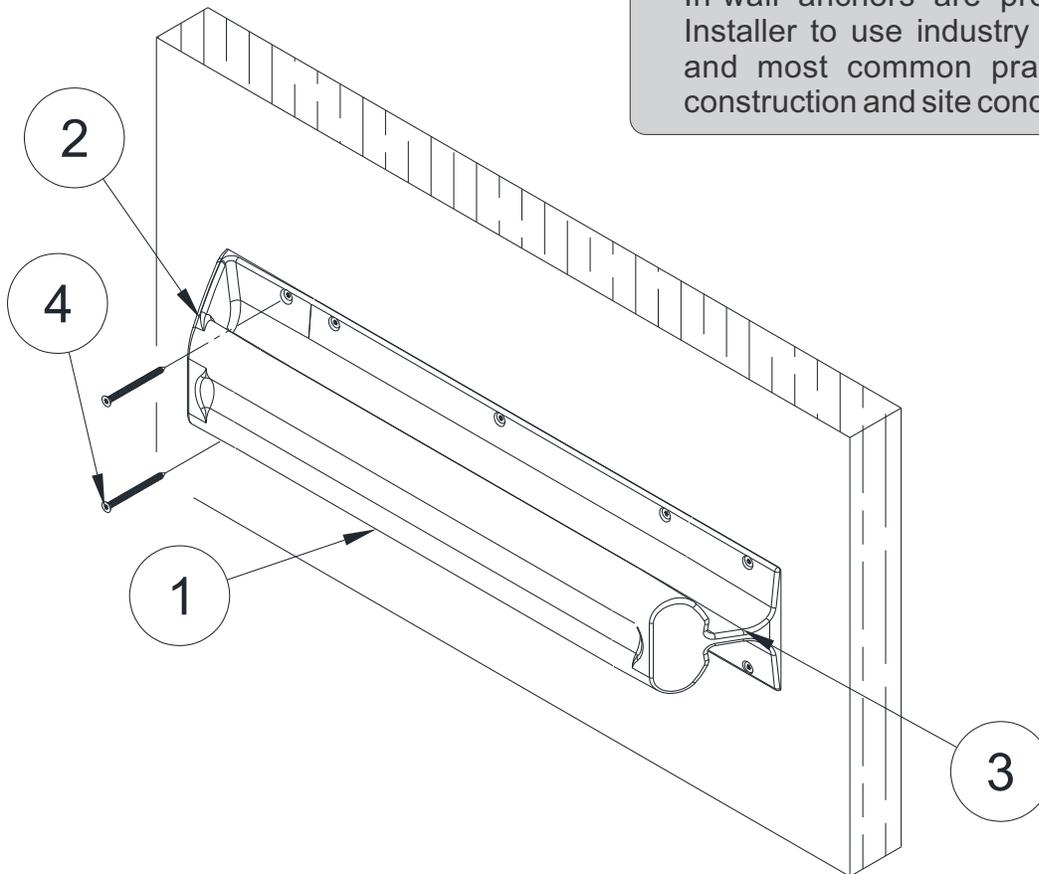

### **Installation Instructions** (Refer to following pages for dimensional details):


Note: Universal design allows for Grab Bar mounting in horizontal or vertical position.

- Ensure adequate in-wall backing exists at Grab Bar [1] mounting locations. Refer to local code requirements.
- Position Closed End [2] and Open End [3] to suit requirements. Open End allows for residual water drainage in Shower applications.
- Grab Bar may be installed vertically: Position Open End [3] at bottom for vertical installation.
- If required, using Grab Bar as a template, locate and mark mounting points and install in-wall Anchors (by others).
- Fasten Grab Bar [1] to wall with the #10 x 2-1/2 torx flat head screws [4] provided.
- Install security caulk (or other appropriate sealant) to eliminate gaps between Wall and Grab Bar.




# TECHNICAL DIMENSIONS

## WHB-GB18

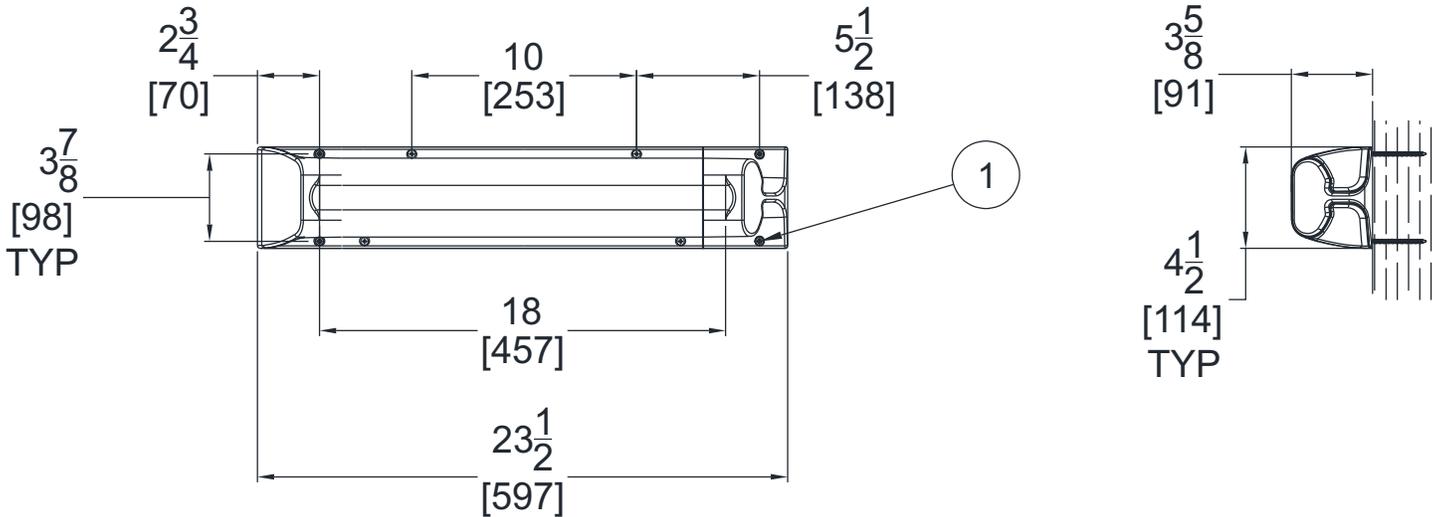

## WHB-GB24

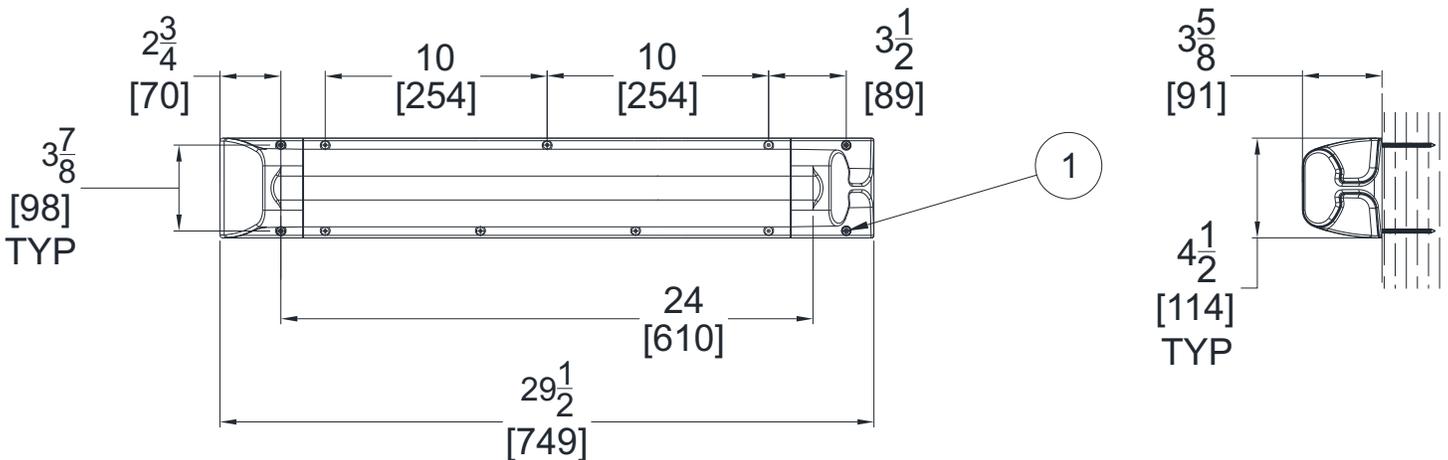

### ! IMPORTANT

Installer shall use Industry Standards of Best Practice to coordinate appropriate Mounting Hardware and Wall backing as required to suit wall construction


#### NOTES:

- #10 x 2-1/2 torx flat head screw fasteners (provided).




# TECHNICAL DIMENSIONS

## WHB-GB30

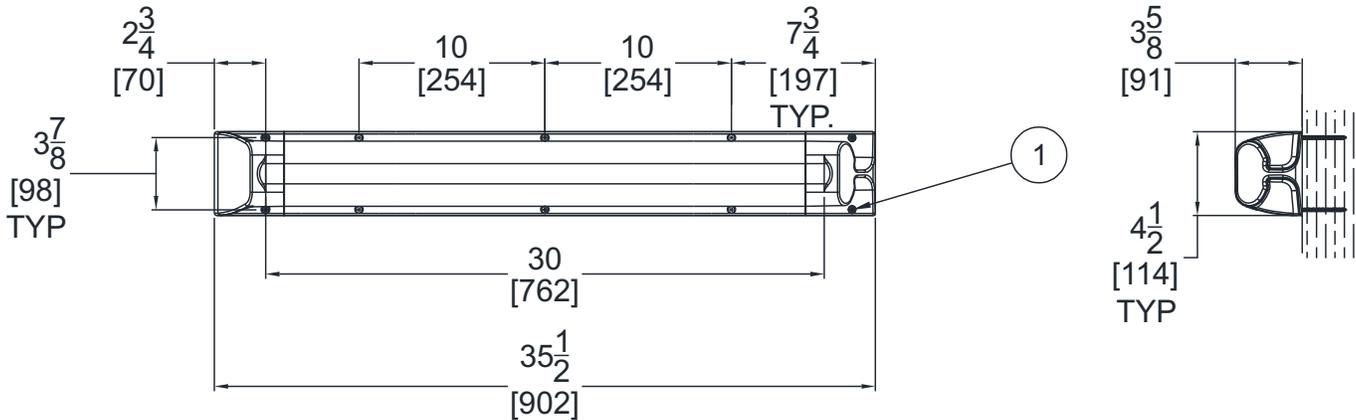

## WHB-GB36

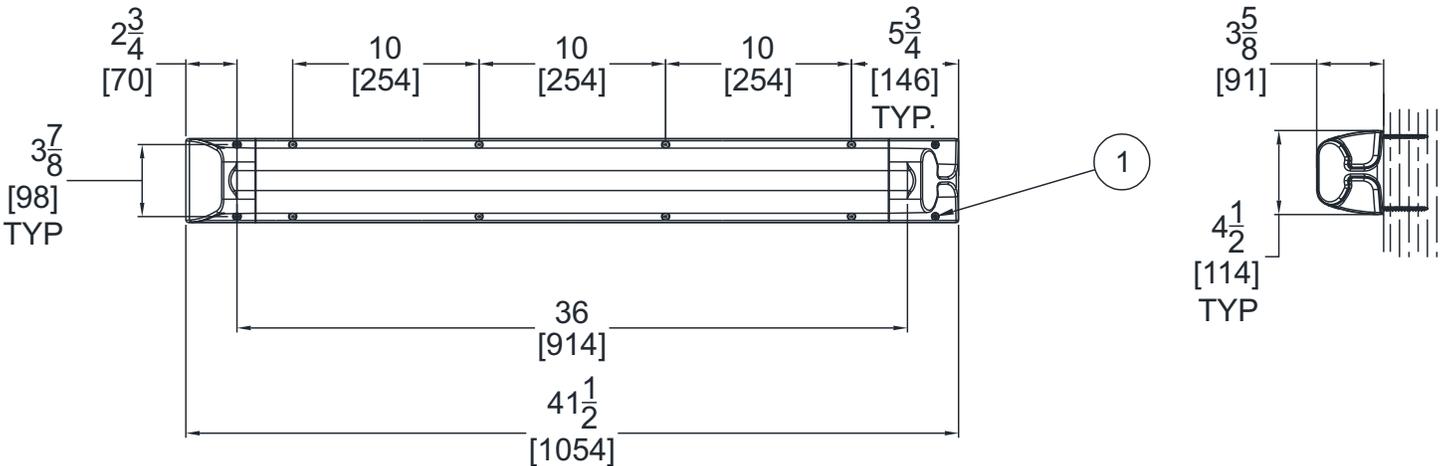

### ! IMPORTANT

Installer shall use Industry Standards of Best Practice to coordinate appropriate Mounting Hardware and Wall backing as required to suit wall construction


#### NOTES:

- #10 x 2-1/2 torx flat head screw fasteners (provided).




# TECHNICAL DIMENSIONS

## WHB-GB42

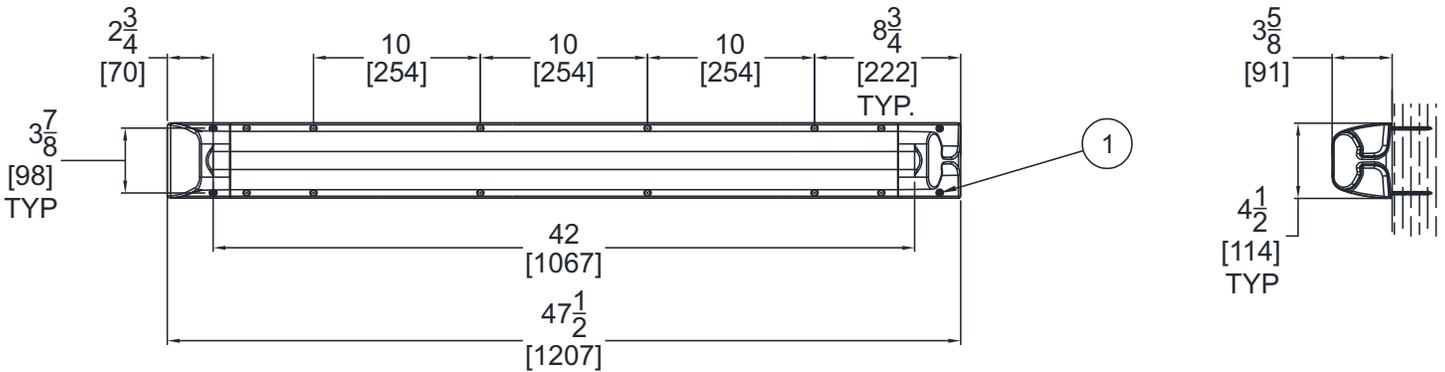

## WHB-GB48

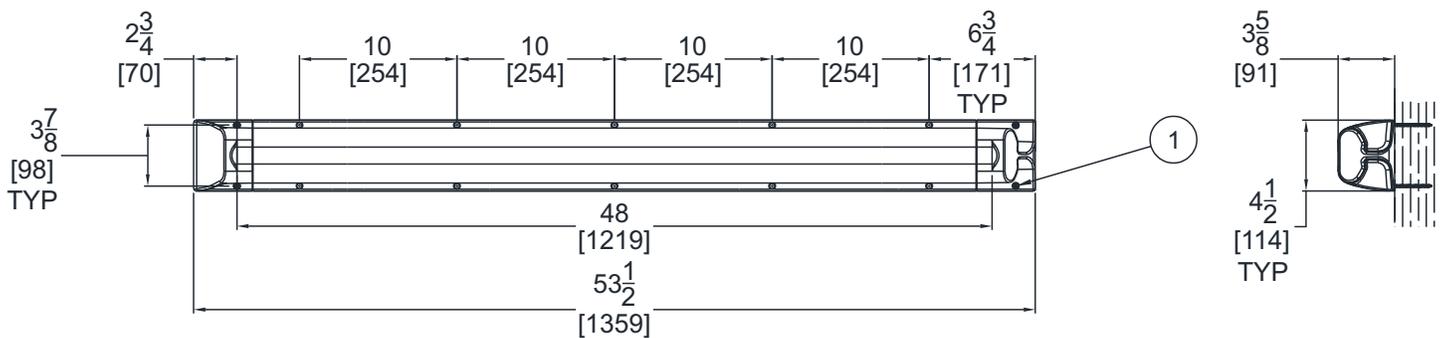

### ! IMPORTANT

Installer shall use Industry Standards of Best Practice to coordinate appropriate Mounting Hardware and Wall backing as required to suit wall construction

#### NOTES:

- #10 x 2-1/2 torx flat head screw fasteners (provided).