




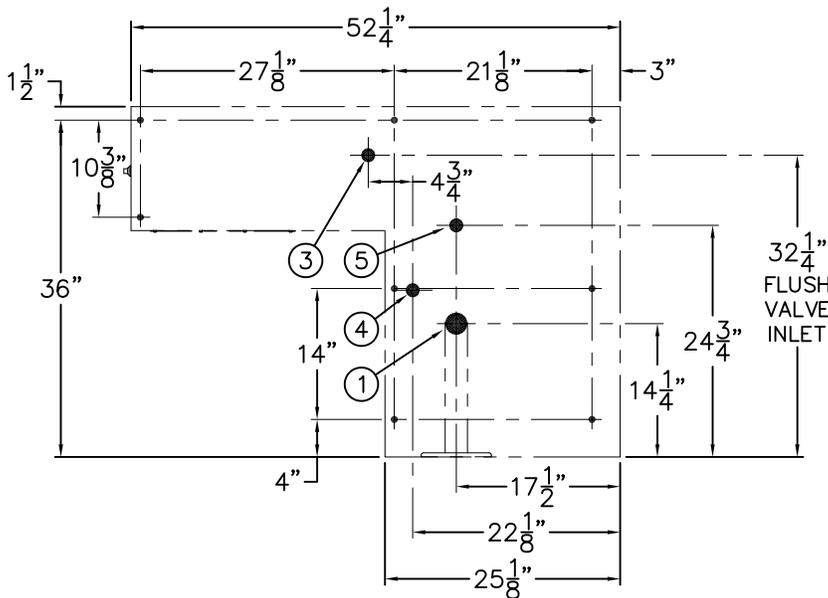

REFERENCE DRAWINGS	
ITEM	DRAWING
-04 AIR-CONTROL	9905-000-003
-03 AIR-CONTROL	9905-001-003
-SW WALL SLEEVE/-MT	9925-023-001

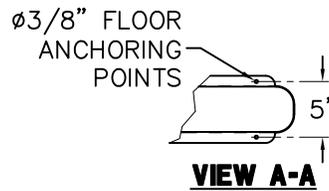

ROUGH-IN VIEW SHOWN FROM CELL SIDE.
-RO UNIT SHOWN, -LO UNIT OPPOSITE.

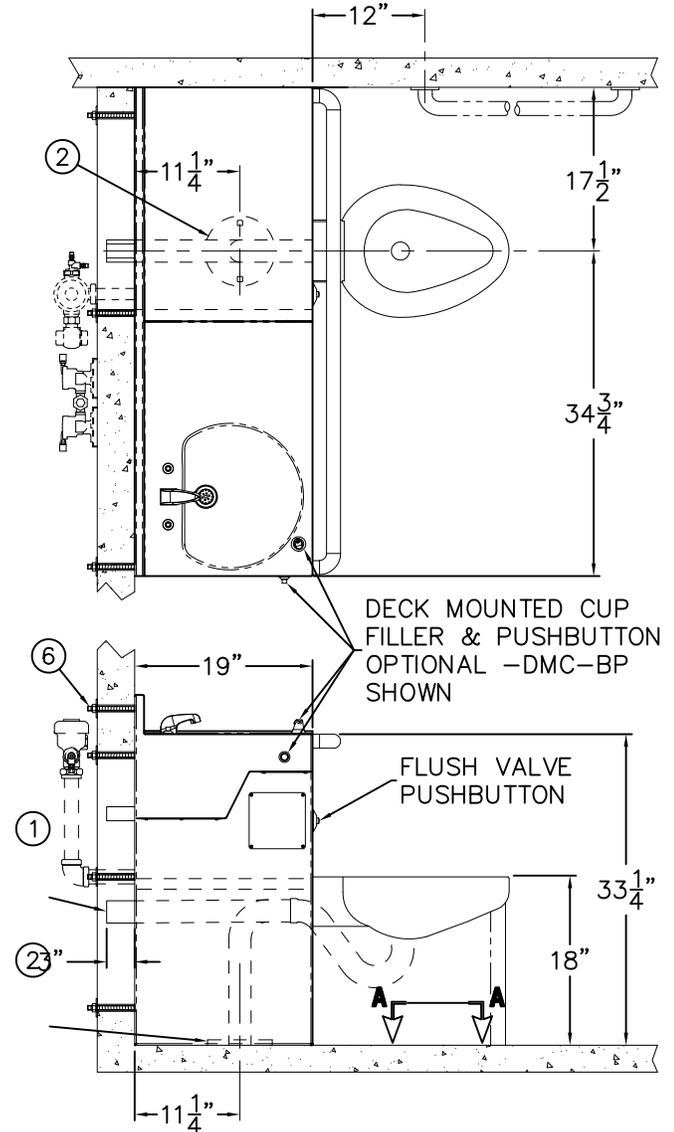

INSTALLATION INSTRUCTIONS:

A- ROUGH-IN FOR THE FOLLOWING CONNECTIONS:

- TOILET WASTE WALL OUTLET: 2-3/8" OD PLAIN END ① STANDARD. OPTIONAL 3" OD PLAIN END FOR -WO3B OPTION.
- TOILET WASTE OUTLET -FLOOR: ø7-1/2" RECESSED GASKET FLANGE ② WITH 5/16" TAPPINGS ON 6" CENTERS.
- FLUSH VALVE INLET: 1" NPTI ③. FLUSHING INLET ④ IS 1-1/2" NPTI.
- LAVY WASTE OUTLET: 1-1/2" OD PLAIN END ⑤. SUITABLE FOR COMPRESSION-SLIP JOINT TYPE.
- LAVY VALVE: SEE INDIVIDUAL VALVE SHEET FOR ROUGH-IN.

B- FLOOR WASTE OUTLET TYPE: BEFORE FIXING UNIT TO WALL, FIXTURE MUST BE POSITIONED ON WASTE CONNECTION ②.

- C- THREAD 1/2"-13 UNC ALL THREAD ⑥ INTO REAR ANCHOR TAPPINGS; MUST HAVE A MIN. OF 1/2" ENGAGEMENT. THREAD FLUSHING INLET ④ NIPPLE. THREAD LAVY WASTE CONNECTION.
- D- ALIGN ALL THREADS AND PIPES THROUGH WALL OPENINGS AND SLIDE FIXTURE INTO POSITION.
- E- SECURE FIXTURE TO WALL USING WASHERS AND/OR PLATES AND NUTS. INSTALL FLUSH SUPPORT PLATE ON FLUSH VALVE SIDE. TORQUE NUTS TO 60FT LBS. SEE DETAIL A.

HYDRAULIC FLUSH VALVE NOTES:

1. DO NOT CUT LENGTH OF TUBING PROVIDED.
2. DO NOT TAPE OR FIX TUBING IN A STATIONARY POSITION.




ACORN ENGINEERING COMPANY
P.O. BOX 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
(626) 336-4561 FAX (626) 961-2200


TITLE LAV-TOILET COMBY INSTALL INSTRUCTION *1452-LO/RO		
MANUFACTURE DATE SEPTEMBER 2023 TO PRESENT	DATE ISSUED 09/01/23	DRAWING NUMBER 9925-021-001
	DATE REVISED	




VIEW FROM CELL SIDE
 -RO RIGHT OFFSET FIXTURE ROUGH-IN'S SHOWN;
 -LO LEFT OFFSET FIXTURE OPPOSITE

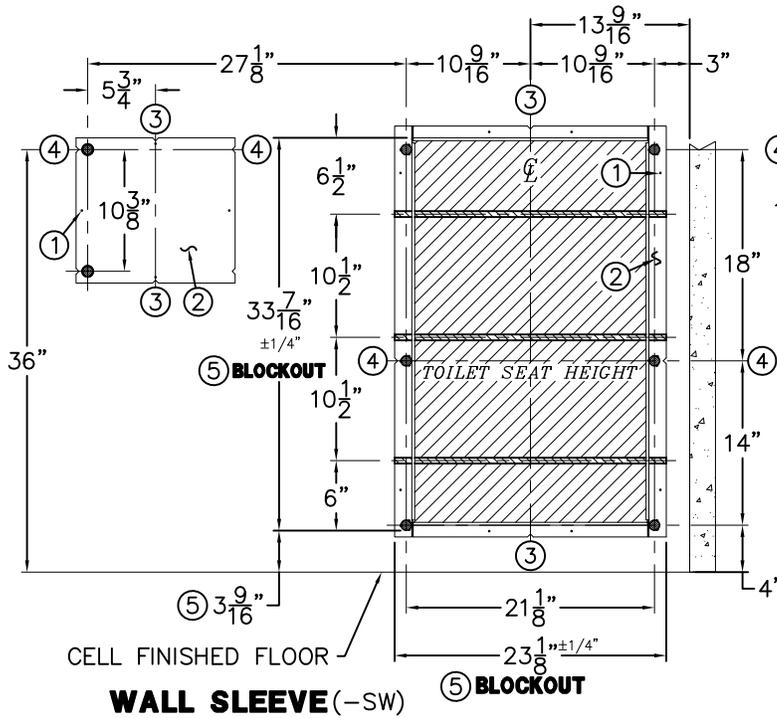


WALL SLEEVE (-SW)

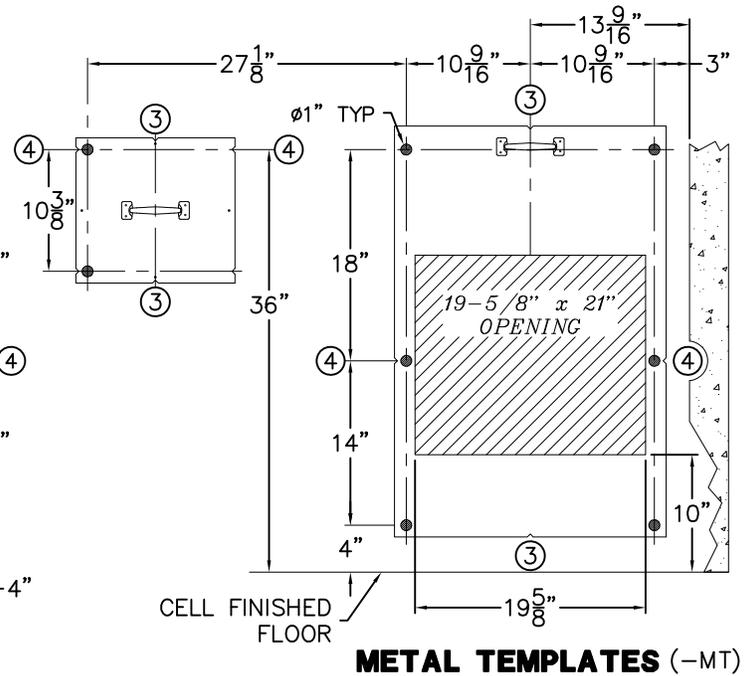

METAL TEMPLATES (-MT)

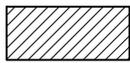

SHADED AREAS ARE REQUIRED WALL OPENINGS

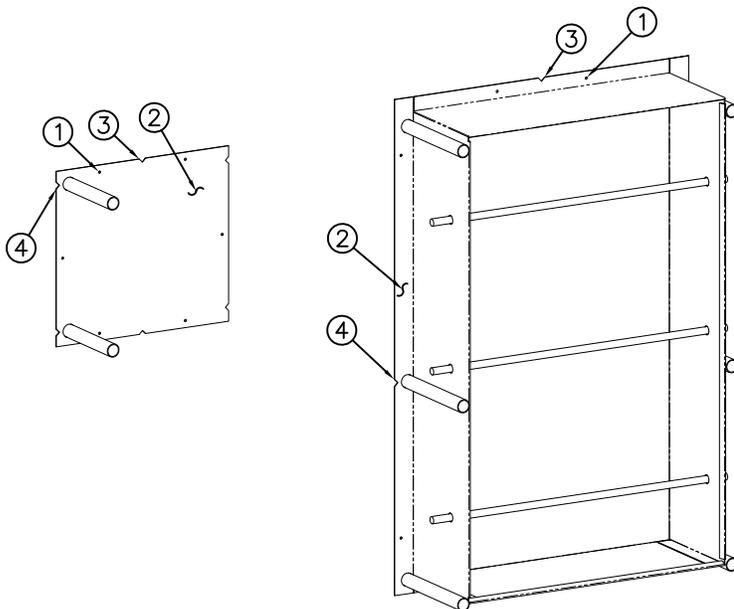

WALL SLEEVE

SLEEVES ARE INSTALLED IN FORMS (USING NAIL HOLES ① PROVIDED) OR GROUTED INTO BLOCK WALLS, BECOMING A PERMANENT PART OF WALL.

- A. INSTALL SLEEVE WITH FLANGE ② ON CHASE SIDE OF WALL.
- B. LOCATE TOP AND BOTTOM NOTCHES AT VERTICAL CENTERLINE ③ OF PLUMBING FIXTURE OR CENTERLINE OF SLEEVE PLATE.
- C. LOCATE SIDE HORIZONTAL NOTCHES ④ AT DIMENSIONS SHOWN, MEASURED FROM THE FINISHED FLOOR ON CELL (FIXTURE) SIDE .

NOTES:

- 1. FOR POURED WALL CONSTRUCTION, TEMPORARY BRACING SHOULD BE INSTALLED WITHIN SLEEVE OPENING TO PREVENT DEFORMATION TO SLEEVE WHICH MAY OCCUR DURING POUR. DO NOT POUR CONCRETE DIRECTLY ON TOP OF WALL SLEEVE.
- 2. WHEN SLEEVES ARE NOT AVAILABLE BLOCKOUT FOR SLEEVE OPENING IN WALL PER DIMENSIONS SHOWN ⑤.


METAL TEMPLATES (-MT)

TEMPLATES ARE USED TO LAYOUT REQUIRED WALL OPENINGS FOR SUBSEQUENT FLAME CUTTING OR CORE DRILLING.


- A. STRIKE A HORIZONTAL CHALKLINES ④ ON THE WALL AT DIMENSIONS SHOWN, MEASURED FROM THE FINISHED FLOOR ON CELL (FIXTURE) SIDE. THIS WILL LOCATE CENTERLINE FOR HORIZONTAL NOTCHES ON TEMPLATES.
- B. STRIKE A VERTICAL CHALKLINE ③ ON THE WALL AT DIMENSIONS SHOWN. THIS WILL LOCATE CENTERLINE FOR VERTICAL NOTCHES ON METAL TEMPLATE.
- C. PLACE TEMPLATE AGAINST WALL. LOCATE NOTCHES ALONG CHALKLINES. MARK WALL FOR REQUIRED OPENING.

ACORN ENGINEERING COMPANY
 P.O. BOX 3527 INDUSTRY, CA. 91744
 (626) 336-4561 FAX (626) 961-2200

TITLE (-SW) WALL SLEEVE & (-MT) METAL TEMPLATE 1452/LR1452		
MANUFACTURE DATE SEPTEMBER 2023	DATE ISSUED 09/01/23	DRAWING NUMBER 9925-023-001
TO PRESENT	DATE REVISED	

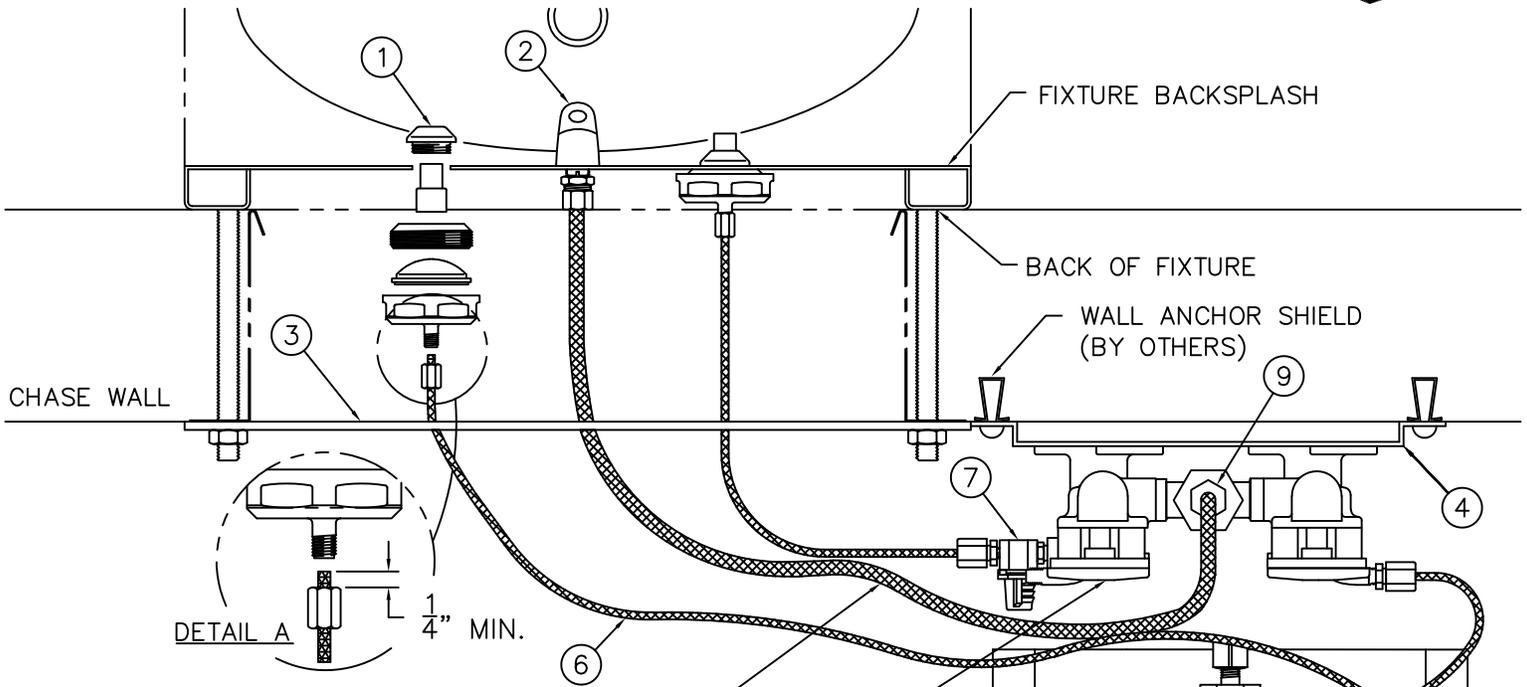

REFERENCE DRAWINGS	
ASSEMBLIES	NUMBER
VALVE BODY	9955-005-003
CHECKSTOP	9956-040-003
FIXTURE TRIM	9957-050-001
-PBH/BPH TRIM	9957-060-001
AIR-CONTROL SERVOMOTORS	
METERING	9955-000-003
NON-METERING	9955-001-003

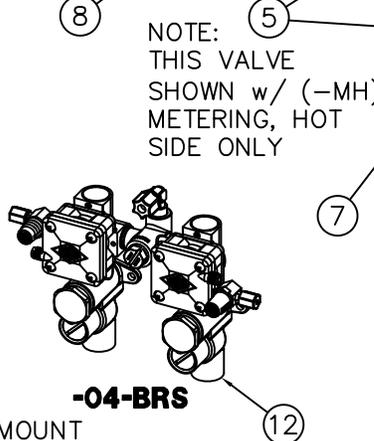

INSTALLATION INSTRUCTIONS:

- A- PRIOR TO INSTALLATION OF THE FIXTURE, MOUNT PUSHBUTTONS ① AND BUBBLER ② TO THE BACKSPLASH.
- B- INSTALL THE PLUMBING FIXTURE TO THE WALL INCLUDING UPPER SUPPORT PLATE ③.
- C- MOUNT THE AIR-CONTROL VALVE ASSEMBLY ④. LOCATE AS REQUIRED. MAXIMUM ALLOWABLE DISTANCE BETWEEN PUSHBUTTON ① AND AIR-CONTROL SERVOMOTOR ⑤ IS 10 FEET. WALL ANCHORING HARDWARE ARE BY OTHERS.
- D- CONNECT 1/8" O.D. POLYETHYLENE AIR LINES ⑥ TO PUSHBUTTONS ① AND SERVOMOTOR ⑤. HAND TIGHTEN USING FERRULE NUTS PROVIDED. SEE DETAIL A. NOTE: WHEN METERING VALVES ARE SPECIFIED, AIR LINES CONNECT DIRECTLY TO VALVE TIMER ⑦.
- E- CONNECT 1/4" O.D. POLYETHYLENE WATER LINE ⑧ TO BUBBLER ② AND COMPRESSION NUT ⑨. HAND TIGHTEN USING FERRULE NUTS PROVIDED.

NOTE:
 MAXIMUM RECOMMENDED WORKING WATER PRESSURE IS 100 PSI; TEMPERATURE IS 130° F; OUTLET TEMPERATURE IS RECOMMENDED AT A MAXIMUM OF 105° F.
 WARNING:
 PRIOR TO MAKING INSTALLATION, SUPPLY LINES MUST BE FLUSHED OF ALL FOREIGN MATERIAL SUCH AS PIPE DOPE, CHIPS, SOLDER, ETC. VALVE MUST BE DRAINED PRIOR TO BEING SUBJECTED TO FREEZING TEMPERATURES. MAXIMUM RECOMMENDED OUTLET WATER TEMPERATURE IS 105° F.


- F- AFTER THOROUGHLY FLUSHING THE SUPPLY LINES, MAKE-UP 1/2" NPS FEMALE SUPPLY CONNECTIONS. NOTE: SUPPLY INLET CONNECTION WILL ACCOMODATE 1/2" NPT MALE ADAPTER. THREAD FLEX CONNECTOR HOSE ⑩ TO CHECKSTOPS ⑪ AND TO SUPPLY STUB OUTS. FOR OPTIONAL -04-BRS BRASS BODY VALVE, MAKE UP CONNECTION TO CHECK STOPS ⑫.
- G- SEE APPROPRIATE SERVOMOTOR REFERENCE DRAWING FOR DETAILS AND TIMING INSRUCTIONS.



ACORN ENGINEERING COMPANY
 P.O. BOX 3527 Industry, CA 91744
 15125 Proctor Ave Industry, CA 91746
 (626) 336-4561 FAX (626) 961-2200

TITLE **(04-SERIES) HOT & COLD AIR-CONTROL VALVE ASSEMBLY - NEW STYLE**


MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
SEPT 1995	11/1/95	9905-000-003
TO PRESENT	DATE REVISED	
	11/18/13 F	

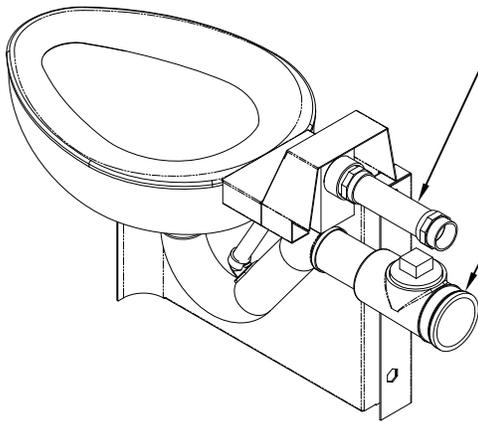

Optional -FVT Flush Valve Thru Wall Connection. Shown For Reference.

Optional -CO1 Waste Fitting. Shown For Reference.

REFERENCE DRAWING	
WASTE CONNECTION WITH CLEANOUT -CO1	9985-125-002

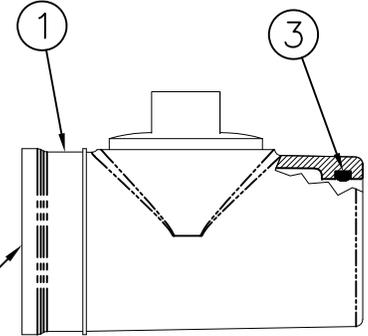


NOTE: Optional -CO1 Waste Fitting Available With 3" or 4" No-Hub

Scaled: X 2

Optional -FVT Flush Valve Thru Wall Connection Shown For Reference

Plain End Extends 3" Beyond Back Of Fixture. Optional Extended Waste Is Available -TWE

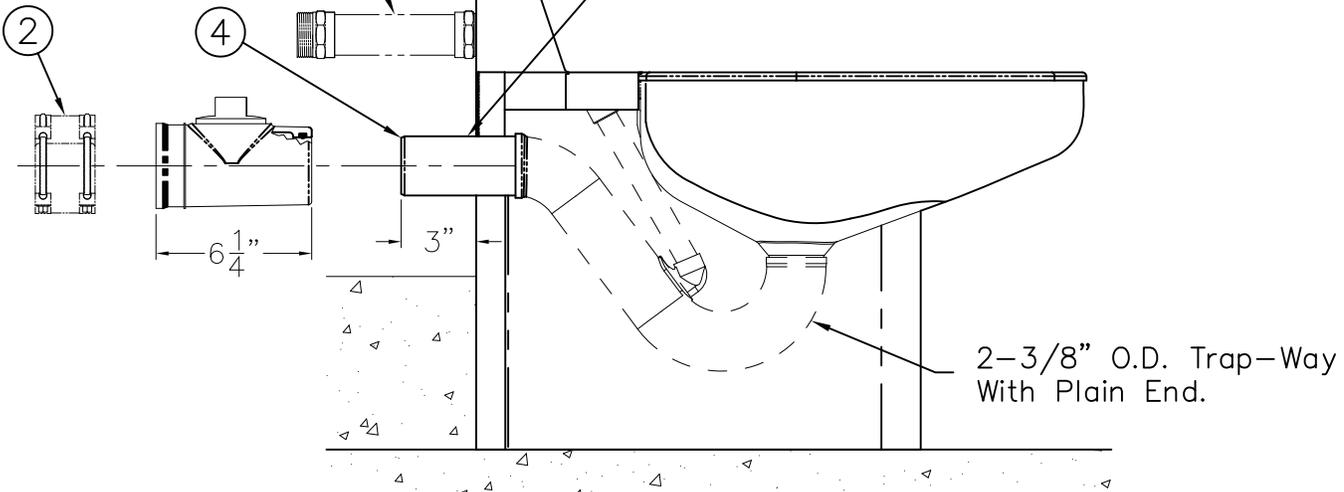

MODEL #1685 SHOWN FOR REFERENCE

INSTALLATION INSTRUCTIONS

A-INSERT O-RING ③ INTO GROOVE OF WASTE FITTING ①. LUBRICATE THE O-RING ③ WITH O-RING LUBRICANT.

B-INSTALL WASTE FITTING ① TO FIXTURE P-TRAP WASTE EXTENSION ④. ENGAGEMENT IS APPROXIMATELY 1-1/4". NOTE: TOILET WASTE

EXTENSION ④ IS 3" BEYOND BACK OF FIXTURE. LONGER WASTE EXTENSION IS AVAILABLE.

C-MAKE UP WASTE FITTING CONNECTION TO WASTE PIPING USING NO-HUB (BAND) CONNECTOR ② BY OTHERS.


ACORN ENGINEERING COMPANY
P.O. BOX 3527 INDUSTRY, CA. 91744
(626) 336-4561 FAX (626) 961-2200

TITLE		
NO-HUB WASTE CONNECTION WITH CLEANOUT -CO1		
MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
JULY 1975	1/29/96	9925-054-001
PRESENT	DATE REVISED 11/08/13 D	



REFERENCE DRAWINGS	
ASSEMBLIES	NUMBER
-LW1 LAVY WASTE THRU WALL EXTENSION	9985-300-002

DIMENSION "A"	
UP TO 8" WALL	8" TO 12" WALL
15-1/8"	19-1/8"

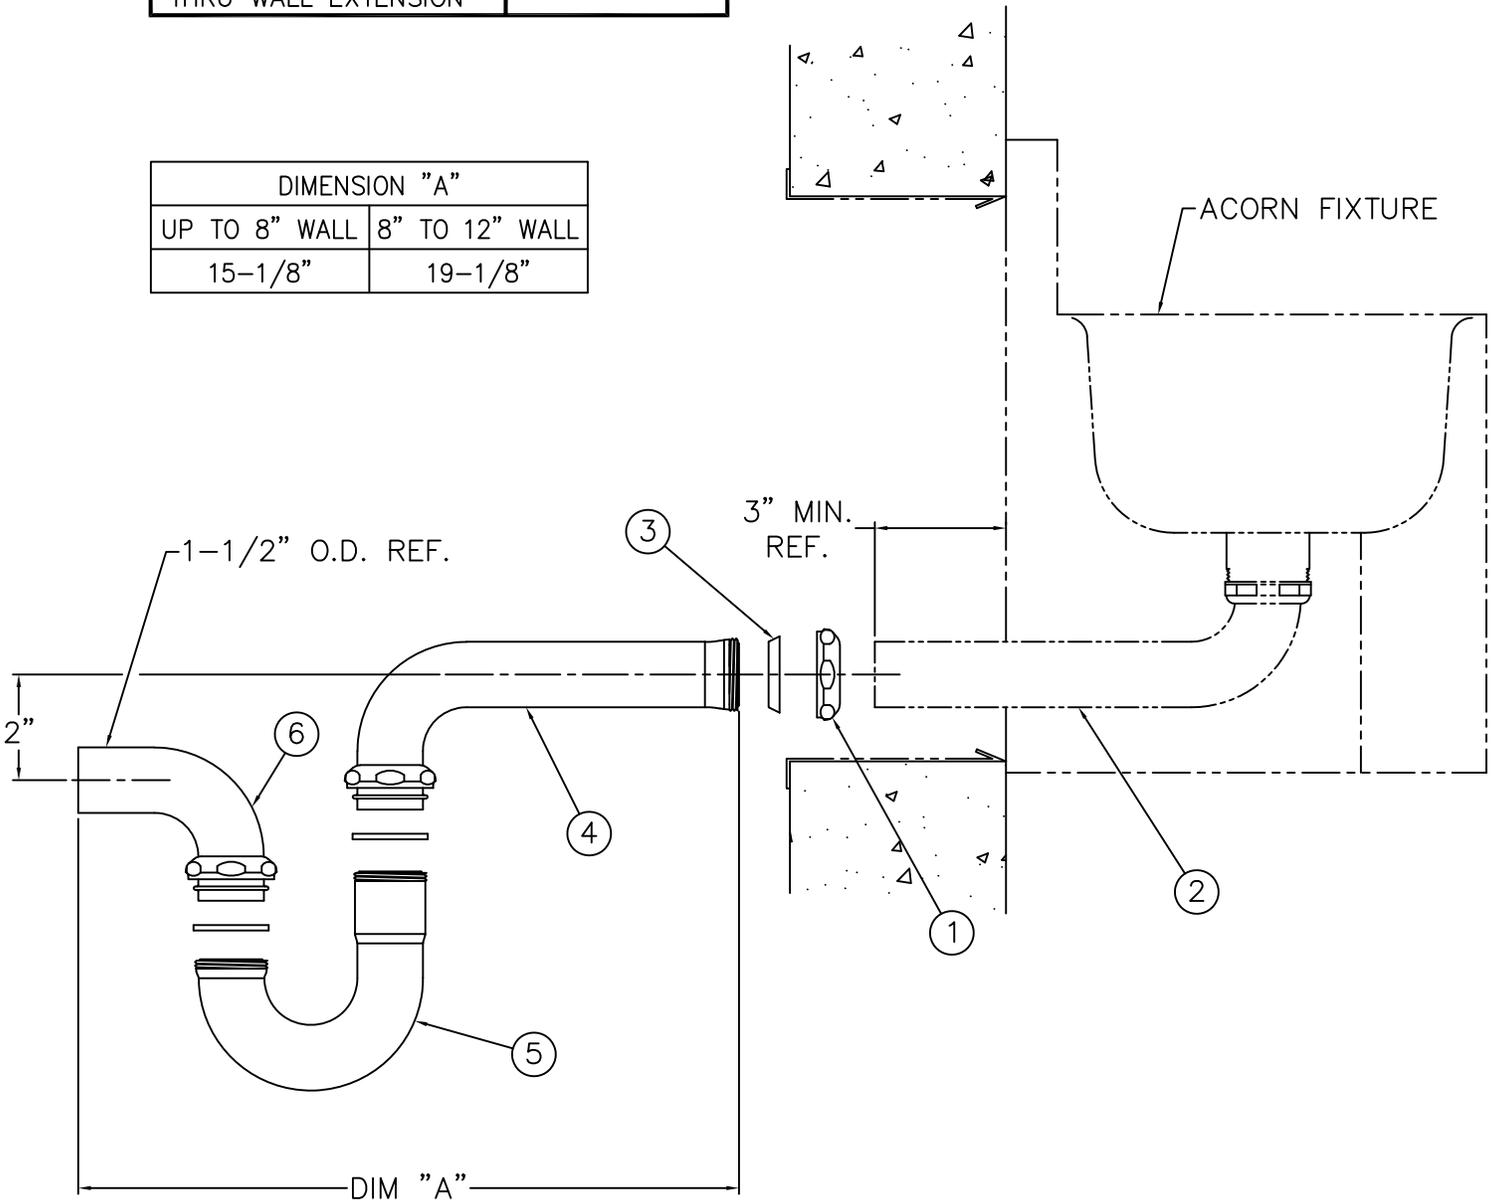

INSTALLATION INSTRUCTIONS:

A- AFTER INSTALLING ACORN UNIT ON FINISHED WALL, SLIP COMPRESSION NUT ① OVER 1-1/2" O.D. PLAIN END WASTE ②. USING COMPRESSION GASKET ③, AND NUT ① MAKE-UP COMPRESSION CONNECTION WITH SLIP JOINT ELBOW ④.



B- REMOVABLE TUBULAR P-TRAP ⑤ CONNECTS TO SLIP JOINT ELBOW ④ AND PLAIN END ELBOW ⑥ WITH COMPRESSION CONNECTIONS AS SHOWN.

NOTE: TUBULAR P-TRAP IS REMOVABLE IN ORDER TO ALLOW FOR WASTE CLEANOUT.




ACORN ENGINEERING COMPANY
 P.O. BOX 3527 Industry, CA 91744
 15125 Proctor Ave Industry, CA 91746
 (626) 336-4561 FAX (626) 961-2200

TITLE LAVATORY THRU-WALL WASTE CONNECTION w/ P-TRAP & CLEANOUT CAT. # -LW1		
MANUFACTURE DATE APRIL 30, 1998 TO PRESENT	DATE ISSUED 3/19/98	DRAWING NUMBER 9925-065-002
	DATE REVISED 04/26/23	

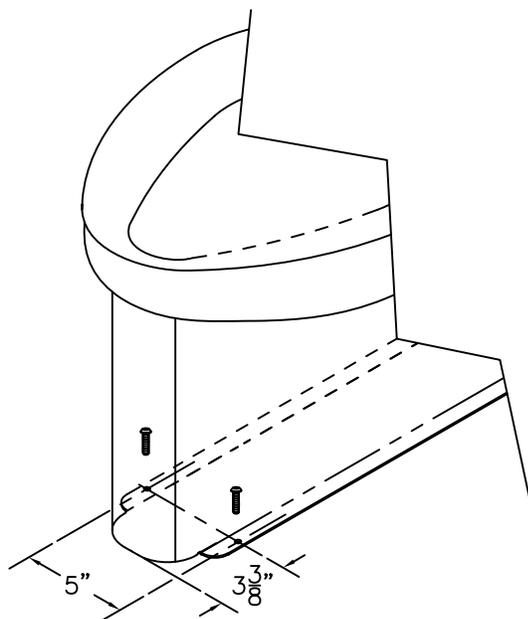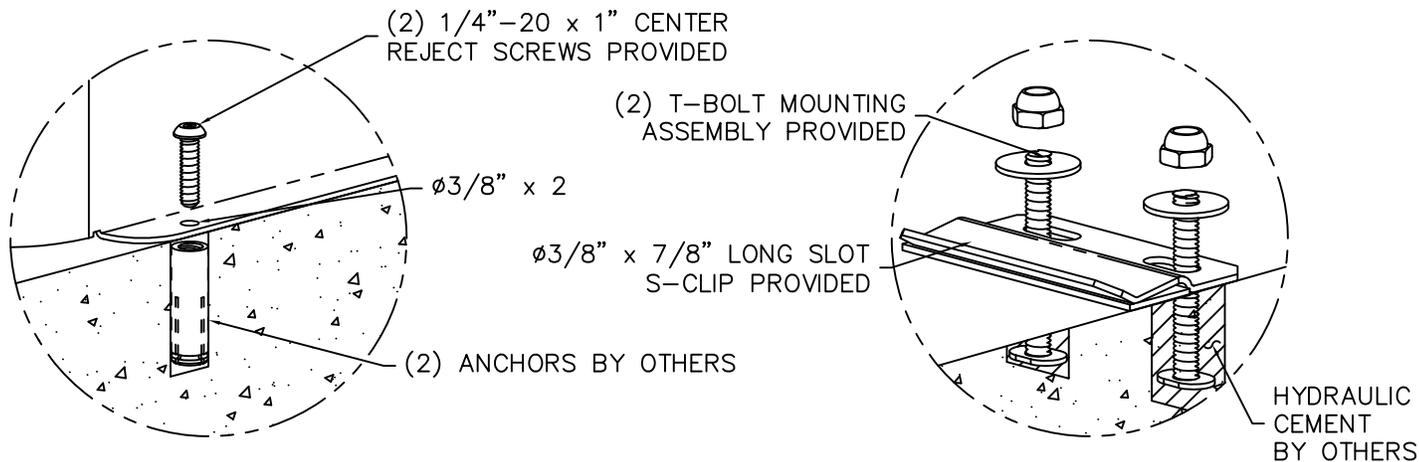

FLANGE MOUNTING

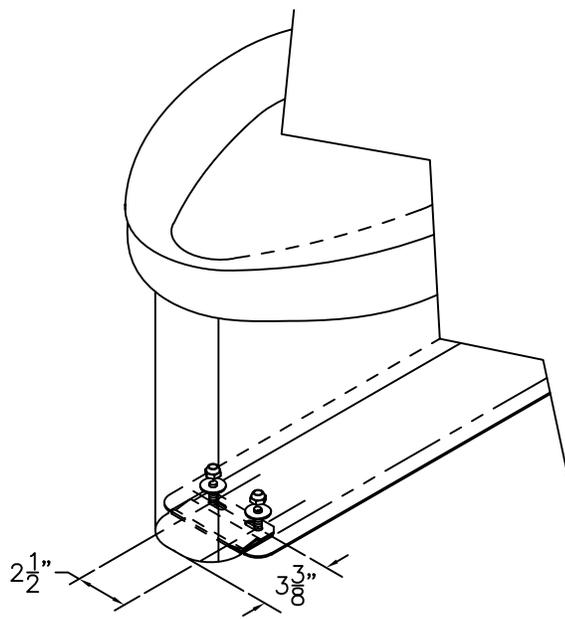

S-CLIP MOUNTING

—SS—SPS SUICIDE RESISTANT SKIRT OPTION IS PROVIDED WITH ADDITIONAL MOUNTING POINTS NOT NORMALLY PROVIDED WITH OUR STANDARD FIXTURES AND COME IN TWO STYLES AS INDICATED BELOW.

FIXTURES w/ FLANGE MOUNTING:

- A—AFTER ROUGHING IN AS REQUIRED, PLACE FIXTURE IN POSITION AND USE AS TEMPLATE TO LOCATE AND MARK FLANGE POINTS ON FLOOR.
- B—REMOVE FIXTURE AND INSTALL FLOOR ANCHORS BY OTHERS FOR 3/8" DIAMETER FLANGE PUNCHING.
- C—ALIGN WALL AND FLOOR ANCHORING POINTS AND COMPLETE FIXTURE INSTALLATION AS INDICATED BY THE FIXTURE INSTALLATION SHEET PROVIDED.

FIXTURES w/ S-CLIP:

- A—AFTER ROUGHING IN AS REQUIRED, PLACE FIXTURE IN POSITION AND USE AS A TEMPLATE TO LOCATE AND MARK S-CLIP MOUNTING LOCATION ON FLOOR AS INDICATED.
- B—REMOVE FIXTURE, INSTALL T-BOLTS FOR S-CLIP 3/8" x 7/8" LONG MOUNTING SLOTS AND SECURE WITH HYDRAULIC CEMENT (BY OTHERS)
- C—INSTALL S-CLIP
- D—PLACE FIXTURE ON FLOOR POSITIONING THE "NOSE" OF THE SKIRT SEVERAL INCHES IN FRONT OF S-CLIP MOUNTING LOCATION, SLIDE FIXTURE INTO PLACE ENGAGING THE S-CLIP AND ALIGNING WALL MOUNTING LOCATIONS. COMPLETE FIXTURE INSTALLATION AS INDICATED BY THE FIXTURE INSTALLATION SHEET PROVIDED.



ACORN ENGINEERING COMPANY
P.O. BOX 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
(626) 336-4561 FAX (626) 961-2200

TITLE **-SPS MOUNTING DETAIL**

MANUFACTURE DATE
AUGUST 2012
TO PRESENT



DATE ISSUED
08/15/12
DATE REVISED
11/05/13 A

DRAWING NUMBER
9925-007-001



REFERENCE DRAWINGS

FASTENERS	9951-005-001
DRIVERS & BITS	9951-001-002

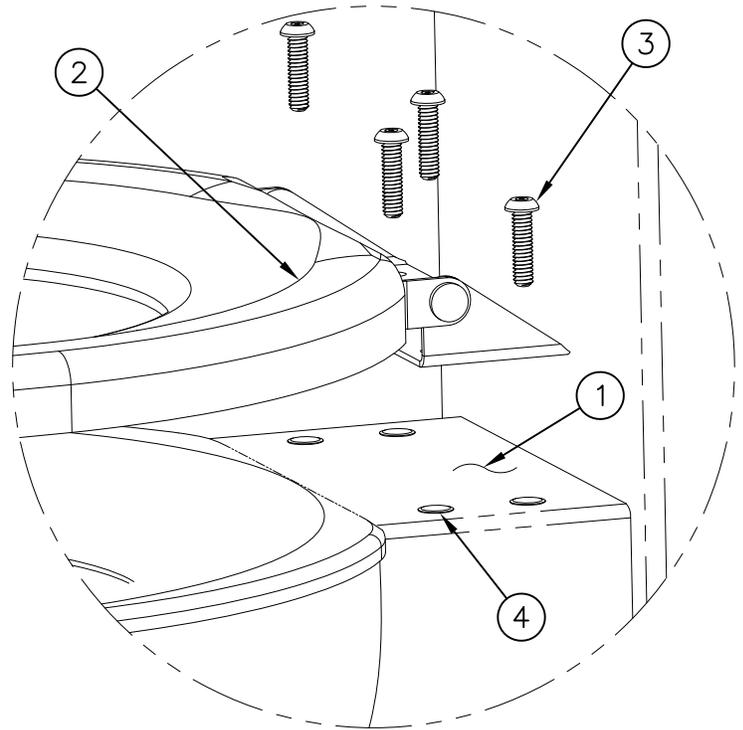
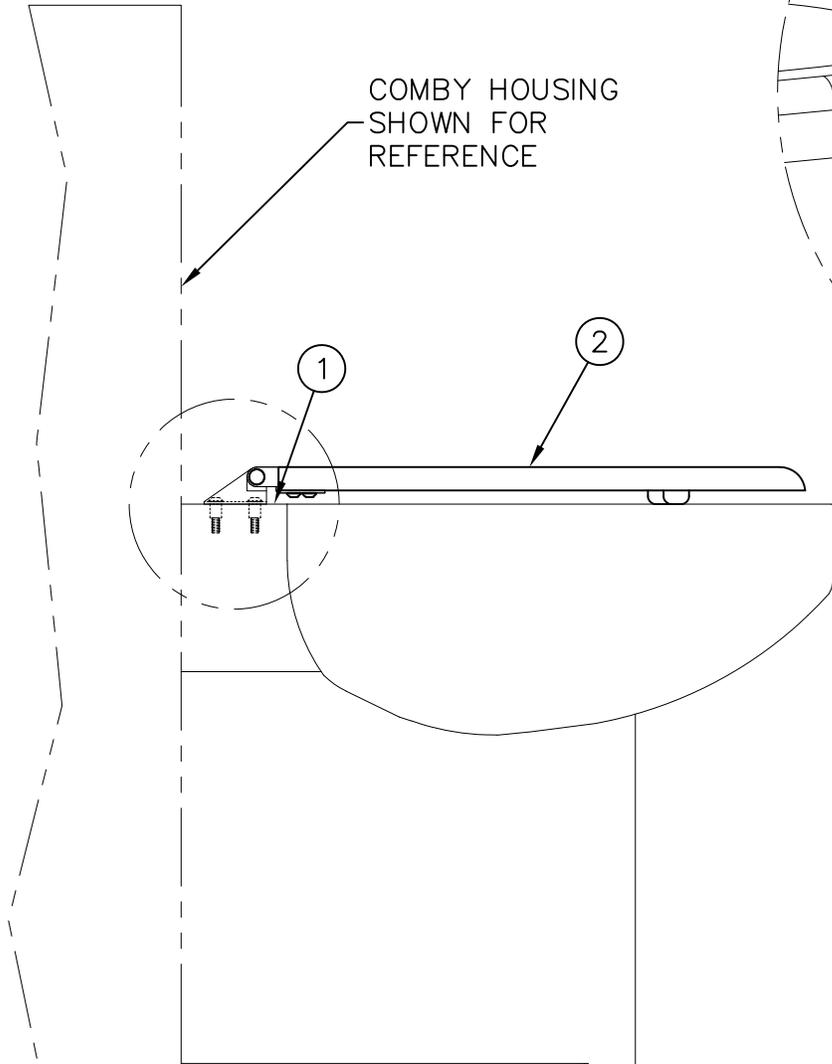


INSTALLATION INSTRUCTIONS:


- A- LOCATE HINGED SEAT MOUNTING HOLES ON FIXTURE TENSION MEMBER ①.
- B- POSITION HINGED SEAT ② ON TENSION MEMBER ① AND START SCREWS ③ INTO THREADED INSERTS ④. SEE MOUNTING DETAIL.
- C- TIGHTEN SCREWS ③

ACORN ENGINEERING COMPANY P.O. BOX 3527 INDUSTRY, CA. 91744 (626) 336-4561 FAX (626) 961-2200	TITLE -HS HINGED SEAT OPTION INSTALLATION DETAIL - ADA COMBYS		
	MANUFACTURE DATE FEBRUARY 1999 TO PRESENT	DATE ISSUED 03/15/11 DATE REVISED 08/13/12	DRAWING NUMBER 9925-266-001

SIDE OUTLET SHOWN

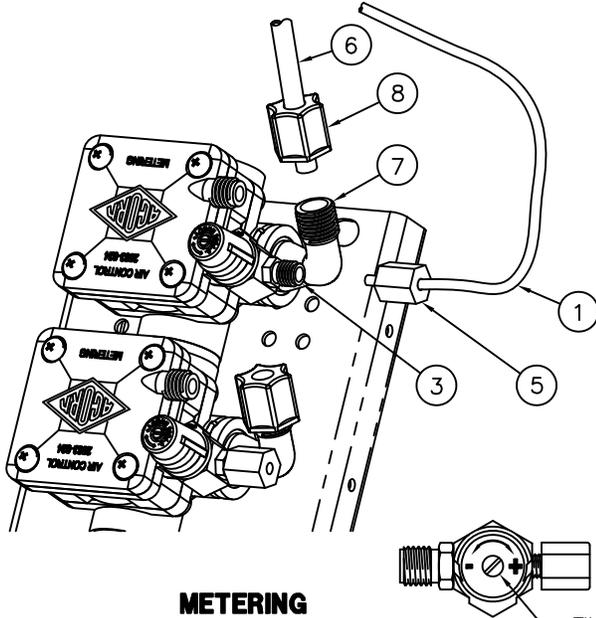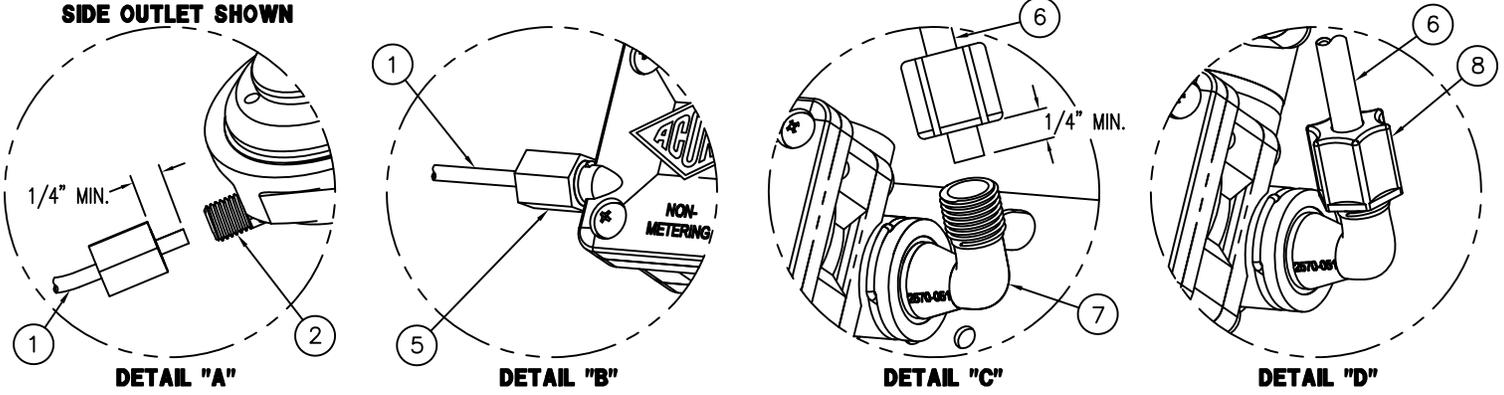

METERING

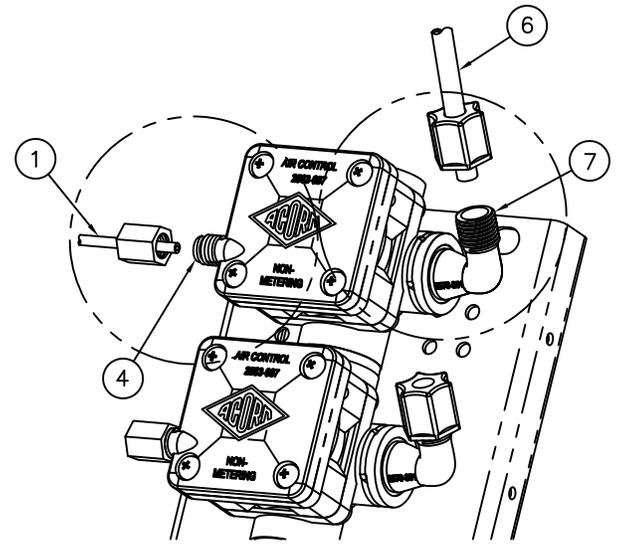

**NON-METERING
DIRECT ACTING**

LAVATORY VALVES ARE FACTORY PRESET WITH A 5-20 SECOND RUN TIME. THIS WILL PROVIDE LESS THAN 1/4 GALLON (1 LITER) PER CYCLE. IF IT IS NOTED THAT VALVES ARE RUNNING LONGER THAN THIS MAXIMUM RECOMMENDED CYCLE TIME PLEASE FOLLOW THESE INSTRUCTIONS TO CORRECT THE CYCLE TIME. WHEN SET, FAUCET SHOULD NOT PRODUCE MORE THAN 1/4 GALLON (1 LITER) PER CYCLE.

TIMING IS ADJUSTABLE FROM 5 TO 60 SECONDS AND IS ACCOMPLISHED BY ROTATING TIMING SCREW. TURNING THE SCREW CLOCKWISE INCREASES TIMING WHILE COUNTERCLOCKWISE DECREASES TIMING.

TIMING SCREW

INSTALLATION INSTRUCTIONS:

- A- MOUNT FIXTURE IN ACCORDANCE TO MANUFACTURER'S INSTALLATION INSTRUCTIONS.
- B- ASSEMBLE SPOUTS AND PUSHBUTTONS TO FIXTURE.
- C- CONNECT 1/8" O.D. POLYETHYLENE AIR LINE ① TO PUSHBUTTON ②, AND VALVE TIMER ASSEMBLY ③ SEE DETAIL "A". NOTE: FOR DIRECT ACTING: ASSEMBLE TO AIR PORT ④, SEE DETAIL "B". HAND TIGHTEN FERRULE NUT ⑤ PROVIDED.
- D- CONNECT 1/4" O.D. POLYETHYLENE WATER LINES ⑥ TO VALVE ASSEMBLY ELBOW ⑦ SEE DETAILS "C", AND "D". HAND TIGHTEN FERRULE NUT ⑧ PROVIDED.
- E- AFTER THOROUGHLY FLUSHING SUPPLY LINES MAKE UP CONNECTIONS TO VALVE ASSEMBLY INLET(S) 1/2" NPT OR 1/2" NPS FLEX HOSE AS REQUIRED.

REFERENCE DRAWINGS

ASSEMBLIES	DRAWING
VALVE BODY	9955-006-003
CHECKSTOP	9956-040-003
FIXTURE TRIM	9957-051-001
FIXTURE TRIM -DMS	9957-055-001
AIR-CONTROL SERVOMOTORS	
METERING	9955-000-003
NON-METERING	9955-001-003

NOTE:

- 1) ALL TUBING SHOULD BE CUT SQUARE AND BE FREE OF BURRS OR DEFORMITIES TO ENSURE A WATER TIGHT CONNECTION.
- 2) EXTEND TUBING AT LEAST 1/4" BEYOND FERRULE NUT BEFORE INSERTING TUBING INTO CONNECTION OPENING BEFORE TIGHTENING.
- 3) TUBING SHOULD BE FREE OF KINKS FOR PROPER OPERATION
- 4) MAXIMUM RECOMMENDED WORKING WATER PRESSURE IS 100 PSI; TEMPERATURE IS 130° F; OUTLET TEMPERATURE IS RECOMMENDED AT A MAXIMUM OF 105° F.

WARNING:

PRIOR TO MAKING INSTALLATION, SUPPLY LINES MUST BE FLUSHED OF ALL FOREIGN MATERIAL SUCH AS PIPE DOPE, CHIPS, SOLDER, ETC. VALVE MUST BE DRAINED PRIOR TO BEING SUBJECTED TO FREEZING TEMPERATURES. MAXIMUM RECOMMENDED OUTLET WATER TEMPERATURE IS 105° F.

MORRIS GROUP INTL
P.O. BOX 3527 Industry, CA 91744
MORRIS GROUP 15125 Proctor Ave Industry, CA 91746
INTERNATIONAL (626) 336-4561 FAX (626) 961-2200

TITLE HAND OPERATED, LAVATORY AIR-CONTROL VALVE CONNECTIONS

MANUFACTURE DATE
**JANUARY 1999
TO PRESENT**

DATE ISSUED
04/22/10
DATE REVISED
11/18/15

DRAWING NUMBER
9905-006-001