



## Whitehall Surgical Scrub sink One Station

Model 4101

Please visit [www.whitehallmfg.com](http://www.whitehallmfg.com)  
for most current specifications.



4101-PDM

Fixture May Show Some Available Options

**Surgical Scrub Sink** is designed for use in health care institutions providing surgeons with a convenient sink for pre-op scrub up.

**Fixture** is fabricated from heavy gage, type 304 stainless steel and is seamless welded construction polished to a satin finish. The cabinet interior is sound-deadened with a fire-resistant material.

**Fixture Mounting:** Scrub Sink unit is designed to be wall hung or supported on the floor. Specify optional -MC Wall Mounted Support Carrier or -PB Stainless Steel Pedestal Base for Floor mounting. (-MC Mounting Carrier requires appropriate wall depth to accommodate.)

**Scrub Sink** is provided with front panels which are easily removed for access to the water control valve and waste connection. Scrub sink has a sloping bottom surface to minimize splashing and a 1-1/2" OD tailpiece with a 3" flat strainer drain.

**Backsplash** has a gooseneck spout assembly with a 1-1/2" sprayhead that can be removed for sterilization. Spout outlet does not project directly into flat strainer drain.

**T/P Temperature/Pressure Balancing Mixing Valve Control** is located on the control panel and maintains a constant water temperature with a flow control of 2.5 GPM. This easily adjustable, anti-scald valve will automatically shut off if the hot or cold water supply fails. Valve is equipped with internal check stops for servicing and to prevent backflow.

**Water Supply Valve** is a mechanical pilot type, actuated by one depression of a knee-operated front panel and turned off by a second depression. Optional -ETC Electronic Timing Controller or -SO Sensor Operation available in lieu of Knee Operation.

**Optional -EFW Eye/Face Wash** provides a Safety Manufacturing™ Model S0660 Series Swing Down Eye-Face Wash within Sink Trough and includes Factory installed Controls® Model ET71-1-BVS-OTG Safety Mixing Valve with Temperature Gauge and Stop Valves.

**Models with -EFW Option** comply with USP 800, Section 5.3 Eyewash Station Requirements.

### GUIDE SPECIFICATION

Provide Whitehall One Station Surgical Scrub Sink (specify model number and options) 32" wide. Fixture shall be fabricated from heavy gage, type 304 stainless steel, with seamless welded construction polished to a satin finish. Cabinet interior shall have a sound-deadening, fire-resistant material. Cabinet shall also have removable panels to allow access to water control valve, waste connection, stops and strainer. Sink shall have a sloping bottom to minimize splashing, and a 3" flat strainer drain. Gooseneck spout shall have a removable 1-1/2" sprayhead. Fixture shall have a T/P temperature/pressure balancing mixing valve which is easily adjustable at the control panel. Manufacturer shall provide necessary installation instructions.

Please visit [www.whitehallmfg.com](http://www.whitehallmfg.com)  
for most current specifications.



Complies with the following standards:



UL 1951  
CSA C22.2 Nos. 14 & 68





**BASE MODEL NUMBER**

- 4101 Surgical Scrub Sink (1 Station)

**MOUNTING (Must Specify)**

- MC Mounting Carrier (Off-Floor Installation)
- PB Pedestal Base (On-Floor Installation)


**Product Options**

- DTD Digital Time Display
- ETC Electronic Timing Controller (In lieu of Knee Operation)
- EFW Eye/Face Wash  
**NOTE:** When specified, ET71-1-BVS-OTG Emergency Mixing Valve will be provided
- LFN Laminar Flow Nozzle
- PDM Metering Liquid Soap Dispenser
- SFS Soap Flush System
- SO Sensor Operation (In lieu of Knee Operation)
- SS Storage Shelf
- SWV Swivel Nozzle on Gooseneck

**Accessories**


An appropriate Chronomite Instantaneous Tankless Water Heater may be purchased separately to ship with your scrub sink. Contact your sales rep for details or visit [www.chronomite.com](http://www.chronomite.com)

Please visit [www.whitehallmfg.com](http://www.whitehallmfg.com) for most current specifications.

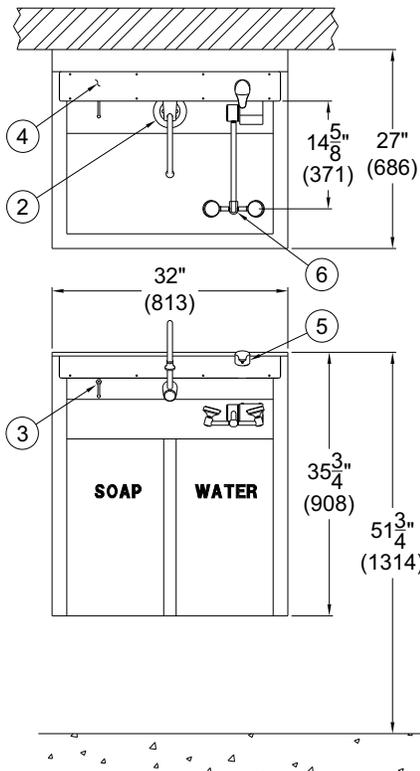

**NOTES:**

1. Gooseneck Spout Assembly
2. Flat Strainer Drain
3. Optional -PDM Soap Dispenser
4. Control Panel
5. T/P Mixing Valve
6. Optional -EFW Eye/Face Wash

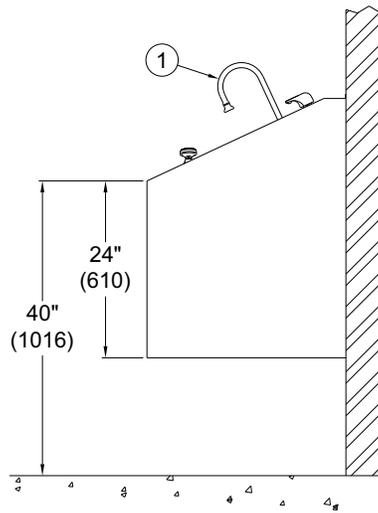

MODEL# 4101-EFW-LFN-PDM

**⚠ WARNING: Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)**

**SELECTION SUMMARY & APPROVAL FOR MANUFACTURING**

Model Number & Options \_\_\_\_\_ Quantity \_\_\_\_\_  
 Company \_\_\_\_\_ Date \_\_\_\_\_  
 Contact \_\_\_\_\_ Title \_\_\_\_\_  
 Approval for Manufacturing/Signature \_\_\_\_\_

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or suspended data © Whitehall Manufacturing, Member of Morris Group International. Please visit [www.whitehallmfg.com](http://www.whitehallmfg.com) for most current specifications.