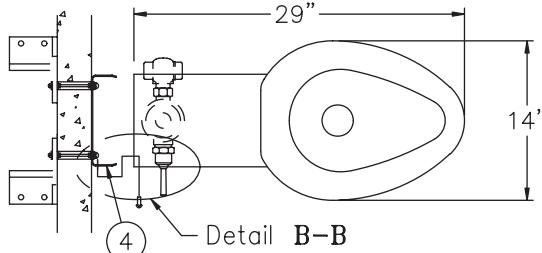
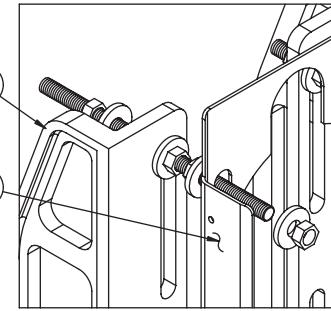
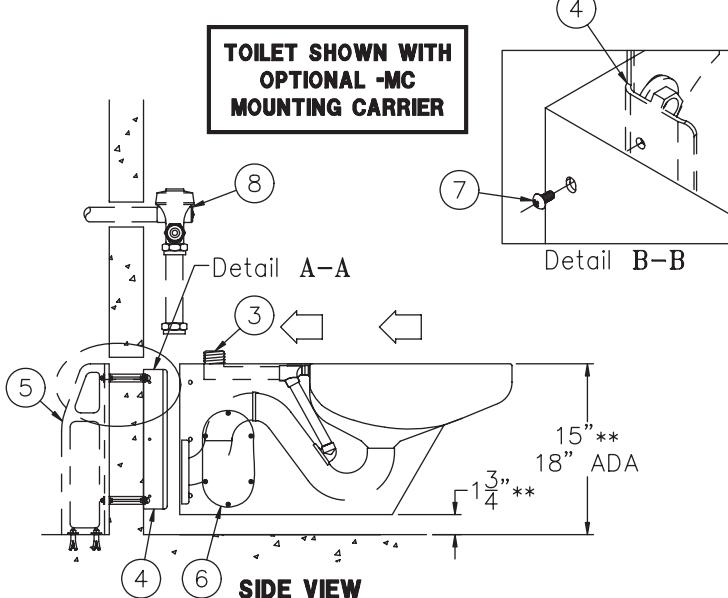
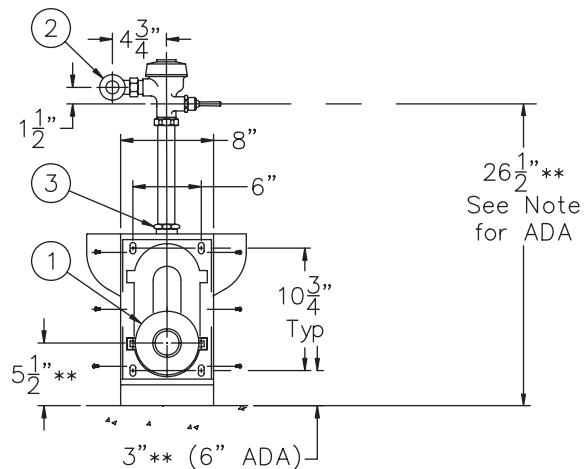


NOTE: USE ONLY APPROPRIATE UPC/cUPC CERTIFIED FLUSH VALVES FOR THIS FIXTURE.  
 NOTE: IN-WALL CARRIER IS INTENDED FOR CONCRETE FLOOR INSTALLATION. FOR OTHER FLOOR TYPES CONTACT CARRIER MANUFACTURER.


**TOP VIEW**

**Detail A-A**

**SIDE VIEW**

**VIEW FROM BACK OF FIXTURE**
**INSTALLATION INSTRUCTIONS:**

A—ROUGH-IN FOR THE FOLLOWING:

- 5-1/2" DIAMETER RECESSED GASKET FLANGE ①.
- FLUSH VALVE INLET 1" NPT ②.
- FIXTURE FLUSHING INLET 1-1/2" NPT ③.

B—UNITS LESS CARRIER: ON FIXTURE SIDE OF REINFORCED WALL, INSTALL WALL ANCHORS BY OTHERS MATCHING MOUNTING LOCATIONS AS INDICATED. SECURE MOUNTING CHANNEL ④ TO WALL WITH INSTALLER PROVIDED HARDWARE.

C—UNITS WITH CARRIER LEGS: FOLLOW MANUFACTURER'S INSTALLATION REQUIREMENTS FOR YOUR CARRIER ⑤. SECURE MOUNTING CHANNEL ④ TO CARRIER WITH HARDWARE PROVIDED WITH YOUR CARRIER. SEE DETAIL A-A.

D—REMOVE ACCESS PANELS ⑥ AND SET ASIDE. WHILE HOLDING INSTALLER PROVIDED WASTE GASKET IN PLACE, ALIGN WASTE OUTLET CONNECTIONS &amp; SECURE FIXTURE HOUSING TO MOUNTING CHANNEL LOOSELY WITH 1/4-20 SCREWS ⑦ PROVIDED.

E—TIGHTEN WASTE CONNECTIONS THRU ACCESS OPENINGS AND REPLACE ACCESS PANELS ⑥.

F—TIGHTEN 1/4-20 SCREWS ⑦ SECURING FIXTURE TO MOUNTING CHANNEL ④. SEE DETAIL B-B.

G—FOR OPTIONAL -FV FLUSH VALVE: CONNECT FLUSH ⑧ AS REQUIRED FOR EXPOSED INSTALLATIONS PER MANUFACTURER'S RECOMMENDATIONS.

NOTE: FOR -ADA UNITS REFER TO ADA ACCESSIBILITY GUIDELINES FOR COMPLETE INSTALLATION REQUIREMENTS.

1—ALL VERTICAL DIMENSIONS INDICATED\*\* INCREASE PROPORTIONATELY WITH ADA SEAT HEIGHT: FOR ADA 18" SEAT HEIGHT, WASTE OUTLET BECOMES 8-1/2".

2—FLUSH VALVE MUST BE HYDRAULICALLY ACTUATED OR SUPPLIED WITH AN ADA HANDLE. MAX CONTROL HEIGHT IS 44" ABOVE FINISHED FLOOR.


 NEO-METRO®  
 P.O. BOX 3527 INDUSTRY, CA. 91744  
 (800) 591-9050 \* (626) 855-4854  
 FAX (626) 937-4725 WWW.NEO-METRO.COM

 TITLE **TOP SUPPLY, SIPHON, OFF-FLOOR, WALL OUTLET TOILET - #8955-T-1**

MANUFACTURE DATE

 SEPTEMBER 2001  
 TO PRESENT

DATE ISSUED

09/05/01

DATE REVISED

04/16/08

DRAWING NUMBER

9935-032-001