




REFERENCE DRAWINGS			
SHOWER HEAD	9970-000-003	DIVERTER	9975-080-002
VALVE CONNECTION	9905-006-001	T/P VALVE(SHOWN)	9975-005-002
AIR-VALVE BUTTON	9957-300-001	T/P VALVE ADJUST	9900-007-001
-M SERVOMOTOR	9955-000-003	HANDSHOWER	9970-102-003

REFER TO ACCESSIBILITY GUIDELINES FOR COMPLETE INSTALLATION REQUIREMENTS. THIS FIXTURE COMPLIES WITH CBC REQUIREMENTS AND ADA ACCESSIBILITY GUIDELINES WHEN INSTALLED CORRECTLY. *ADA/CBC DIM SHOWN IS ROLL-IN STALL WITH SEAT.

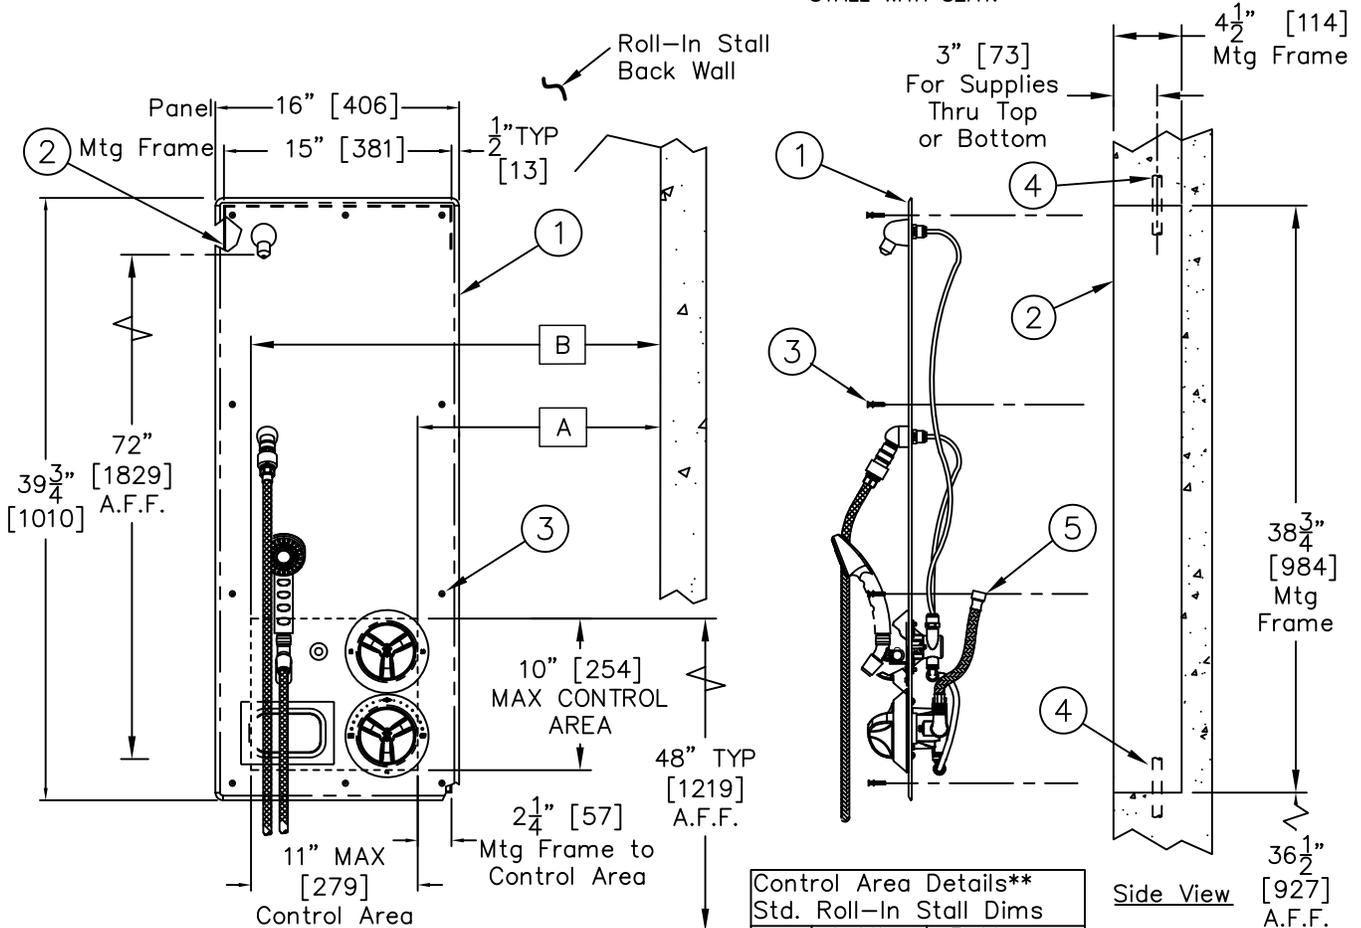

Model # 1741CBCFA-8MV-R Shown

**RIGHT HAND VALVE ORIENTATION SHOWN
LEFT HAND VALVE ORIENTATION OPPOSITE**

**ADA dim shown is Roll-In Stall with Seat. Refer to Guidelines for complete details.

INSTALLATION INSTRUCTIONS:

NOTE: Panel and Frame location remain the same for units with -FH-PY options.

- A- DISASSEMBLE SHOWER PANEL ASSEMBLY ① FROM WALL MOUNTING FRAME ② BY REMOVING VANDAL RESISTANT SCREWS ③ FROM THE PANEL.
- B- INSTALL MOUNTING FRAME ②. FRAME BOTTOM MUST BE AT 36-1/2" ABOVE FINISHED FLOOR WITH THE FACE FLUSH WITH THE FINISHED WALL.
- C- PROVIDE SUPPLY ROUGH-INS ④ IN THE LOCATION INDICATED THROUGH TOP OR BOTTOM.

- D- THOROUGHLY FLUSH WATER SUPPLY INLETS. MAKE UP SUPPLY CONNECTIONS TO 1/2" NPS ⑤ END INLETS WHILE SUPPORTING PANEL OFF THE FLOOR. NOTE: SUPPLY INLET CONNECTION WILL ACCOMMODATE A 1/2" NPT MALE ADAPTER.
- E- ASSEMBLE THE SHOWER PANEL ① TO THE MOUNTING FRAME ② USING SCREWS PROVIDED.

WARNING:

PRIOR TO COMPLETING INSTALLATION SUPPLY LINES MUST BE FLUSHED OF ALL FOREIGN MATERIAL SUCH AS PIPE DOPE, CHIPS SOLDER ETC. VALVE MUST BE DRAINED PRIOR TO BEING SUBJECTED TO FREEZING TEMPERATURES.

NOTE:

MAXIMUM RECOMMENDED WORKING PRESSURE IS 100 PSI, 130° F INLET TEMPERATURE & 105° F MAXIMUM OUTLET TEMPERATURE.

<p>ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE FRONT ACCESS PENAL-PAK CBC SHOWER, 1741CBCFA SERIES</p>		
	<p>MANUFACTURE DATE</p> <p>JAN 2022</p> <p>TO PRESENT</p>	<p>DATE ISSUED</p> <p>3/9/2023</p> <p>DATE REVISED</p>	<p>DRAWING NUMBER</p> <p>9925-129-001</p>