



**-T TOP SUPPLY  
VIEW IS FROM REAR OF FIXTURE**

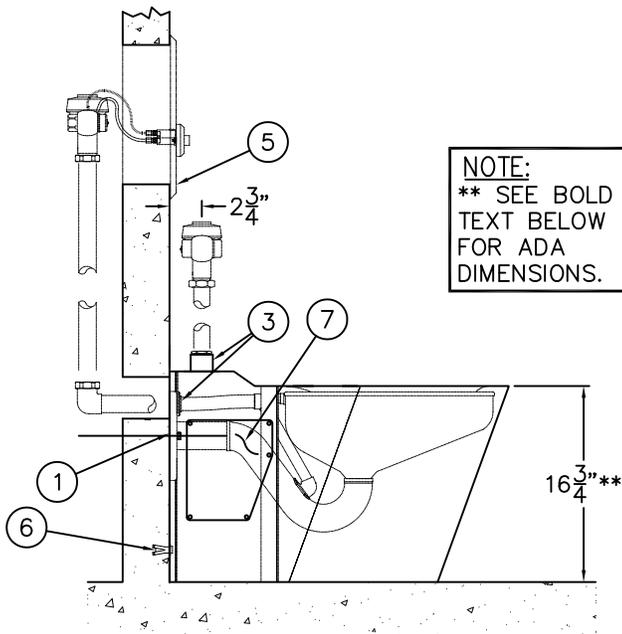

**NOTE:**  
\*\* SEE BOLD TEXT BELOW FOR ADA DIMENSIONS.

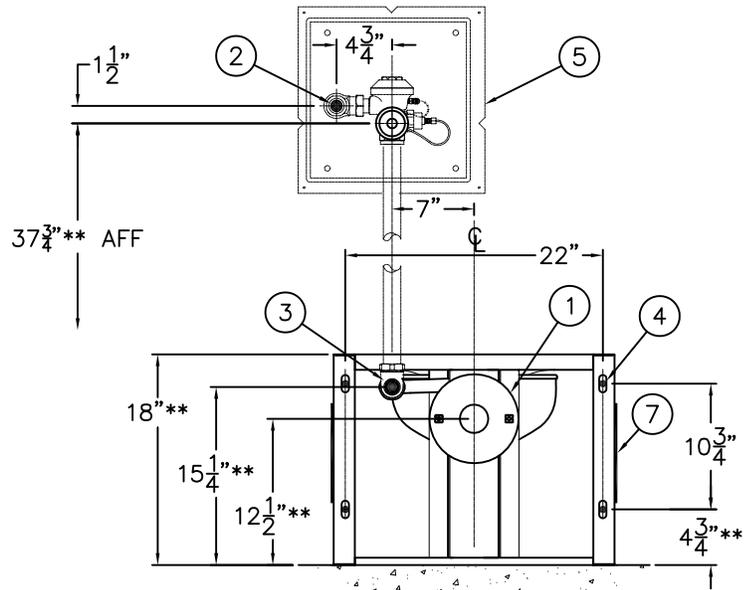

**-W-FVR WALL SUPPLY, FLUSH VALVE RIGHT SHOWN  
-W-FVL WALL SUPPLY, FLUSH VALVE LEFT OPPOSITE  
VIEW IS FROM REAR OF FIXTURE**

**INSTALLATION INSTRUCTIONS:**

- A- ROUGH-IN FOR THE FOLLOWING:
  - 7-1/2" RECESSED GASKET FLANGE ①.
  - FLUSH VALVE INLET 1" NPT ②.
  - FIXTURE FLUSHING INLET 1-1/2" NPT ③.
  - WALL & FLOOR ANCHORS AT LOCATIONS INDICATED ④. WALL & FLOOR ANCHORS BY OTHERS.
- B- FOR DURA-WARE FLUSH VALVE ACCESS PANELS ⑤, FOR CONCEALED FLUSH VALVE INSTALLATION REFER TO DRAWING #9908-399-001.
- C- LOCATE AND PROVIDE ANCHORING POINTS ④ AS INDICATED TO REINFORCED WALL. WALL ANCHORING HARDWARE ⑥ ARE BY OTHERS.


**ALL VERTICAL DIMENSIONS INDICATED \*\* INCREASE PROPORTIONATELY WITH OPTIONAL -LPFS LESS PUNCHING FOR HINGED SEAT. 16-3/4" FLOOD RIM RIM HEIGHT BECOMES 17" AFF TO MEET ADA.**

- D- REMOVE ACCESS COVERS ⑦. POSITION FIXTURE ON FLOOR ALIGNING MOUNTING LOCATIONS. MAKE UP WASTE CONNECTION AND FIX TO WALL AND TIGHTEN TO 60FT/LBS USING NUTS, WASHERS AND BOLTS BY OTHERS.
- E- FLUSH SUPPLY LINE BEFORE MAKING SUPPLY CONNECTION ③. MOUNT FLUSH VALVE PER MANUFACTURER'S RECOMMENDATIONS.


**NOTE:** FOR ADA UNITS REFER TO ADA ACCESSIBILITY GUIDELINES FOR COMPLETE INSTALLATION REQUIREMENTS. FLUSH VALVE MUST BE SUPPLIED WITH AN ADA COMPLIANT ACTUATOR. MAXIMUM CONTROL HEIGHT IS 44" ABOVE FINISHED FLOOR.

**ACORN ENGINEERING COMPANY**  
P.O. BOX 3527 INDUSTRY, CA. 91744  
(626) 336-4561 FAX (626) 961-2200

TITLE <b>BLOWOUT JET, FRONT MOUNT, ON-FLOOR WALL OUTLET *2125A-2</b>		
MANUFACTURE DATE <b>AUGUST 2008 TO PRESENT</b>	DATE ISSUED <b>10/09/08</b>	DRAWING NUMBER <b>9908-410-001</b>
	DATE REVISED <b>01/25/13</b>	

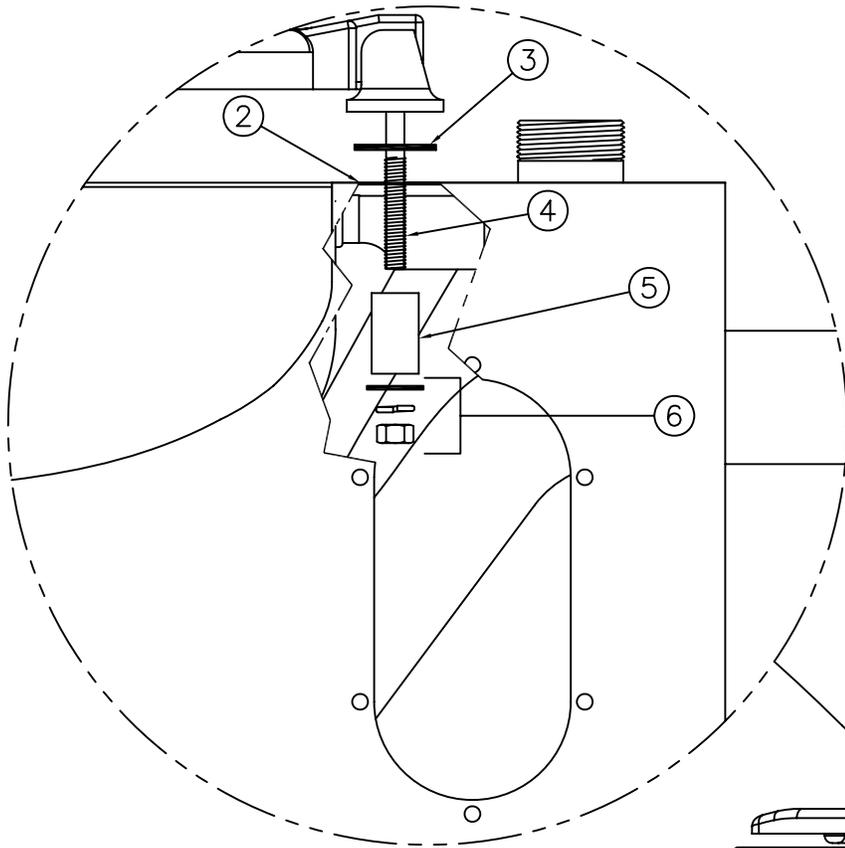

**DETAIL -A**

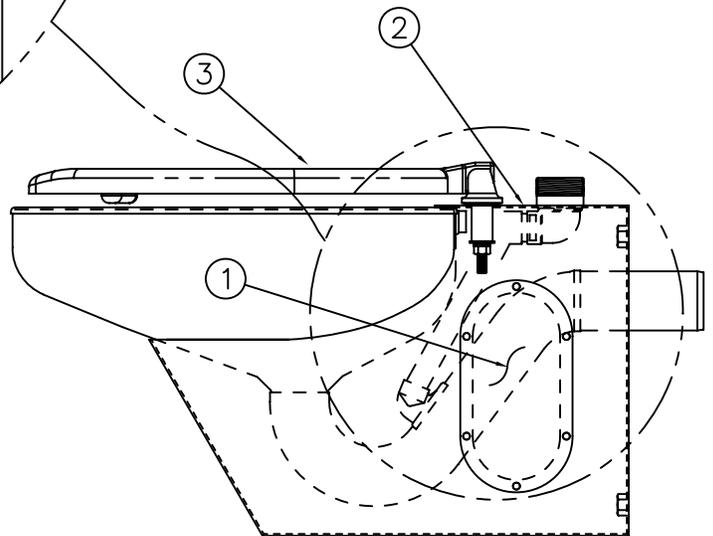

**INSTALLATION INSTRUCTIONS- HINGED SEAT AFTER MOUNTING FIXTURE TO WALL**


- A- REMOVE ACCESS PANEL ① FROM BOTH SIDES OF HOUSING ②.
- B- PLACE RUBBER GASKET ③ ONTO SEAT'S THREADED RODS ④.
- C- POSITION SEAT ONTO TOILET HOUSING ② AND SLIDE SEAT THREADED RODS ④ THROUGH SPACER ⑤.

- D- ASSEMBLE HARDWARE ⑥ AS SHOWN IN DETAIL "A".
- E- ENSURE ALL HARDWARE IS TIGHT AND REPLACE ACCESS PANELS ① TO HOUSING ②.



ACORN ENGINEERING COMPANY  
 P.O. BOX 3527 INDUSTRY, CA. 91744  
 (626) 336-4561 FAX (626) 961-2200

TITLE		
<b>-HS HINGED SEAT INSTALLATION DETAIL MERIDIAN TOILETS</b>		
MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
<b>APRIL 2008</b>	<b>04/08/08</b>	<b>9927-527-001</b>
<b>TO PRESENT</b>	DATE REVISED	

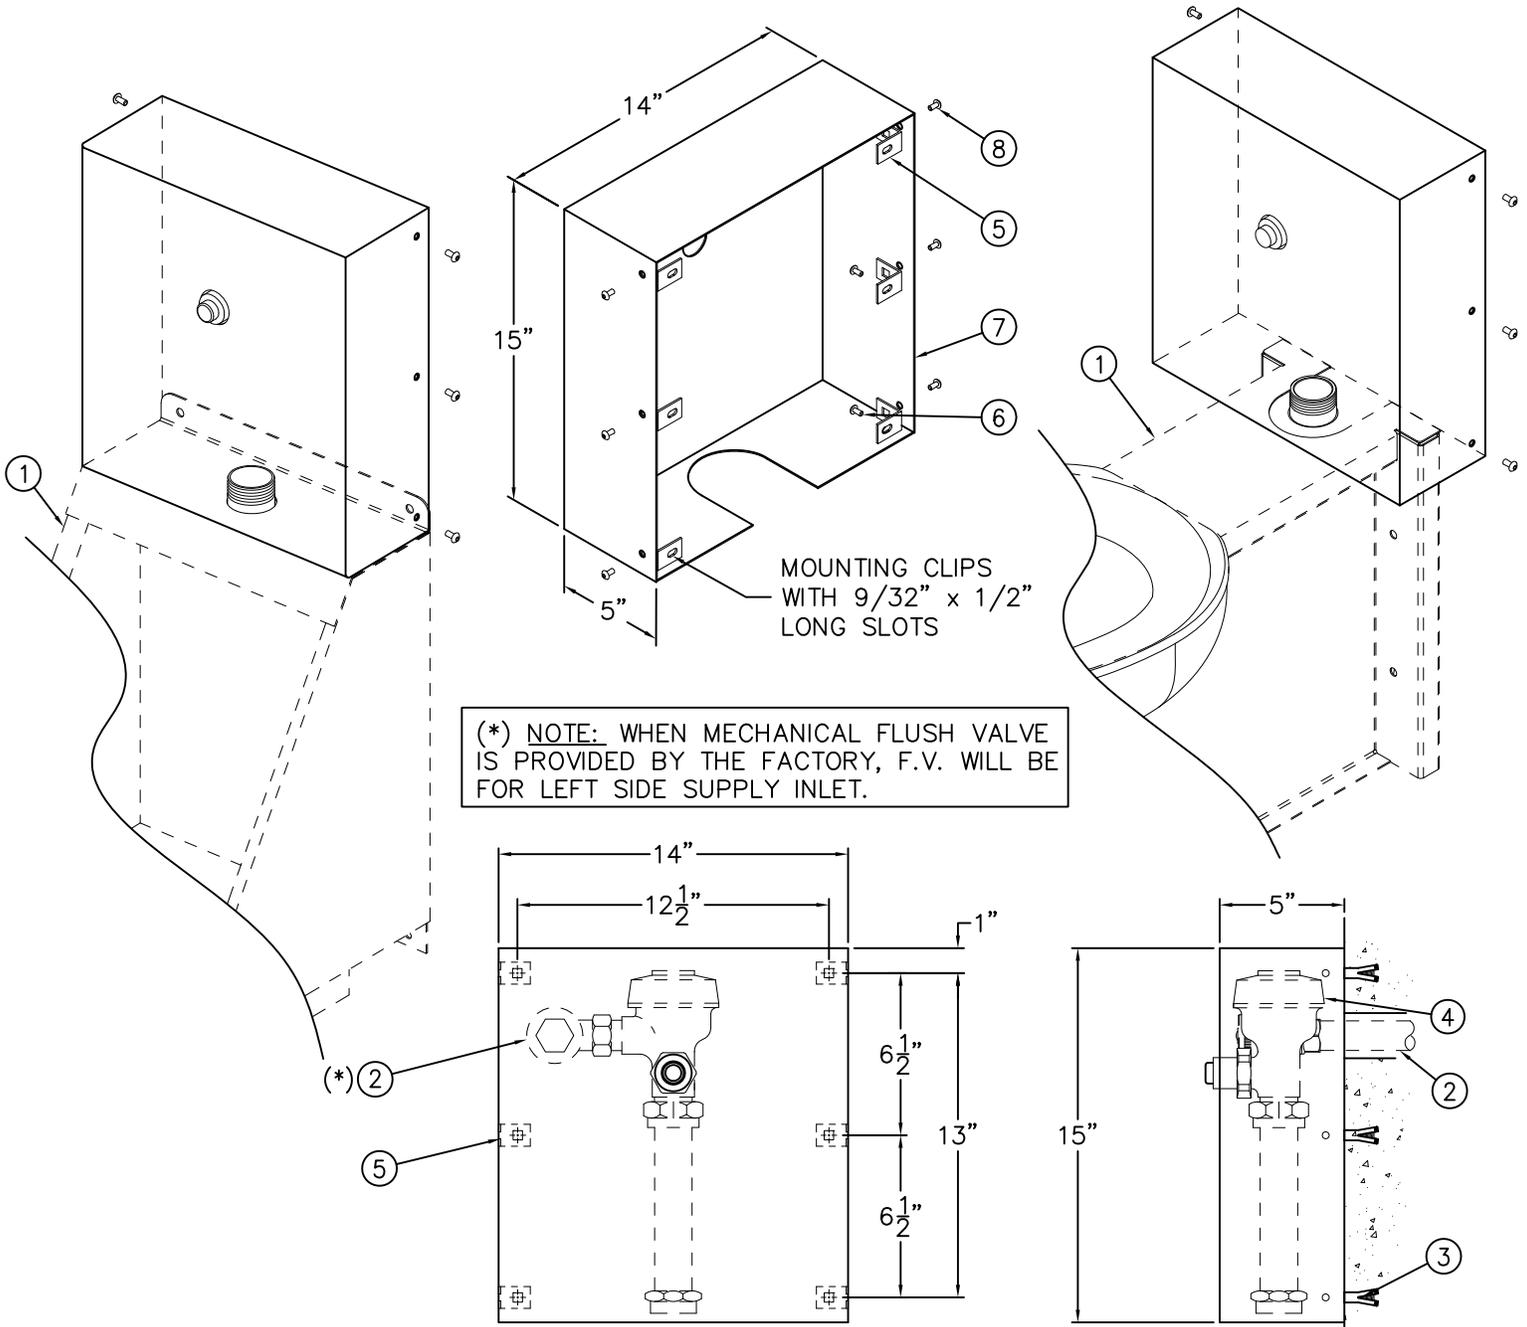

(\* NOTE: WHEN MECHANICAL FLUSH VALVE IS PROVIDED BY THE FACTORY, F.V. WILL BE FOR LEFT SIDE SUPPLY INLET.

**INSTALLATION INSTRUCTIONS:**

- A- MOUNT FIXTURE ① TO WALL.
- B- ROUGH-IN FOR FLUSH VALVE SUPPLY ② REFER TO FIXTURE INSTALLATION INSTRUCTIONS.
- C- LOCATE AND INSTALL WALL ANCHORS (BY OTHERS) ③.
- D- INSTALL FLUSH VALVE ④ TO FIXTURE ①.
- E- ATTACH MOUNTING CLIPS ⑤ TO WALL USING MOUNTING SCREWS ⑥ (BY OTHERS).
- F- ATTACH FLUSH VALVE COVER ⑦ TO MOUNTING CLIPS ⑤ USING #10-32 SCREWS ⑧ PROVIDED.


**Front View of -FVC**

**Side View of -FVC**

Reference Drawings	
Security Screws	9951-005-001
Tinnerman Nuts	9951-007-001

**NOTE: FIXTURES SHOWN FOR REFERENCE ONLY.**

<p>ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE <b>-FVC FLUSH VALVE COVER #2802</b></p>		
	<p>MANUFACTURE DATE</p> <p><b>FEBRUARY 1975</b></p> <p><b>TO PRESENT</b></p>	<p>DATE ISSUED</p> <p><b>04/17/98</b></p>	<p>DRAWING NUMBER</p> <p><b>9908-395-001</b></p>
		<p>DATE REVISED</p> <p><b>12/21/16 D</b></p>	

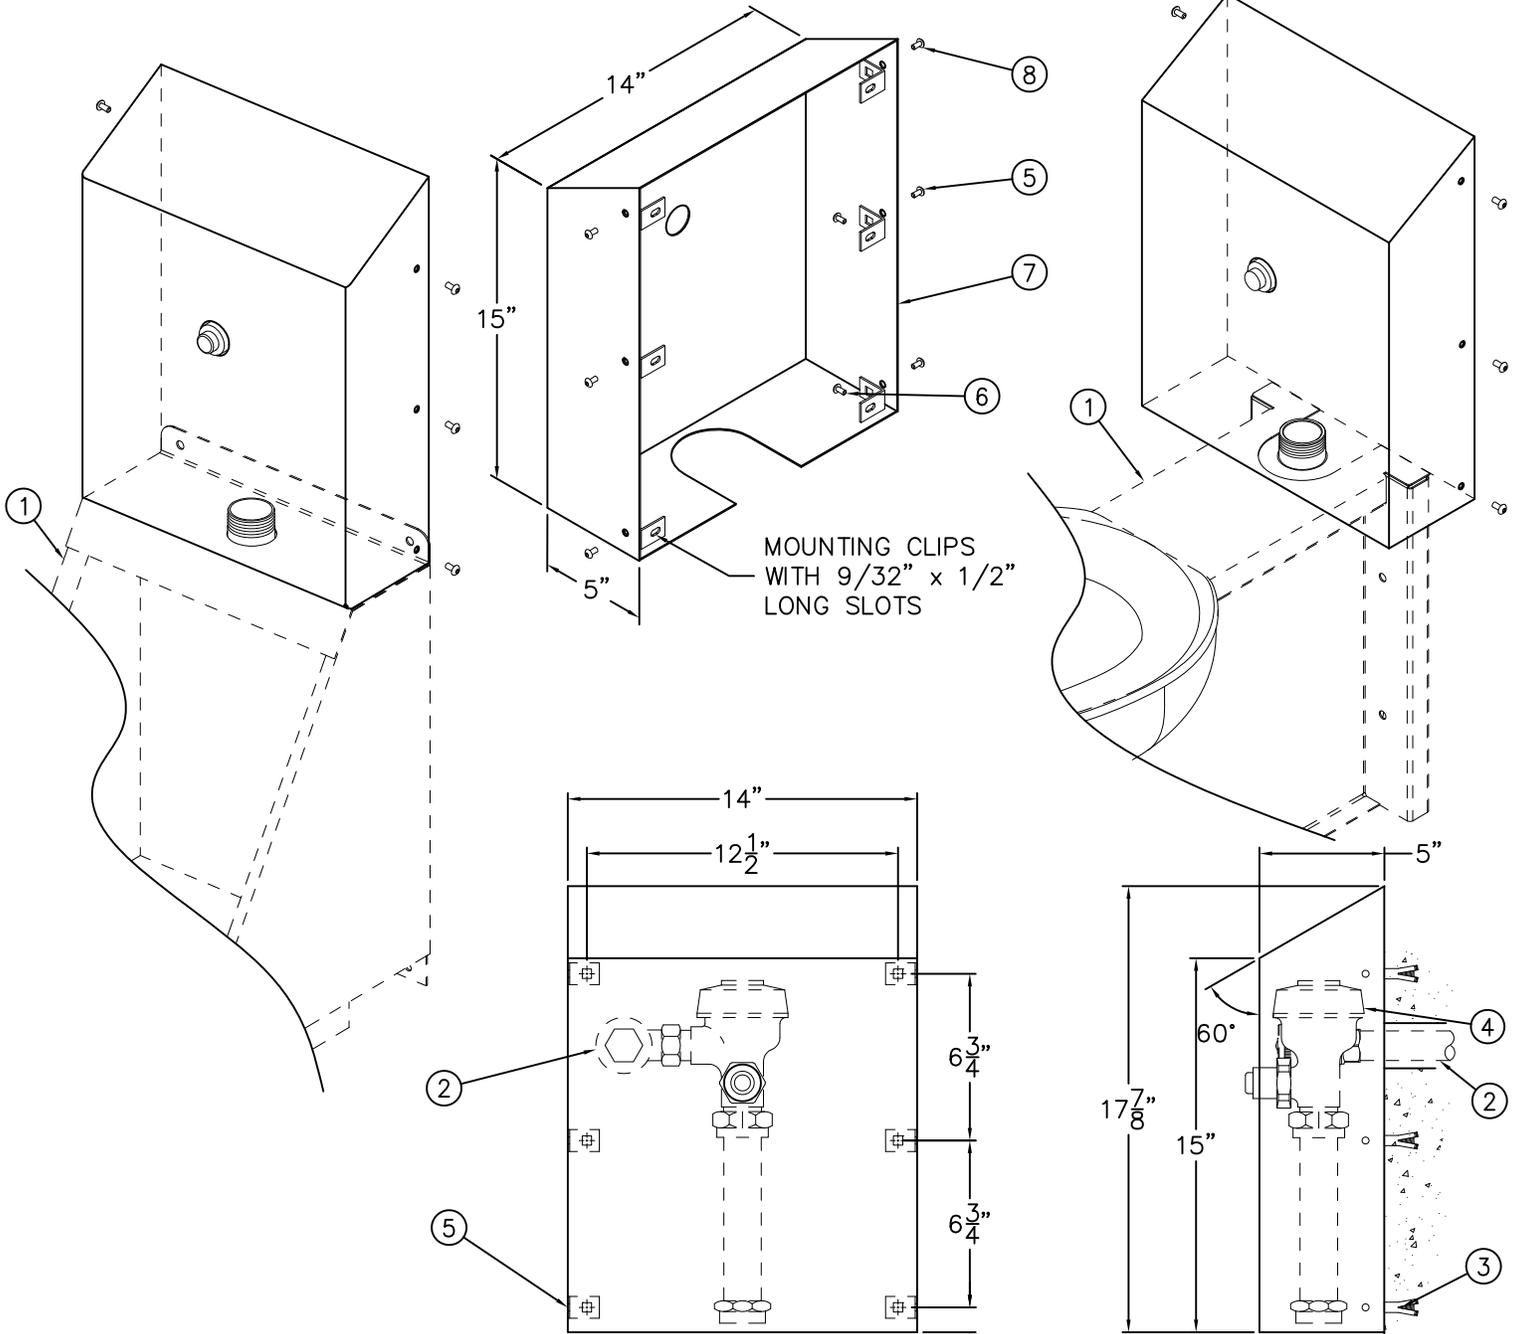

MOUNTING CLIPS WITH 9/32" x 1/2" LONG SLOTS

Front View of -FVC-SLPT

Side View of -FVC-SLPT

**INSTALLATION INSTRUCTIONS:**

- A- MOUNT FIXTURE ① TO WALL.
- B- ROUGH-IN FOR FLUSH VALVE SUPPLY ② REFER TO FIXTURE INSTALLATION INSTRUCTIONS.
- C- LOCATE AND INSTALL WALL ANCHORS (BY OTHERS) ③.
- D- INSTALL FLUSH VALVE ④ TO FIXTURE ①.
- E- ATTACH MOUNTING CLIPS ⑤ TO WALL USING MOUNTING SCREWS ⑥ (BY OTHERS).
- F- ATTACH FLUSH VALVE COVER ⑦ TO MOUNTING CLIPS ⑤ USING #10-32 SCREWS ⑧ PROVIDED.

Reference Drawings	
Security Screws	9951-005-001
Tinnerman Nuts	9951-007-001

NOTE: FIXTURES SHOWN FOR REFERENCE ONLY.

<p>ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200</p>	<p>TITLE <b>-FVC-SLPT FLUSH VALVE COVER WITH SLOPING TOP #2802</b></p>	
	<p>MANUFACTURE DATE <b>FEBRUARY 1975 TO PRESENT</b></p>	<p>DATE ISSUED <b>03/07/11</b></p> <p>DATE REVISED <b>04/15/13 E</b></p>