
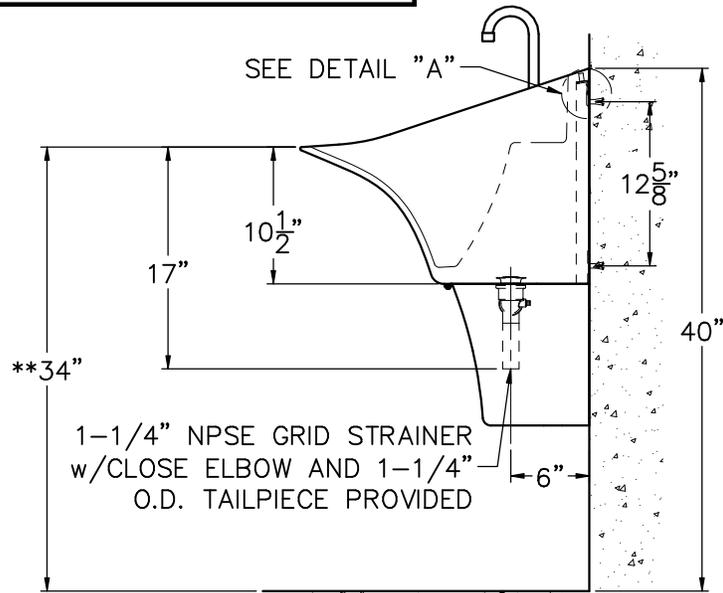


NOTE:

IF DIMENSION WITH SUFFIX * CHANGES ALL VERTICAL DIMENSIONS WILL CHANGE PROPORTIONALLY.

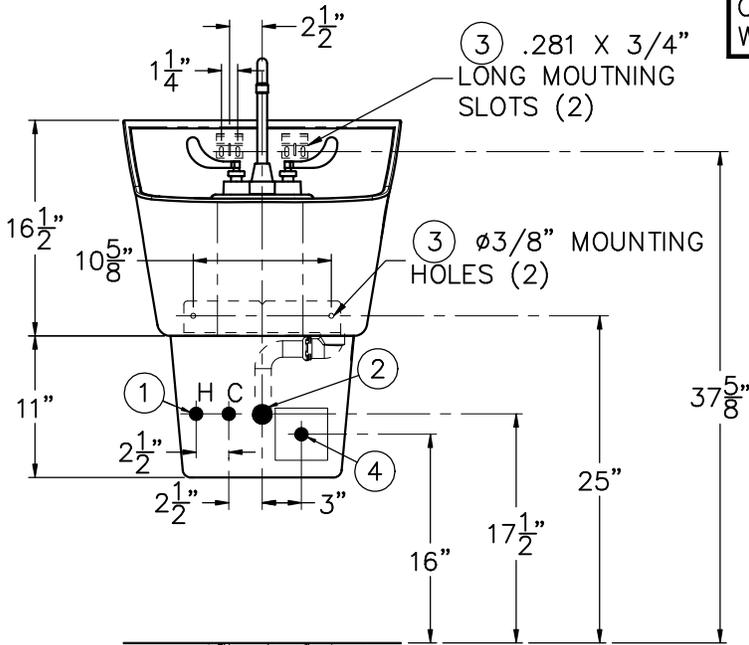

INSTALLATION INSTRUCTIONS:

A-ROUGH-IN FOR THE FOLLOWING:

- 1/2" NPT HOT AND COLD SUPPLIES (1) BY OTHERS.
- 1-1/4" O.D. TAILPIECE (2) FOR OPTIONAL P-TRAP OR P-TRAP BY OTHERS.
- MOUNTING POINTS (3) FOR WALL ANCHORS AND ANCHORING HARDWARE BY OTHERS.

B-LAYOUT AND INSTALL WALL ANCHORS BY OTHERS AND ANCHORING S-CLIP PROVIDED.

FOR -SO SENSOR OPERATION

SUPPLY 120VAC, 60Hz, 3A (MAX.) GFCI PROTECTED, ELECTRICAL RECEPTACLE (4).

C- POSITION FIXTURE INTO PLACE AND SECURE TO WALL USING WASHERS AND NUTS BY OTHERS. TORQUE NUTS TO 60 F-LBS. MAKE UP SUPPLY AND WASTE CONNECTIONS AS REQUIRED.

WARNING: SUPPLY LINES SHOULD BE FLUSHED OF ALL FOREIGN MATERIAL SUCH AS DOPE, CHIPS, SOLDER ETC. VALVE MUST BE DRAINED PRIOR TO BEING SUBJECTED TO FREEZING TEMPERATURES. MAXIMUM RECOMMENDED OUTLET WATER TEMPERATURE IS 105° F.

NOTE:

TRANSFORMER(S) MUST BE WIRED TO A GFI PROTECTED CIRCUIT. FIXTURE MUST BE EARTH GROUND PER N.E.C. (NATIONAL ELECTRICAL CODE)

WHITEHALL MANUFACTURING
P.O. BOX 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
(626) 968-6681 FAX (626) 855-4862

TITLE
INFECTION PREVENTION SINK #4151

MANUFACTURE DATE

SEPTEMBER 2013
TO PRESENT

DATE ISSUED


09/26/13

DATE REVISED

02/02/15

DRAWING NUMBER

9931-001-001

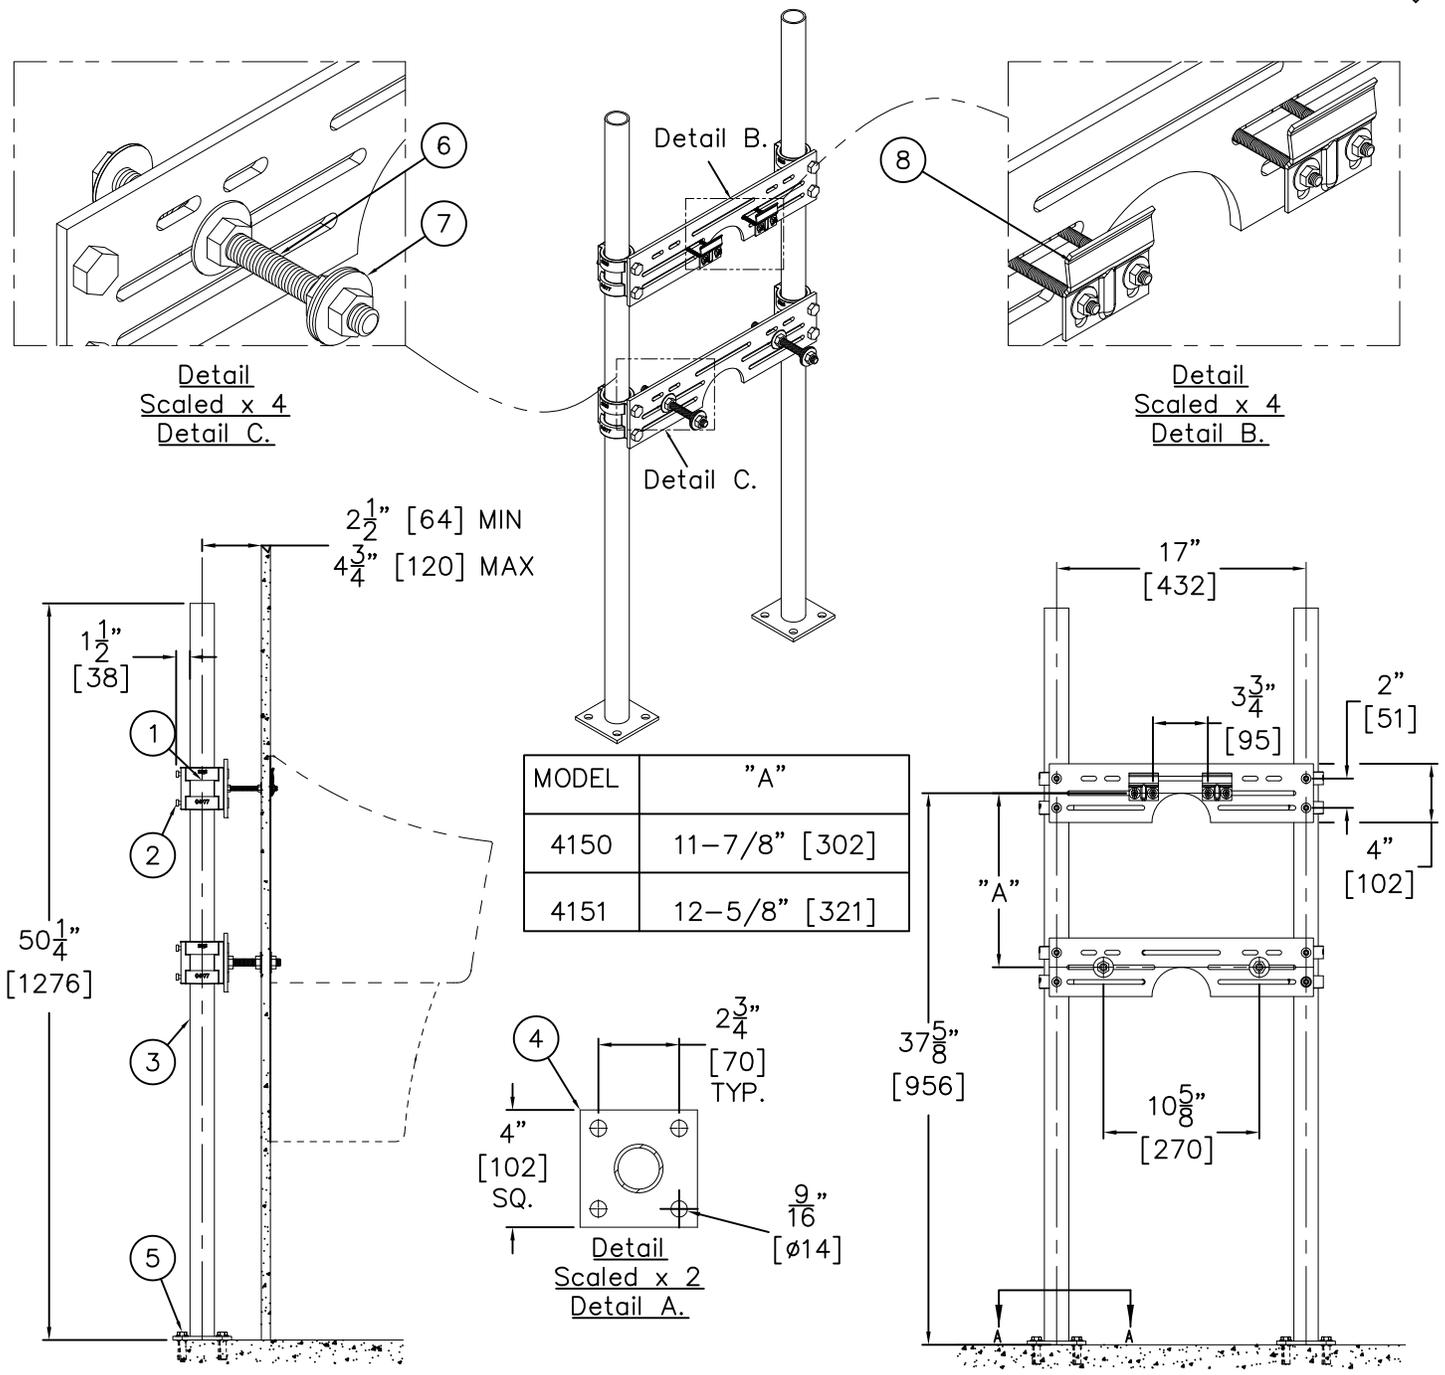

NOTE: INSTALLER SHOULD BE IN ACCORDANCE WITH ACCEPTED CONSTRUCTION PRACTICES.
 REFERENCE: CARRIER IS JAY R. SMITH MODEL 0802

- 1) ASSEMBLE SUPPORT KNUCKLES [1] USING SET SCREWS [2] PROVIDED, TO OBTAIN PROPER VERTICAL SPACING OF VERTICAL SUPPORTS [3].
- 2) USING SUPPORT BASES [4] AS A TEMPLATE MARK THE LOCATE FLOOR MOUNTING POINTS. MOVE CARRIER AND INSTALL FLOOR ANCHORS [5] PROVIDED BY INSTALLER. REPOSITION THE CARRIER AND SECURE TO FLOOR USING INSTALLER PROVIDED HARDWARE [5].
- 3) INSTALL AND SECURE MOUNTING STUDS [6] TO SUPPORT KNUCKLES [2] WITH NUTS AND WASHER [7].
- 4) MOUNT HANGER PLATE [8] TO MOUNTING STUDS [6] WITH NUTS AND WASHER.

 WHITEHALL MANUFACTURING P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 968-6681 FAX (626) 855-4862	TITLE BESTCARE (MC) MOUNTING CARRIER 4150/4151		
	MANUFACTURE DATE APRIL 2025 TO PRESENT	DATE ISSUED 04/28/25	DRAWING NUMBER 9931-009-001
		DATE REVISED	