



Division of Acorn Engineering Company®



A MEMBER OF




LIGATURE RESISTANT GRAB BAR

The BestCare® Dignity Suite™ is a curated collection of ligature-resistant bathroom fixtures and accessories. Designed to create a peaceful and well-balanced environment, the Dignity Suite™ is stylish and sleek while simultaneously protecting patients' safety.

The Dignity Suite™ Grab Bar combines safety with patient friendly looks and function. The units are constructed of cast aluminum to provide strength while eliminating common ligature points. The standard finish provided is Snow White (EG10) Enviro-glaze® color powder coat. Design includes weep holes to assist with drainage when used in shower applications. Grab Bar is provided with 1/4"-20 UNC Stainless Steel vandal resistant fasteners. Wall anchors are provided by others. Unit is intended for installation on a finished wall from the front side.

NOTE: The Grab Bar design meets the required lengths, 1-1/2" dimensions from mounting surface and for Structural Strength requirement for both vertical and horizontal force of 250 pounds per ADA 2010 Standards. However the presence of the Closure Plate may render the Grab Bar non-compliant. Interpretation and requirements are subject to Local Code Authority.

NOTE: Screws provided have Machine Screw Thread and may not be suitable for all Wall types. When required, Installer shall provide alternate Screw type and Wall Anchors to suit Wall construction.

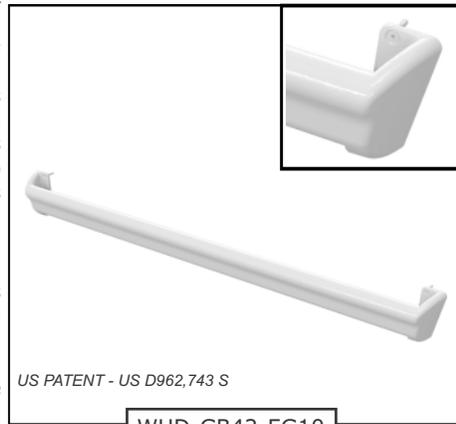


US PATENT - US D962,743 S

WHD-GB42-EG10

MODEL NUMBER AND OPTIONS SELECTION:

BASE MODEL NUMBER

- WHD-GB18-EG10 18" Aluminum Grab Bar Assembly
- WHD-GB24-EG10 24" Aluminum Grab Bar Assembly
- WHD-GB30-EG10 30" Aluminum Grab Bar Assembly
- WHD-GB36-EG10 36" Aluminum Grab Bar Assembly
- WHD-GB42-EG10 42" Aluminum Grab Bar Assembly
- WHD-GB48-EG10 48" Aluminum Grab Bar Assembly

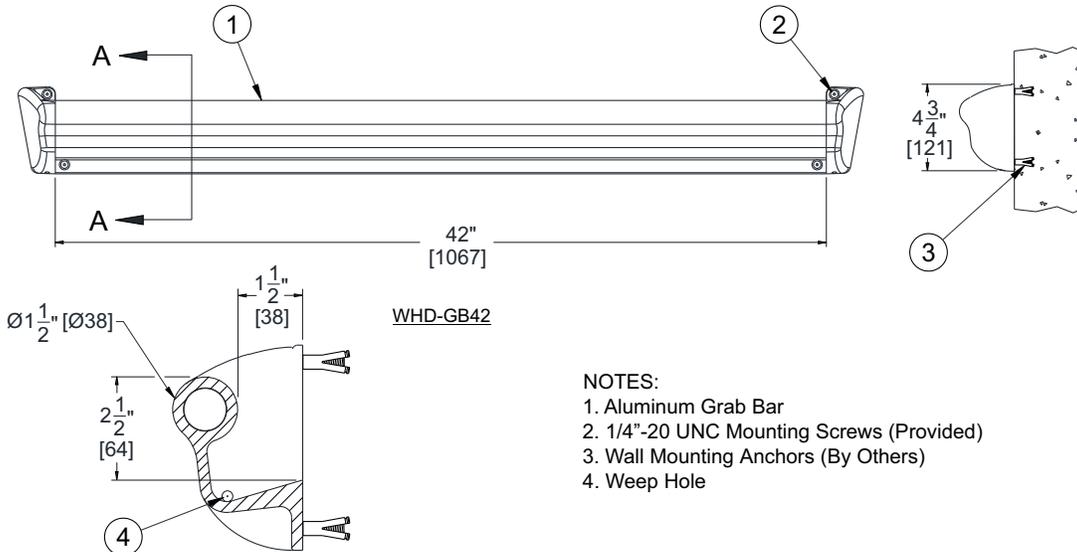

WHD-GB42

NOTES:

1. Aluminum Grab Bar
2. 1/4"-20 UNC Mounting Screws (Provided)
3. Wall Mounting Anchors (By Others)
4. Weep Hole

SECTION A-A

DISCLAIMER:

This product is designed to decrease the probability that it may be utilized as an apparatus for ligature. It is not a replacement for professionals who are trained in the proper evaluation, management and supervision of persons at risk of suicide.



(Refer to note above)



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

SELECTION SUMMARY & APPROVAL FOR MANUFACTURING

Model Number & Options _____ Quantity _____
 Company _____ Date _____
 Contact _____ Title _____
 Approval for Manufacturing/Signature _____

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or superseded data © Whitehall Manufacturing, Member of Morris Group International. Please visit www.whitehallmfg.com for most current specifications.