



**Ligature Resistant Floor Drains  
 Stainless Steel Strainer and Grate  
 With Trap Primer Plug**

Ligature resistant floor drains are designed with an internal gusset system that helps prevent ligature points. Recommended for use in showers, bathrooms, kitchens and other areas where foot traffic is expected. Drain Body includes a 1/2" NPT Plug for Trap Primer Connection. The round top Strainer Head is used for all types of poured finished floors. The square top is particularly adaptable to floors that are finished in square or straight line patterns. Reversible Flashing Collar permits adjustment of Strainer to meet finished floor level.



U.S. Patent 11,359,362

WHFD-5RD-2NH-TP


**MODEL NUMBER AND OPTIONS SELECTION:  
 BASE MODEL NUMBER (Must Specify)**

**ROUND**

- WHFD-5RD-2NH-TP      5" Round Floor Drain, Strainer and Grate with Trap Primer Plug
- WHFD-6RD-2NH-TP      6" Round Floor Drain, Strainer and Grate with Trap Primer Plug

**SQUARE**

- WHFD-5SQ-2NH-TP      5" Square Floor Drain, Strainer and Grate with Trap Primer Plug
- WHFD-6SQ-2NH-TP      6" Square Floor Drain, Strainer and Grate with Trap Primer Plug

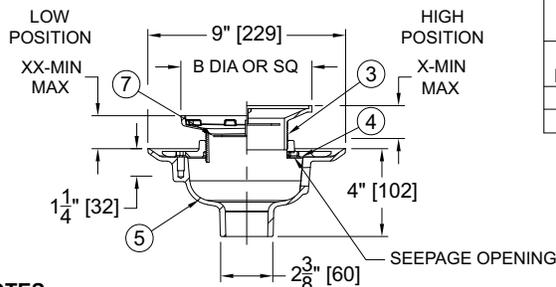


STRAINER SIZE	*COLLAR IN HIGH POSITION		*COLLAR IN LOW POSITION		FREE AREA SQ IN (SQ CM)
	B	X	XX	XX	
DIA OR SQ	MIN	MAX	MIN	MAX	
5" (125)	1-1/4" (32)	2-1/4" (57)	3/4" (19)	1-5/8" (41)	2.92 / 18.8
6" (150)	1-1/4" (32)	2-1/4" (57)	3/4" (19)	1-5/8" (41)	2.92 / 18.8

**NOTES:**

1. Ligature Resistant Nickel Bronze Strainer
2. Vandal Resistant Screws
3. Adjustable Height Nickel Bronze Strainer Head
4. Reversible Duco Cast Iron Flashing Collar
5. JR SMITH - Duco Cast Iron 2" No Hub Drain Body
6. 6 Strainer Slots = 2.92 in<sup>2</sup> Free Area
7. Ligature Resistant Baffle

**NOTE:** When installing in an above grade floor, a waterproofing membrane is ran up to and over the drain body flange and clamped with flashing collar. Membrane covering the center of drain body is to be trimmed to ensure the flow through the drain is not blocked or obstructed. Refer to Installation Instructions for complete details.

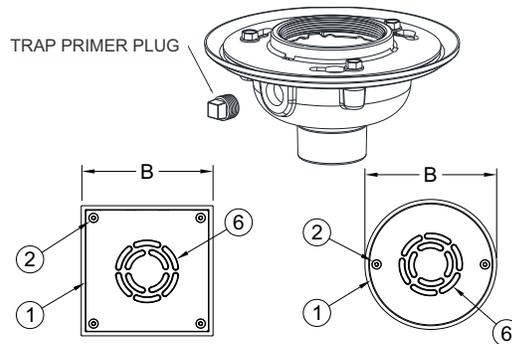

**DISCLAIMER:**

This product is designed to decrease the probability that it may be utilized as an apparatus for ligature. It is not a replacement for professionals who are trained in the proper evaluation, management and supervision of persons at risk of suicide.

**WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**SELECTION SUMMARY & APPROVAL FOR MANUFACTURING**

Model Number & Options \_\_\_\_\_ Quantity \_\_\_\_\_  
 Company \_\_\_\_\_ Date \_\_\_\_\_  
 Contact \_\_\_\_\_ Title \_\_\_\_\_  
 Approval for Manufacturing/Signature \_\_\_\_\_

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or superseded data © Whitehall Manufacturing, Member of Morris Group International. Please visit [www.whitehallmfg.com](http://www.whitehallmfg.com) for most current specifications.