



Whitehall Free-Standing Bedside Patient Care Unit (PCU) (Formerly "Swivette" Model)

Includes Models
4030, 4032, 4035



4030-L-1-CSG-CCL-EP

Fixture May Show Some Available Options

Cabinet interior surfaces are stainless steel. Interior has a removable stainless steel Floor to conceal Frame Anchors. Specify Cabinet material and color selection.

Counter has a 3" Backsplash and a bullnose front edge. Specify Countertop material and color selection.

Lavatory is always located on the opposite side of the toilet.

Toilet is type 304 stainless steel, siphon jet type with white plastic Seat and self-sustaining Check Hinge. Door Linkage swivels the Toilet into the room when Cabinet door is opened. The Toilet is locked in place when open and must be unlatched to close.

Hydraulic Flush Valve is furnished standard with a 1-3/4" diameter, hydraulically actuated, remote Pushbutton. Minimum required flow pressure is 25 PSI with a minimum water consumption of 1.28 GPF.

Swivel Assembly is cast iron with a sanitary white powder coat finish, and has a positive watertight, chemical-resistant Seal. Swivel assembly requires floor anchoring (hardware provided). **Toilets will withstand a 2,500 pound static vertical load.**

Floor Anchors are seismic rated for CBC category IV structures.

Metal Template is provided for ease of installation.

Infectious Control Flush (-FCI) is optionally available to minimize the potential for airborne contaminants and exposure to harmful bacteria resulting from Flush Valve activation when Toilet Cover is in the open position. -FCI option ensures activation of Toilet closed position. Optional -EP Exposed Paper Holder will be provided standard with the -FCI option.

Bedpan Washer Cabinet mounts on Toilet side of Cabinet and includes a Handheld Bedpan Washer with Volume Control, Positive Shut-off and Stainless Steel Hose. **An elevated pressure type Vacuum Breaker by others is recommended with this feature to prevent back-siphonage or backflow occurring and possibly contaminating the water supply. Consult local codes and ordinances for requirements.** Optional -BWD Bed Pan Washer Drain is recommended.

GUIDE SPECIFICATION

Provide and install Whitehall Free-Standing Bedside Patient Care Unit (specify model number and options). Cabinet Frame shall be heliarc welded, type 304 stainless steel, and shall not require wall support. Door on Toilet side shall be linked to Toilet, so that when Door is opened or closed, the Toilet will swivel accordingly. Door on lavatory side shall be provided with a toilet Paper Holder. Doors shall support a 250 pound static, vertical load. Front Panel shall hinge open for access to valves and piping. Storage compartment shall be provided above the Toilet. Concealed Bedpan Washer Cabinet mounts on Toilet side of Cabinet and includes a handheld Bedpan Washer with volume control, positive shut-off and stainless steel Hose. Cabinet shall provide front toe space. Lavy P-Trap shall be furnished. Toilet shall be stainless steel, elongated, siphon jet type, and shall flush in any position along the arc of movement. Trap shall pass a 2-1/8" ball. Toilet shall withstand loadings of 2,500 pounds without permanent damage. Toilet Seat shall have self-sustaining Check Hinge.

[LINK to IAPMO Pivoting Water Closet Certification](#)

Please visit www.whitehallmfg.com for most current specifications.



Recyclable Product






Water Conserving Product

Complies with the following standards:






Federal Public Law 111-380 (No Lead)

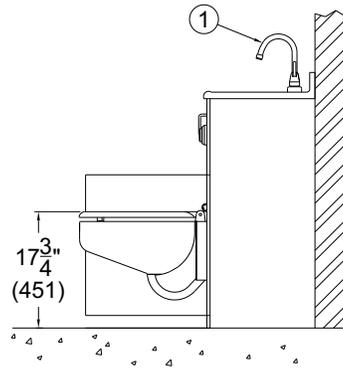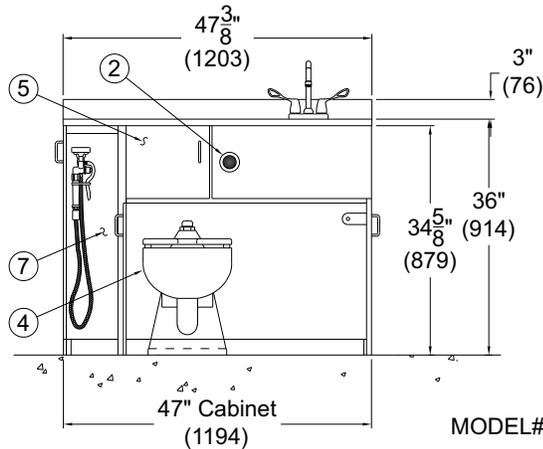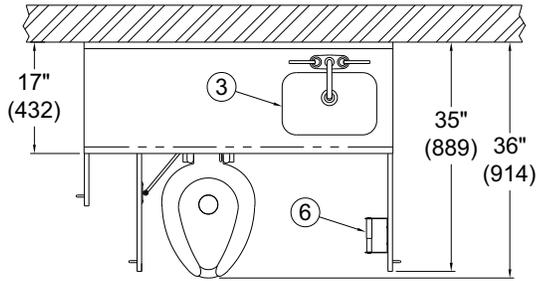

MODEL# 4030-L-1

NOTES:

1. Lavatory Gooseneck Faucet
2. Flush Valve Pushbutton
3. Lavatory (Basin)
4. Stainless Steel Toilet
5. Storage Compartment
6. Toilet Paper Holder
7. Bedpan Washer Compartment

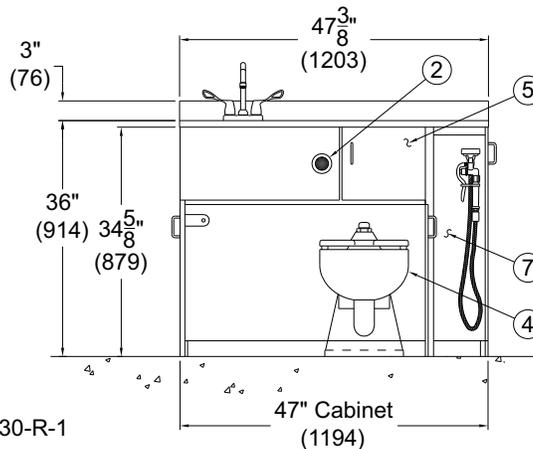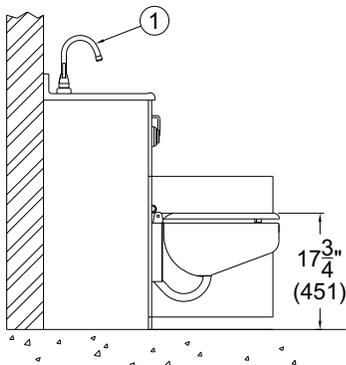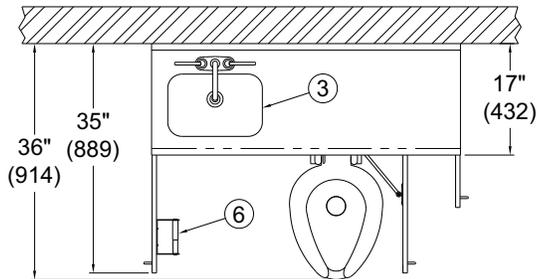

MODEL# 4030-R-1

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or suspended data © Whitehall Manufacturing, Member of Morris Group International. Please visit www.whitehallmfg.com for most current specifications.



MODEL NUMBER AND OPTIONS SELECTION

BASE MODEL NUMBER (Must Specify)

- 4030 Free-Standing, Back Wall Waste Outlet
- 4032 Free-Standing, Side Wall Waste Outlet **
- 4035 Free-Standing, Floor Waste Outlet

****Note:** Side wall waste outlet ONLY available same side as Toilet Orientation and requires coordinated Cabinet Orientation; EX: 4032-R-2 is Right Side Wall Waste Outlet for Right Corner.

TOILET ORIENTATION (Must Specify)

- L Left Hand Toilet -R Right Hand Toilet

Notes: L (Left) or R (Right) indicates Toilet location while in opened position when facing the Fixture. Lavy Basin is always located on side opposite the Toilet Orientation.

BACKSPLASH/CABINET ORIENTATION (Must Specify)

- 1 Back Wall Only (One Wall)
- 2 Right Hand Corner (Two Wall)
- 3 Left Hand Corner (Two Wall)
- 4 Alcove (Three Wall)

FLUSH VALVE SELECTION (Must Specify Gallons Per Flush)

- 1.28 GPF (High Efficiency)
- 1.6 GPF (EPA Standard***)
- 3.5 GPF (Verify Local Codes***)

FAUCET SELECTION (Must Specify)

- CSG Centerset Gooseneck Spout w/ Wrist Blade Handles
- SO Infrared Sensor Operated Faucet
- SO-BAT Infrared Sensor Operated Faucet-Battery Powered
- VF H & C Foot Pedal Operation with Air-Control Valve

FAUCET OPTIONS

- LFN Laminar Flow Nozzle
- LS Lavatory Hose Spray (Not Available w/-SO Faucets)

UPPER STORAGE COMPARTMENT OPTIONS (Dialysis options)

- DB1 Hemo-Dialysis Box, Single Valve - PVC Ball Valve
- DB1SV Hemo-Dialysis Box, Single Valve - S/S Ball Valve
- DB2 Hemo-Dialysis Box, Dual Valve - PVC Ball Valves
- DB2SV Hemo-Dialysis Box, Dual Valve - S/S Ball Valves
- SS Stainless Steel Storage Shelf within Compartment

TOILET PAPER DISPENSER OPTIONS

- EP Exposed Paper Holder (Standard with -FCI option)
- PHE Enclosed Paper Holder (NOTE: Not Available with -CS or -CCT Countertop)

(***NOTE: Not available in California)

COUNTERTOP MATERIAL SELECTION (Must Specify)

- CCL Corterra® Solid Surface Countertop - Integral Backsplash and Lavy Basin | Color: _____ Refer to [CORTERRA LINK](#) for available colors)
 - AMA SteriTouch® Anti-Microbial Additive
- CCT Corterra® Solid Surface Countertop, Integral Backsplash | Color: _____ (Refer to [CORTERRA LINK](#) for available colors)
 - AMA SteriTouch® Anti-Microbial Additive
 - ESB Embedded Stainless Steel Basin (Offered with -CCT Only)
- * -CNCT Corian® Countertop, with Integral Corterra®, Lavy Basin with Contrasting Colored Corian® Color: _____
- CS Stainless Steel Countertop, Integral Backsplash and Stainless Steel Lavy Basin
- OCR Cast Translucent Resin Countertop, Integral Backsplash, Solid Surface Lavy Basin Color: _____ (Refer to [RESIN LINK](#) for available colors)
 - AMA SteriTouch® Anti-Microbial Additive
- LCT Less Countertop and Lavatory (SEE NOTE BELOW)

CABINET COLOR SELECTION (Must Specify)

- OCP Color Polyethylene Panels Color: _____ (Refer to [POLY LINK](#) for available colors)
- LCC High Pressure Laminate Specify Laminate Manufacturer and Color Color: _____

TOILET OPTIONS

- BL Bedpan Lugs
- EGE Enviro-Glaze Color (Toilet Exterior Only) Specify: _____ (Refer to [EG LINK](#) for available colors)
- FCI Infectious Control Toilet Flush (Closed Position) (NOTE: Provided with -EP Exposed Paper Holder)
- WO3 3" Toilet P-Trap (Requires 3.5 GPF Flush Valve)

PRODUCT OPTIONS

- BWD Bedpan Washer Drain in Side Compartment (Not Available with Model 4032)
- ECL Extended Countertop Left, Specify _____
- ECR Extended Countertop Right, Specify _____
- SUG Swing-Up Wall Mounted Grab Bar (Non-ADA)

Options Promote Infectious Disease Control
 * Option has an Increased Lead time and Price

NOTE:

For units specified -LCT Less Countertop and Lavy: Customer assumes all responsibility for proper fit of materials that are provided by others. Cabinet interior has limited space with potential for interference.

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

SELECTION SUMMARY & APPROVAL FOR MANUFACTURING

Model Number & Options _____ Quantity _____
 Company _____ Date _____
 Contact _____ Title _____
 Approval for Manufacturing/Signature _____

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or superseded data © Whitehall Manufacturing, Member of Morris Group International. Please visit www.whitehallmfg.com for most current specifications.