



**Whitehall  
 Bedside Patient  
 Care Unit  
 47" Wide  
 (formerly referred to  
 as Versalette)**

Model  
**4044**



4044-L-1-CSG

Fixture May Show Some Available Options

**Cabinet** surface is either high pressure laminate with interior surface stain-resistant melamine laminate or polyethylene panels. Specify cabinet material and color selection. Corners are rounded with soft edges. Cabinet features a unique angled door which swings open to allow access to the bedpan washer and toilet paper holder and a separate access door for plumbing access and storage. Cabinet includes a pivoting, padded toilet cover and back rest which doubles as a bedside seat. Seat color selection is determined by factory. Base molding for the cabinet is by others.

**Counter** has a 3" backsplash. Specify countertop material and color selection.

**Lavatory** is always located on the opposite side of the toilet.

**Toilet** is stainless steel, wall mounted siphon jet type with white plastic seat and self-sustaining check hinge.

**Hydraulic Flush Valve** is furnished standard with a 1-3/4" diameter, hydraulically actuated, remote pushbutton. Minimum required flow pressure is 25 PSI with a minimum water consumption of 1.28 GPF.

**Bedpan Washer** is concealed within cabinet and includes a handheld bedpan washer with volume control, positive shut-off and stainless steel hose.

**An elevated pressure type vacuum breaker by others is recommended with this selection to prevent back-siphonage or backflow from occurring and possibly contaminating the water supply.**

**Consult local codes for back flow prevention device requirements.** Optional -BWD Bed Pan Washer Drain is recommended.

**Metal Template** is provided for ease of installation.

**Infectious Control Flush (-FCI)** is optionally available to minimize the potential for airborne contaminants and exposure to harmful bacteria resulting from Flush Valve activation when Toilet Cover is in the open position. Activation of Toilet Flush will only be possible with Toilet Cover in the closed position.

**GUIDE SPECIFICATION**

Provide and install Whitehall 47" wide Bedside Patient Care Unit (specify model number and options). Cabinet surface to be high pressure laminate or polyethylene panels. Base molding by others. Includes pivoting padded seat cover with back rest, hydraulic flush valve, access panel and toilet paper holder. Wall mounted, elongated, stainless steel toilet bowl with 1.6 GPF and self-sustaining hinged seat. Wall carrier by others. Concealed bedpan washer cabinet shall include a handheld bedpan washer with positive shut-off and stainless steel hose.

Please visit [www.whitehallmfg.com](http://www.whitehallmfg.com) for most current specifications.



Member of  
U.S. Green  
Building  
Council



Recyclable  
Product







Water  
Conserving  
Product

Complies  
with the  
following  
standards:



Federal  
Public Law  
111-380  
(No Lead)

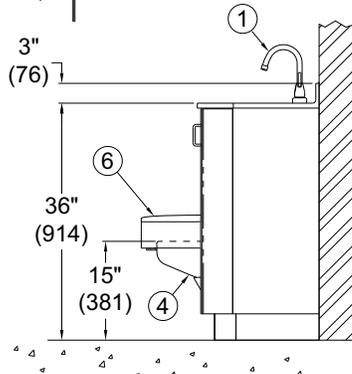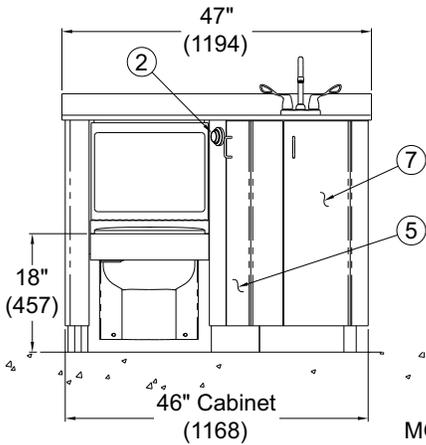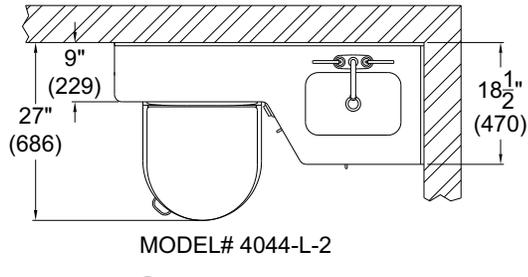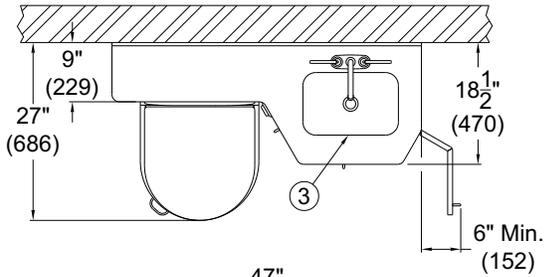


MODEL# 4044-L-1



MODEL# 4044-L-2

**NOTES:**


1. Lavatory Gooseneck Faucet
2. Flush Valve Pushbutton
3. Lavatory (Basin)
4. Stainless Steel Toilet
5. Bedpan Washer Compartment
6. Pivoting Padded Toilet Cover
7. Storage Compartment

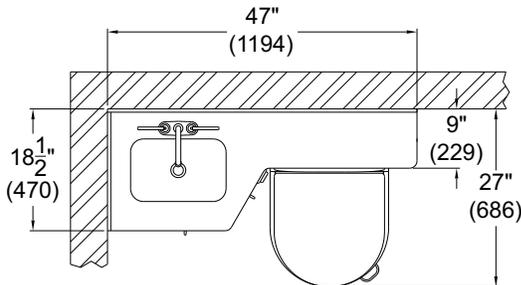

MODEL# 4044-R-3

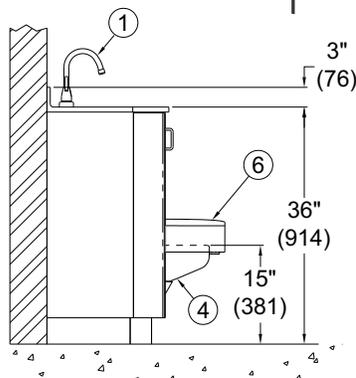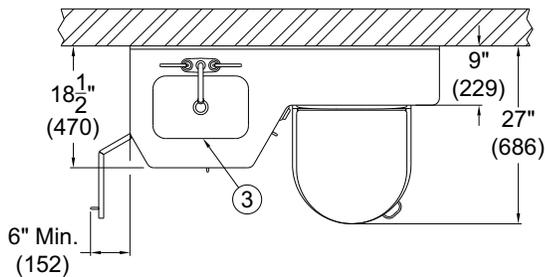

MODEL# 4044-R-1



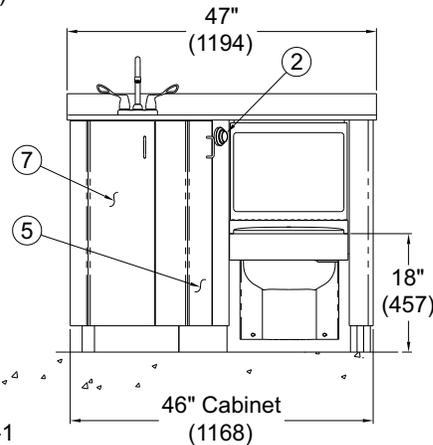


All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or suspended data © Whitehall Manufacturing, Member of Morris Group International. Please visit [www.whitehallmfg.com](http://www.whitehallmfg.com) for most current specifications.




**-FCI OPTION INFECTIOUS CONTROL FLUSH UNIT DETAILS**

(L.H. Unit Shown - R.H. Unit Opposite)

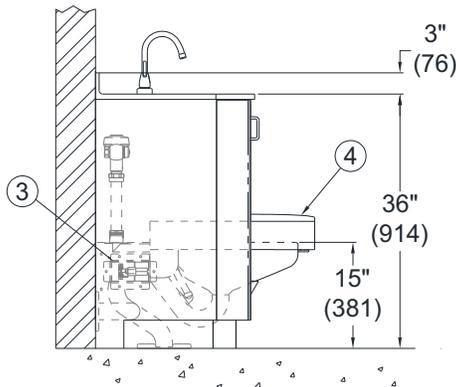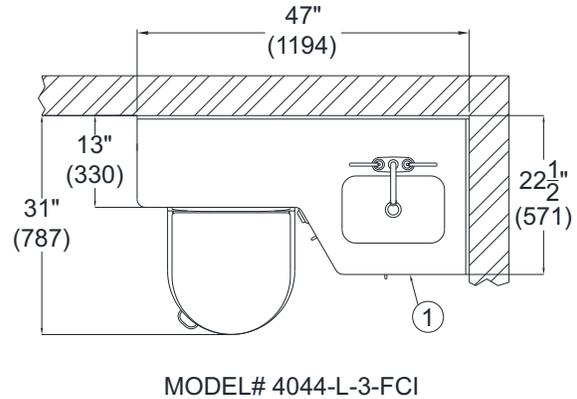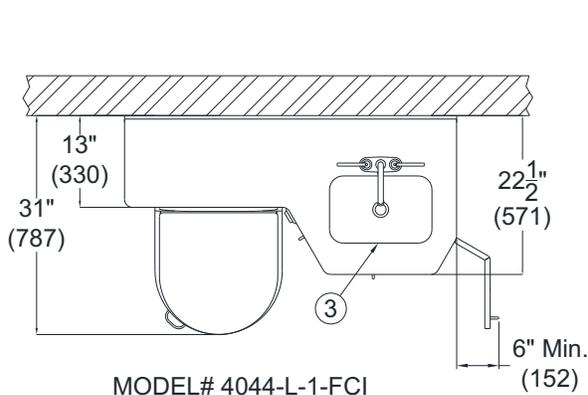

SIDE VIEW

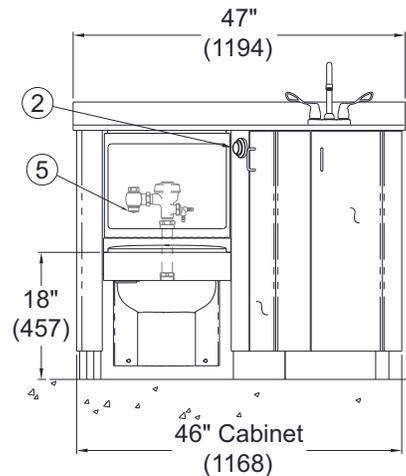

FRONT VIEW

**NOTES:**

1. Extended Cabinet
2. Flush Valve Pushbutton
3. -FCI Switch/Control Assy
4. Pivoting Toilet Cover
5. Hydraulic Flush Valve (Located in Stationary Cabinet)

**NOTE: Infectious Control Flush (-FCI)** is optionally available to minimize the potential for airborne contaminants and exposure to harmful bacteria resulting from Flush Valve activation when Toilet Cover is in the open position. Activation of Toilet Flush will only be possible with Toilet Cover in the closed position. Cabinet size and Flush Valve location changes to accommodate device.

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or suspended data © Whitehall Manufacturing, Member of Morris Group International. Please visit [www.whitehallmfg.com](http://www.whitehallmfg.com) for most current specifications.



**MODEL NUMBER AND OPTIONS SELECTION**

**BASE MODEL NUMBER (Must Specify)**

- 4044 47" Wide with Rectangular Lavy

**TOILET MOUNTING AND WASTE (Must Specify)**

- OFFW Off-Floor, Wall Outlet
- ONFF On-Floor, Floor Outlet
- ONFW On-Floor, Wall Outlet

**TOILET ORIENTATION (Must Specify)**

- L Left Hand Toilet  -R Right Hand Toilet

**Notes:** L (Left) or R (Right) indicates toilet location in opened position when facing the fixture. Lavy (Basin) is always located on side opposite the toilet.

**BACKSPLASH/CABINET ORIENTATION (Must Specify)**

- 1 Back Wall Only (One Wall)
- 2 Right Hand Corner (Two Wall)
- 3 Left Hand Corner (Two Wall)
- 4 Alcove (Three Wall)

**FLUSH VALVE SELECTION (Must Specify)**

- HET - 1.28 GPF
- ULF - 1.6 GPF (Standard)
- 3.5 GPF

**FAUCET SELECTION (Must Specify)**

- CSG Centerset Gooseneck Spout w/ Wrist Blade Handles
- SO Sensor Operated Valve
- SO-BAT Sensor Operated Valve-Battery Powered
- VF H & C Foot Pedal Operated Air-Control Valve
- LFN Laminar Flow Nozzle
- LS Lavatory Hose Spray (Not Available w/ -SO)

**LAVY (BASIN) OPTIONS**

- ESB Embedded Stainless Steel Basin (With -CCT Only) **lp**

**STORAGE COMPARTMENT/DIALYSIS BOX**

- DB1 Hemo-Dialysis Box, Single Valve- PVC Ball Valve
- DB1SV Hemo-Dialysis Box, Single Valve- S/S Ball Valve w/ T-Handle
- DB2 Hemo-Dialysis Box, Dual Valve- PVC Ball Valves
- DB2SV Hemo-Dialysis Box, Dual Valve- S/S Ball Valves w/ T-Handle

**COUNTERTOP COLOR SELECTION (Must Specify)**

- CCL Corterra® Solid Surface Countertop w/ Integral Backsplash & Lavy (Basin)  
Color: \_\_\_\_\_

(Refer to link for colors:

<https://www.whitehallmfg.com/corterra-solid-surface>)

**lp**

- CCT Corterra® Solid Surface Countertop w/ Integral Backsplash  
Color: \_\_\_\_\_

(Refer to link for colors:

<https://www.whitehallmfg.com/corterra-solid-surface>)

**lp**

- \*  -CNCT Corian® Countertop
- \*  -CNCTL Corian® Countertop w/ Integral Contrasting Colored Lavy Bowl (Basin)

- CS Stainless Steel Countertop w/ Integral Backsplash & Lavy (Basin)

- OCR Cast Translucent Resin Countertop w/ Integral Backsplash and Solid Surface Lavy Bowl (Basin)  
Color: \_\_\_\_\_

(Refer to link for colors:

<https://www.whitehallmfg.com/resin-colors>)

**lp**

- LCT AMA SteriTouch® Anti-Microbial Additive Less Countertop

**CABINET COLOR SELECTION (Must Specify)**

**lp**

- OCP Color Polyethylene Panels  
Color: \_\_\_\_\_

(Refer to link for colors:

<https://www.whitehallmfg.com/poly-colors>)

- LCC High Pressure Laminate  
Specify Laminate Manufacturer  
Color: \_\_\_\_\_

**TOILET OPTIONS**

**lp**

- BL Bedpan Lugs
- FCI Infectious Control Flush (Affects Cabinet Size and Rough-in. Refer to Submittal and Installation details.)
- WO3 3" P-Trap (3.5 GPF Only)

**PRODUCT OPTIONS**

- BWD Bedpan Washer Drain
- EC Extended Countertop
- EG Enviro-Glaze (Lavy Basin Only)  
Color Specify: \_\_\_\_\_

(Refer to link for colors:

<https://www.whitehallmfg.com/enviro-glaze>)

- EGE Enviro-Glaze (Toilet Exterior Only)  
Color Specify: \_\_\_\_\_

(Refer to link for colors:

<https://www.whitehallmfg.com/enviro-glaze>)

- SUG Swing Up Grab Bar

**lp**

Infection Prevention option

\*

Increased lead time and price

**WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**SELECTION SUMMARY & APPROVAL FOR MANUFACTURING**

Model Number & Options \_\_\_\_\_ Quantity \_\_\_\_\_  
 Company \_\_\_\_\_ Date \_\_\_\_\_  
 Contact \_\_\_\_\_ Title \_\_\_\_\_  
 Approval for Manufacturing/Signature \_\_\_\_\_

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or superseded data © Whitehall Manufacturing, Member of Morris Group International. Please visit [www.whitehallmfg.com](http://www.whitehallmfg.com) for most current specifications.