




1A CATALOG #8190
TWO VALVE SUPPLY
LESS DOOR 2A

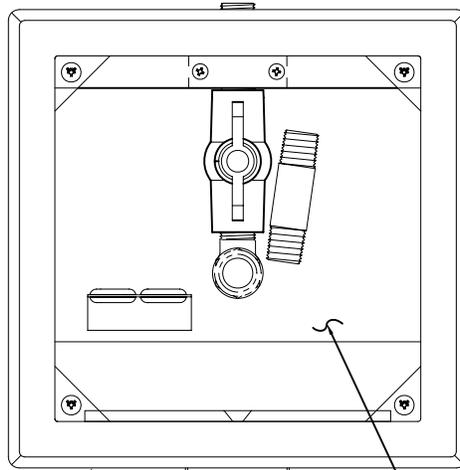

2A CATALOG #8191
ONE VALVE SUPPLY
LESS DOOR 1B

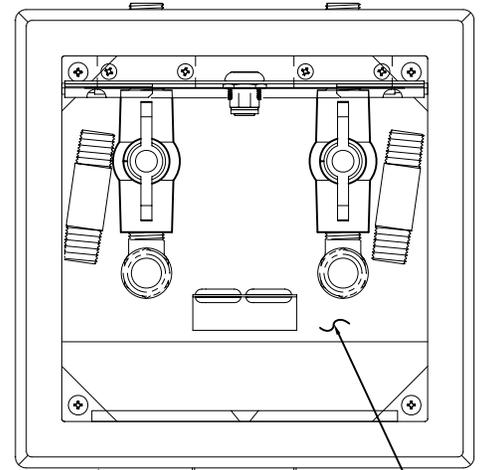


2B CATALOG #8195
TWO VALVE SUPPLY
WITH DOOR & LOCK 1A

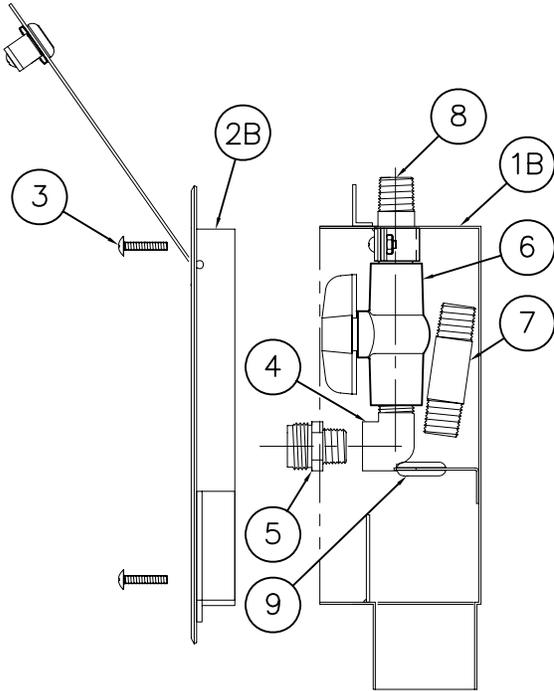

2B CATALOG #8196
ONE VALVE SUPPLY
WITH DOOR & LOCK

NOTICE:
FAILURE TO READ, UNDERSTAND
AND FOLLOW INSTRUCTIONS MAY
RESULT IN DAMAGE TO EQUIPMENT
EQUIPMENT
1-PVC BALL VALVE MANUFACTURER
RECOMMENDS THE USE OF A
SOFT SETTING "PIPE DOPE" SUCH
AS JOMAR "GIMME THE WHITE
STUFF" OR "GIMME THE GREEN
STUFF".
2-TIGHTEN THREADED JOINTS 1/4
TO 1/2 TURNS BEYOND FINGER
TIGHT. AVOID "BACKING UP" THE
WRENCHED ASSEMBLY. DO NOT
OVER TIGHTEN.
2-DO NOT USE TEFLON TAPE.

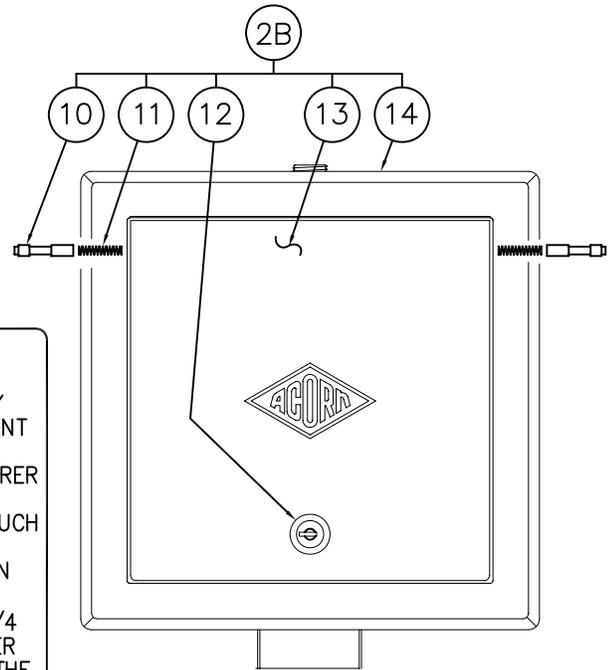

1A	0570-001-002	DIALYSIS BOX ASSEMBLY, TWO VALVE	7	0571-005-000	PVC NIPPLE X 3" LONG (LOOSE)
1B	0572-001-002	DIALYSIS BOX ASSEMBLY, ONE VALVE	8	0571-004-000	PVC NIPPLE X 2-1/2" LONG
2A	0530-010-002	FRAME ASSEMBLY	9	0571-003-000	RUBBER GROMMET
2B	0542-001-002	DOOR AND FRAME ASSEMBLY	10	0542-004-199	HINGE PIN
3	0116-006-000	#10-32 TRUSS HEAD SCREW X 1"	11	0542-005-000	SPRING
4	0571-001-199	DIALYSIS BOX 1/2" STREET ELL	12	0351-001-000	LOCK WITH KEY
5	0571-002-199	DIALYSIS BOX HOSE BIBB	13	0542-001-001	HOSE BOX DOOR SUB-ASSEMBLY
6	0571-007-000	1/2" I.P.S. COMPACT PVC BALL VALVE	14	0530-010-001	FRAME SUB-ASSEMBLY
ITEM	PART NUMBER	DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION

ACORN ENGINEERING COMPANY
P.O. BOX 3527 INDUSTRY, CA. 91744
(626) 336-4561 FAX (626) 961-2200

TITLE		
DIALYSIS SUPPLY & WASTE BOX w/ DRAIN CATALOG # 8190		
MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
SEPTEMBER 1976 TO PRESENT	03/09/10	9989-065-001
	DATE REVISED	
	09/23/10	