

A172.8FGVR Series
Barrier Free, 14 Gage Stainless Steel, Enhanced
Vandal Resistance, Bi-Level, Wall Mounted Water Cooler



TECHNICAL ASSISTANCE TOLL FREE TELEPHONE NUMBER:
(800) 743-8259

Technical Assistance E-Mail: Fieldservice@acorneng.com

NOTES TO INSTALLER:

1. Please leave this documentation with the owner of the fixture when finished.
2. Please read this entire booklet before beginning the installation.
3. Check your installation for compliance with plumbing, electrical and other applicable codes.

For current Warranty click hyperlink [Product Warranty](#) or visit: www.murdockmfg.com/terms-and-warranty

Murdock assumes no responsibility for use of void or suspended data. © Copyright Murdock, City of Industry, CA Member of Morris Group International. Please visit www.murdockmfg.com for most current specifications.

7020-928-001

Page 1 of 14

Date: 12/23/2025 E

COMPLIES WITH
STANDARDS



Federal Public Law 111-280 (No Lead)



NSF/ANSI/CAN 61

ANSI/ASHRAE 18

murdock[®]
SINCE 1853

15125 Proctor Ave, City of Industry,
CA, 91746 U.S.A.
Phone 800-453-7465

Member of



www.murdockmfg.com

IMPORTANT

This fixture is intended to dispense water that has been lowered in temperature, but otherwise remains unchanged by the materials in the water cooler. It is common for electrical equipment to be grounded to water lines either within a structure or away from it. Every attempt should be made to prevent this kind of grounding from generating electrical feedback into the water cooler creating electrolysis. Electrolysis will cause a metallic taste or cause water metal content to increase.

NOTICE

A dielectric coupling must be used to connect the water cooler to the water supply. A nonmetallic coupler is furnished with this water cooler to meet this requirement.

ROUGHING-IN AND DIMENSIONAL DRAWING


Prior to roughing consult with local, state, and federal codes for proper mounting height.

IMPORTANT

UNIT WITH CHILLER/COOLER MUST REMAIN IN THE RIGHT HAND BI-LEVEL POSITION to ensure required air-flow through the right hand side ventilation grill for either Standard Bi-level mounting and reverse Bi-level mounting. NO EXCEPTIONS.

A172408FGVR Wall Mounted Drinking Fountain

- A. 3/8" NCT SUPPLY INLET
- B. WASTE OUTLET FOR 1-1/4" P-TRAP BY OTHERS
- C. ELECTRICAL SERVICE ROUGH
- D. Ø1/2" HANGER BRACKET PUNCHING, 3 PLACES FOR ANCHORING HARDWARE BY OTHERS
- E. Ø5/16" PUNCHING, 2 PLACES FOR ANCHORING HARDWARE BY OTHERS

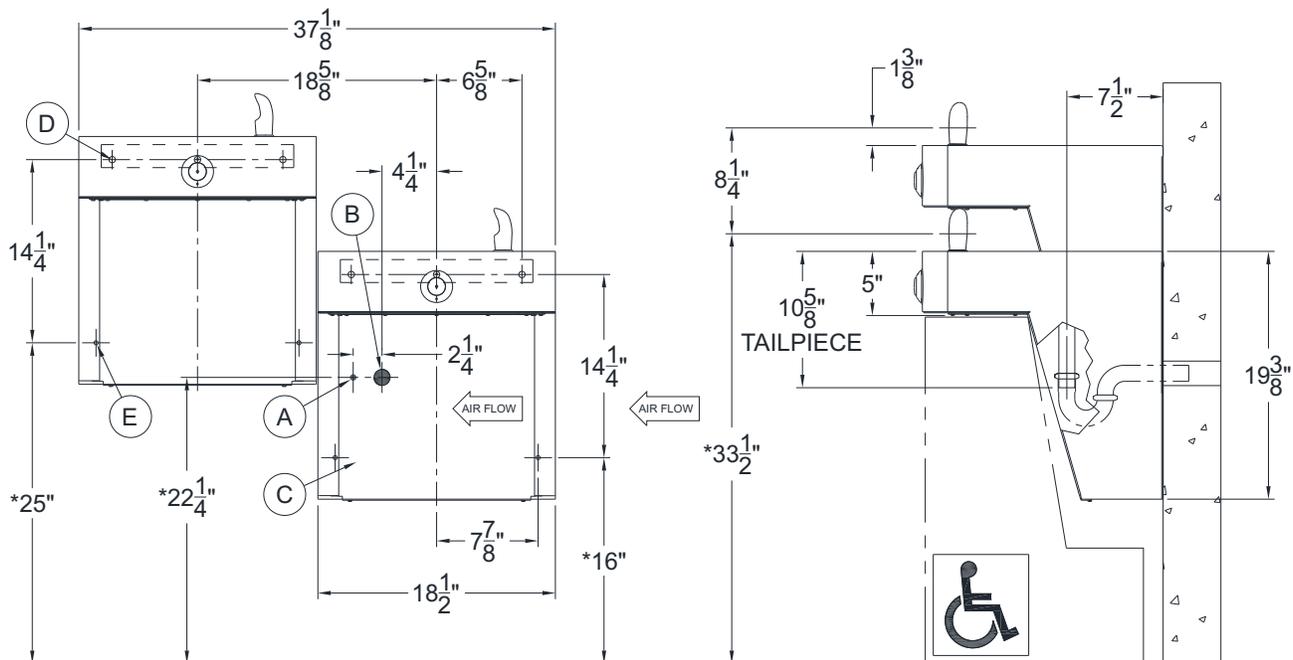


GENERAL NOTES:

1. ALL DIMENSIONS ARE IN INCHES [MM]
2. ALLOW 4 INCHES [102 MM] MINIMUM CLEARANCE PER SIDE FOR VENTILATION
- *3. DIMENSIONS SHOWN ARE FOR RECOMMENDED ADULT HEIGHT. ADJUST VERTICAL DIMENSIONS AS NECESSARY TO COMPLY WITH FEDERAL, STATE, & LOCAL CODES
4. STOP VALVE, P-TRAP, & ELECTRICAL OUTLET NOT SUPPLIED
5. IMPORTANT: COOLERS MUST BE ATTACHED TO WALL WITH APPROPRIATE WALL ANCHOR SCREWS

NOTES: Dimensions indicated * are for ADA frontal approach installation. Adjust vertical dimension * as required to comply with federal, state, and local codes. For Child ADA compliant parallel approach, decrease spout height to 30" maximum above finished floor. Provide clear floor space as required. Compliance is subject to the interpretation and requirements of the Local Code Authority.

A172408FGVR Wall Mounted Drinking Fountain- Reverse Bi-Level

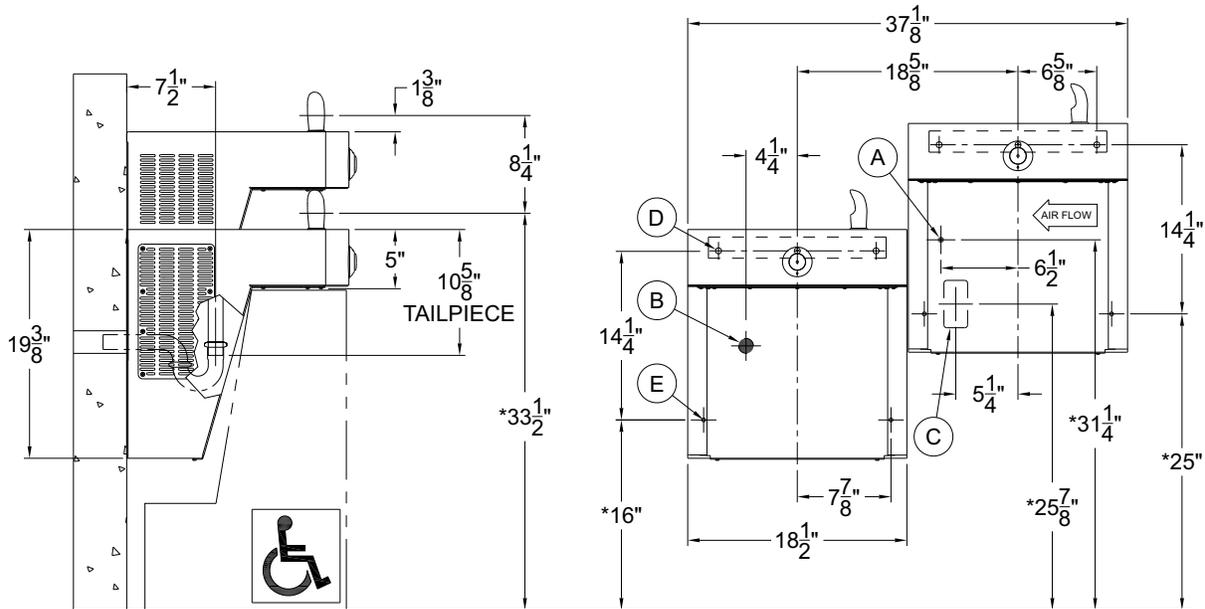

PRIOR TO INSTALLATION:

Important: some options may slightly alter installation. To ensure proper installation review the manual thoroughly and verify rough-ins before beginning work. File this manual with the owner or maintenance personnel upon completion of installation.

- Fixture mounting requirements: industry standard wall construction, adequate to support the fixture and installer provided wall anchors sufficient to secure the fixture.
- Receptacle(s) must be wired to a GFCI protected circuit. Fixture must be earth grounded per NEC (National Electric Code).
- Inspect fixture and all parts from damages and all parts are bolted on.

IMPORTANT: UNIT WITH CHILLER/COOLER MUST REMAIN IN THE RIGHT HAND BI-LEVEL POSITION to ensure required air-flow through the right hand side ventilation grill for either Standard Bi-level mounting and reverse Bi-level mounting. NO EXCEPTIONS.

IMPORTANT:

1. Waste P-Trap, Water Supply Service Angle Stop Valve and 2" x 4" Electrical Plug-In Receptacle to be supplied by others in accordance with local codes. A metallic p-trap (by others) must be used for the drain connection.
2. Provide 4" minimum clear space on fixture sides to allow for proper ventilation through cabinet louvers.
3. Water supply is 3/8" Outer Diameter copper tube. Waste is 1-1/4" Outer Diameter.
4. Completely flush supply lines of all foreign debris before connecting to fixture. Water cooler is designed to not cause problems with taste, odor, color, or sediment. Optional water filter is available should any of these problems arise from the water supply.
5. Do NOT solder tubes inserted into the coupler as damage to the o-ring may result.
6. All burrs must be removed from outside of cut tubes before inserting into coupler or other components.
7. Power supply must be identical in voltage, cycle and phase to that specified on the cooler data plate. Electrical outlet and furnished power cord with plug must be used to supply power to fixture. Do NOT wire compressor directly to the power supply.

8. This unit must be grounded per the requirements of applicable electrical codes.
9. Warranty is voided if installation is not made following current Acorn Engineering installation instructions and if components are assembled to the fixture that is not approved by Acorn Engineering.
10. Fixture is to operate within a water pressure range of 20 PSIG (138 kPa) to 105 PSIG (724 kPa). Warranty is void if the unit is allowed to operate outside the range of 20 PSIG (138 kPa) to 105 PSIG (724 kPa). **Consult with UPC and local codes for maximum allowable water pressures.**
11. Due to cold waste water, Acorn Engineering recommends that p-trap supplied by installer be insulated to prevent excessive condensation.
12. Per UPC 609.10- *All building water supply systems in which quick acting valves are installed shall be provided with devices to absorb the hammer caused by high pressure resulting from the quick closing of the valve. These pressure-absorbing devices shall be approved mechanical devices. Water pressure-absorbing devices will be installed as close as possible to the quick closing valve.*

INSTALLATION:

1. Mount hanger bracket to wall horizontally level as shown in Roughing-In and Dimensional Drawing. **Note:** Adjust height of bracket if bubbler outlet height is required to vary from that shown. Hanger Bracket **MUST** be securely anchored to wall with fasteners sufficient to support 3 times weight of cooler. If wall can not provide adequate support, order and install optional fixture support carrier.
2. Remove the bottom cover from the water cooler and set aside in a safe place. Save the screws in a secure location for re-use in later stages of installation.
3. Hang the water cooler on the hanger bracket, ensuring the bracket tabs engage AND seat in the slots in the back of the water cooler. Verify water cooler is level, left to right AND front to back from bottom of unit. **NOTE:** The bubbler stream may be adversely affected if unit is not square and level. Bottom of unit and louvers should be used as reference to verify unit is square and plumb.
4. Anchor water cooler to wall at other mounting points in base. Shim lower rear mounting points to level unit if necessary.
5. Thoroughly flush the 3/8" O.D. supply line and then connect water cooler to water supply angle stop valve (by others) with supplied 3/8" O.D. copper tube.
6. Make up 1-1/4" O.D. p-trap (by others) waste connection.

START UP:

1. **Do not connect electrical power to unit:** With Bottom Cover removed, turn on fixture water supply and check all connections for leaks.
2. Air within the Water Cooler system or the structure supply piping will cause an irregular Bubbler outlet stream until purged out by incoming water. Thoroughly flush and purge air from supply line by depressing the Pushbutton or activating infrared sensor, until steady water stream is achieved.
3. If water flow requires adjustment, insert a slotted narrow blade screwdriver through the hole centered on the pushbutton to the flow regulator. Turning clockwise will increase flow and turning counterclockwise will decrease flow.
4. Recheck all water and drain connections with water flowing through system.
5. With power still **NOT** connected, carefully manually rotate cooling fan to insure proper clearance and free fan action.
6. Plug Water Cooler into Electrical Outlet and make sure unit begins to function. **IMPORTANT:** After turning power on to initiate cooler and cool down, immediately purge (chiller) water by operating unit continuously for approx. 1 minute.

IMPORTANT! Thoroughly, inspect all unit connections for water leaks.

7. Assemble bottom cover to water cooler with screws furnished.

TROUBLE SHOOTING:

IMPORTANT: BEFORE MAKING ANY OF THE REPAIRS LISTED, MAKE SURE THE WATER COOLER IS DISCONNECTED FROM THE ELECTRICAL SUPPLY AND THE WATER SUPPLY VALVE IS SHUT OFF.

IMPORTANT : ASSUREZ-VOUS QUE LA FONTAINE D'EAU POTABLE RÉFRIGÉRÉE SOIT DÉBRANCHÉE DE LA PRISE DE COURANT MURALE ET QUE LE ROBINET D'ALIMENTATION D'EAU SOIT FERMÉ AVANT D'EFFECTUER LES RÉPARATIONS NÉCESSAIRES.

1. Adjustments:

- a. Cartridge – The water flow can be adjusted using a slotted narrow blade Screwdriver and turning clockwise to increase flow and counterclockwise to decrease flow.
- b. Bubbler Stream – Bubbler can be rotated slightly to direct the stream backwards or forwards. Adjust the stream to minimize splashing. Splashing may occur from Bubbler stream if the unit is not level. Shim lower mounting points, if necessary, to level Water Cooler.
- c. Cold Water Thermostat – **IMPORTANT:** Thermostat is Factory pre-set. Thermostat settings should never be field adjusted since damage to fixture may occur, voiding product Warranty.

2. Compressor Does Not Run

- a. Check the electrical receptacle for power and correct voltage. The incoming voltage must be within 10% of the rated voltage on the serial nameplate.
- b. The cold thermostat is accessible by removing the bottom access cover. If the cold thermostat capillary bulb loses its charge or becomes kinked it will fail in the open position causing a disruption of power to the compressor. Unplug the water cooler and using an ohm meter check for continuity across the two electrical terminals on the thermostat. Install a new thermostat if there is no continuity.
- c. Check for loose wires within the compressor box. The incoming power leads must be connected to the overload and relay.
- d. If all components check positive for continuity then test the wiring harness plug for continuity to see if there is a broken wire within the wiring harness insulation.

3. Compressor Runs – Water Is Warm

- a. The most common cause for a water cooler to run without producing cold water is a loss of refrigerant. The water cooler must be taken to a certified refrigerant technician for repairs.
- b. Make sure the condenser fan motor is operative. The fan blade must turn freely to help remove the heat of compression.
- c. An incorrect refrigerant charge, restriction or defective compressor (not pumping) will also cause the compressor to run without producing cold water. All these signs indicate a problem within the refrigeration system and the water cooler must be checked by an authorized service company.

4. Compressor Cycling On Overload Protector

- a. A dirty condenser or a blocked fan will cause a high head pressure and frequent cycling of the overload protector.
- b. Check the incoming voltage to make sure it is within 10% of the serial nameplate rating.
- c. A restriction or moisture in the system will also cause intermittent cycling. A certified refrigeration mechanic should be contacted in this situation.
- d. Change the overload or relay if defective.

5. Noisy Operation

- a. Check to make sure the fan blade is rotating freely.
- b. Make sure the water cooler is correctly mounted to the wall. Absence of the two lower mounting bolts may cause excess noise and vibration.
- c. Check the compressor mounting to make sure the pins and clips are not rattling. If the compressor appears to be noisy internally, it must be replaced.

6. Restricted Or No Water Flow

- a. Ensure water supply service stop valve is fully open.
- b. Verify minimum 20 psig supply line flow pressure.
- c. Check for twists or kinks in bubbler tubing.
- d. Check the water inlet strainer. Sediment from the main supply can get trapped in the screen along with installation materials such as pipe dope and flux. The screen should be cleaned and checked on a regular basis and replace if needed.

NOTE: STRAINER SCREEN MUST BE IN PLACE FOR WATER TO FLOW.

- e. The cartridge valve located in the water control assembly or bubbler can also become clogged with foreign material. The cartridge valve can only be replaced and not repaired.
- f. Check flow adjustment. See start up note #3.
- g. The water cooler may develop a freezing condition in which the water will become frozen inside the evaporator coil. This indicates a refrigeration problem or thermostat failure. Disconnect the electrical power and have the unit checked by a qualified technician.

7. Water Drip Or Will Not Shut Off:

- a. Remove Pushbutton. Adjust flow regulator to the highest setting using a flat head screwdriver and turning clockwise. Check if water drip continues, if it is no longer dripping turn screwdriver counter-clockwise until you have desired flow rate. Assure that retaining nut is tighten to valve assembly, 25 in-lb torque is required. If issue still continues after adjusting flow and tightening retainer nut, replacement of the flow regulator cartridge will be required in the center or two holes in convolution of the water diaphragm. Remove and clean.


CLEANING & MAINTENANCE GUIDE:

1. Motors have lifetime lubrication and do not require scheduled maintenance.
2. Excess dirt or poor ventilation will cause the compressor overload protector to turn the compressor off and it will cycle on and off with no cold water coming out of bubbler. Periodically clean with vacuum cleaner, air hose or brush the condenser fins and cabinet ventilation louvers. In environments where dirt and dust is more prevalent, clean more frequently.
3. Periodically remove access panels and clean out in-line strainer.
4. Do NOT use harsh chemicals, abrasive or petroleum based cleaners. Use of these will void the Murdock warranty.
5. Exterior panels can be cleaned using mild household detergents or warm, soapy water. Extra care must be used cleaning chrome plated items and mirror finished stainless steel. They can scratch easily and should only be cleaned using a clean,

CARTRIDGE REPLACEMENT/ STRAINER MAINTENANCE

Note: Use the -VR maintenance tool to perform the following:

1. Strainer plug ③ **must** be removed before cartridge replacement and strainer maintenance (no need to turn the water off at the angle stop). Some residual water will drain during plug removal.
2. Clean strainer ④ as needed using clean water.
3. Cartridge replacement - Rotate and remove -VR pushbutton escutcheon ⑥ to release pushbutton ⑦ and springs ⑨⑩ to access cartridge.
4. Remove cartridge retaining nut ⑪ . Remove and replace cartridge ②. When replacing cartridge be sure to align the inlet and outlet ports on the cartridge with the ports in the valve body.
5. Install item ⑪ using maintenance tool ⑤ (Be careful not to over tighten)
6. Install button assembly items ⑥⑦⑧⑨⑩ using maintenance tool ⑤. Insure springs are fully seated onto button.
7. Reinstall strainer ④ and plug ③ using maintenance tool ⑤.

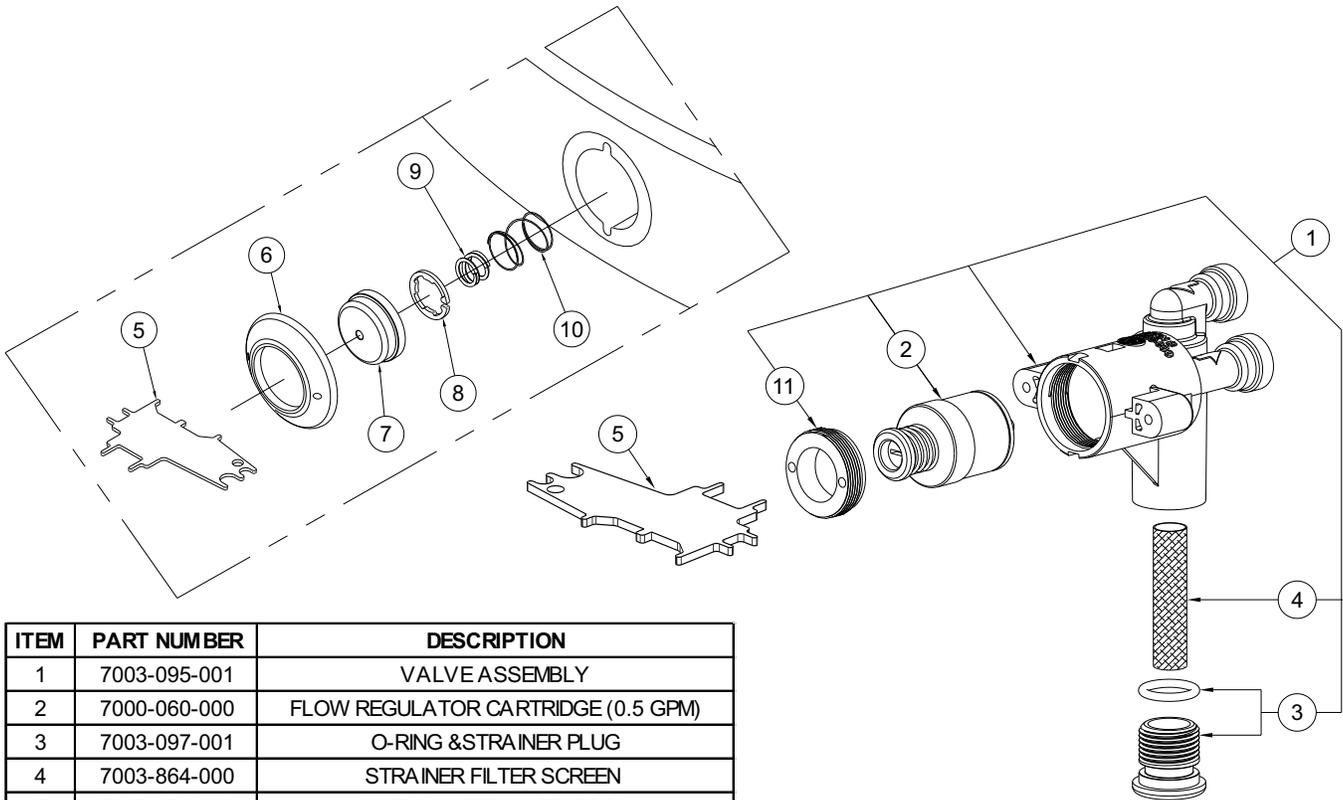


| ITEM | PART NUMBER | DESCRIPTION |
|------|--------------|-------------------------------------|
| 1 | 7003-095-001 | VALVE ASSEMBLY |
| 2 | 7000-060-000 | FLOW REGULATOR CARTRIDGE (0.5 GPM) |
| 3 | 7003-097-001 | O-RING & STRAINER PLUG |
| 4 | 7003-864-000 | STRAINER FILTER SCREEN |
| 5 | 7003-194-199 | (-VR) MAINTENANCE TOOL |
| 6 | 7003-197-199 | (-VR) PUSHBUTTON ESCUTCHEON, CHROME |
| 7 | 7003-196-199 | (-VR) PUSHBUTTON, CHROME |
| 8 | 7003-192-199 | (-VR) PUSHBUTTON SPRING SPACER |
| 9 | 7003-195-000 | (-VR) PUSHBUTTON OVERTRAVEL SPRING |
| 10 | 7003-193-000 | (-VR) PUSHBUTTON RETURN SPRING |
| 11 | 7000-052-000 | RETAINING NUT |

**NOTE: STRAINER FILTER SCREEN
MUST BE IN PLACE FOR
WATER TO FLOW.**

OPTIONAL WF3000 (3000 Gal) PFAS WATER FILTER

See the following page for models with optional Water Filter

| ITEM | PART NUMBER | DESCRIPTION |
|------|--------------|--|
| 1 | 7012-347-000 | RWF3000 Replacement PFAS Filter 3000 Gal |
| 2 | 1895-709-000 | Elbow , Push in, 1/4" O.D. x 1/4" Stem |
| 3 | 2169-000-000 | 1/4" O.D. LLDPE Tubing, Blue |
| 4 | 7012-055-000 | Foam Pipe Insulation |
| 5 | 7003-670-001 | Filter Mounting Assembly, FG units |

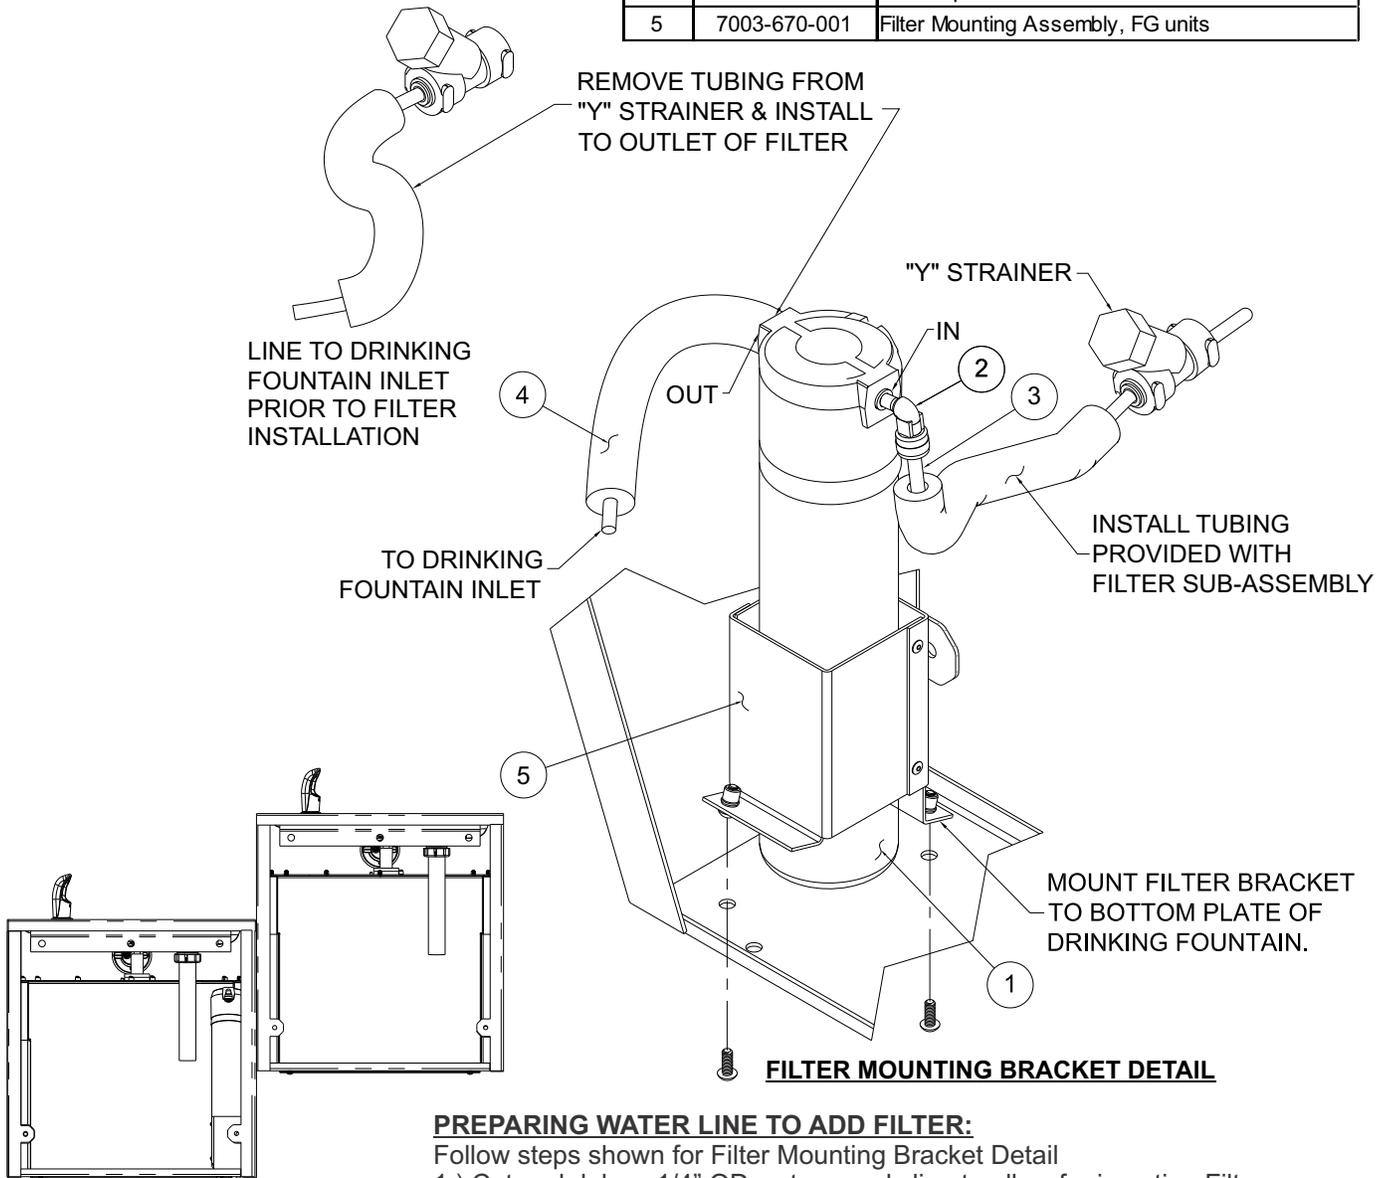

PREPARING WATER LINE TO ADD FILTER:

Follow steps shown for Filter Mounting Bracket Detail


- 1.) Cut and deburr 1/4" OD water supply line to allow for inserting Filter.
- 2.) Insert tubing into "Y" Strainer. Ensure end of tube is round and deburred.
- 3.) Assemble Filter with Cap assembly as shown in Detail into water supply line.

OPTIONAL WF3000 PFAS FILTER REPLACEMENT

FILTER CARTRIDGE REPLACEMENT:

Note: Replacement Cartridge Filter model RWF3000 is to replace existing WF3000 Filter. If replacing another existing Filter model order Model # WF3000 to replace entire Filter since old and new "Caps" and are not interchangeable.

1. Remove access panel, this allows access to the filter and the water inlet valve (provided by others). Turn valve knob 1/4 turn clockwise to close.
2. Slowly lift water filter from the water filter bracket assembly.
3. With the water filter removed from the bracket assembly, hold the cap firmly. Turn the replaceable cartridge filter counterclockwise to remove.
4. Remove and replace the cartridge turning clockwise to secure.
NOTE: WF3000 PFAS Filter closes with 1/4 Turn.
5. Re-insert the water filter into the water filter bracket assembly.
6. Turn water inlet 1/4 turn knob 1/4 turn counterclockwise to open and test for leaks and proper operation before closing access panel.

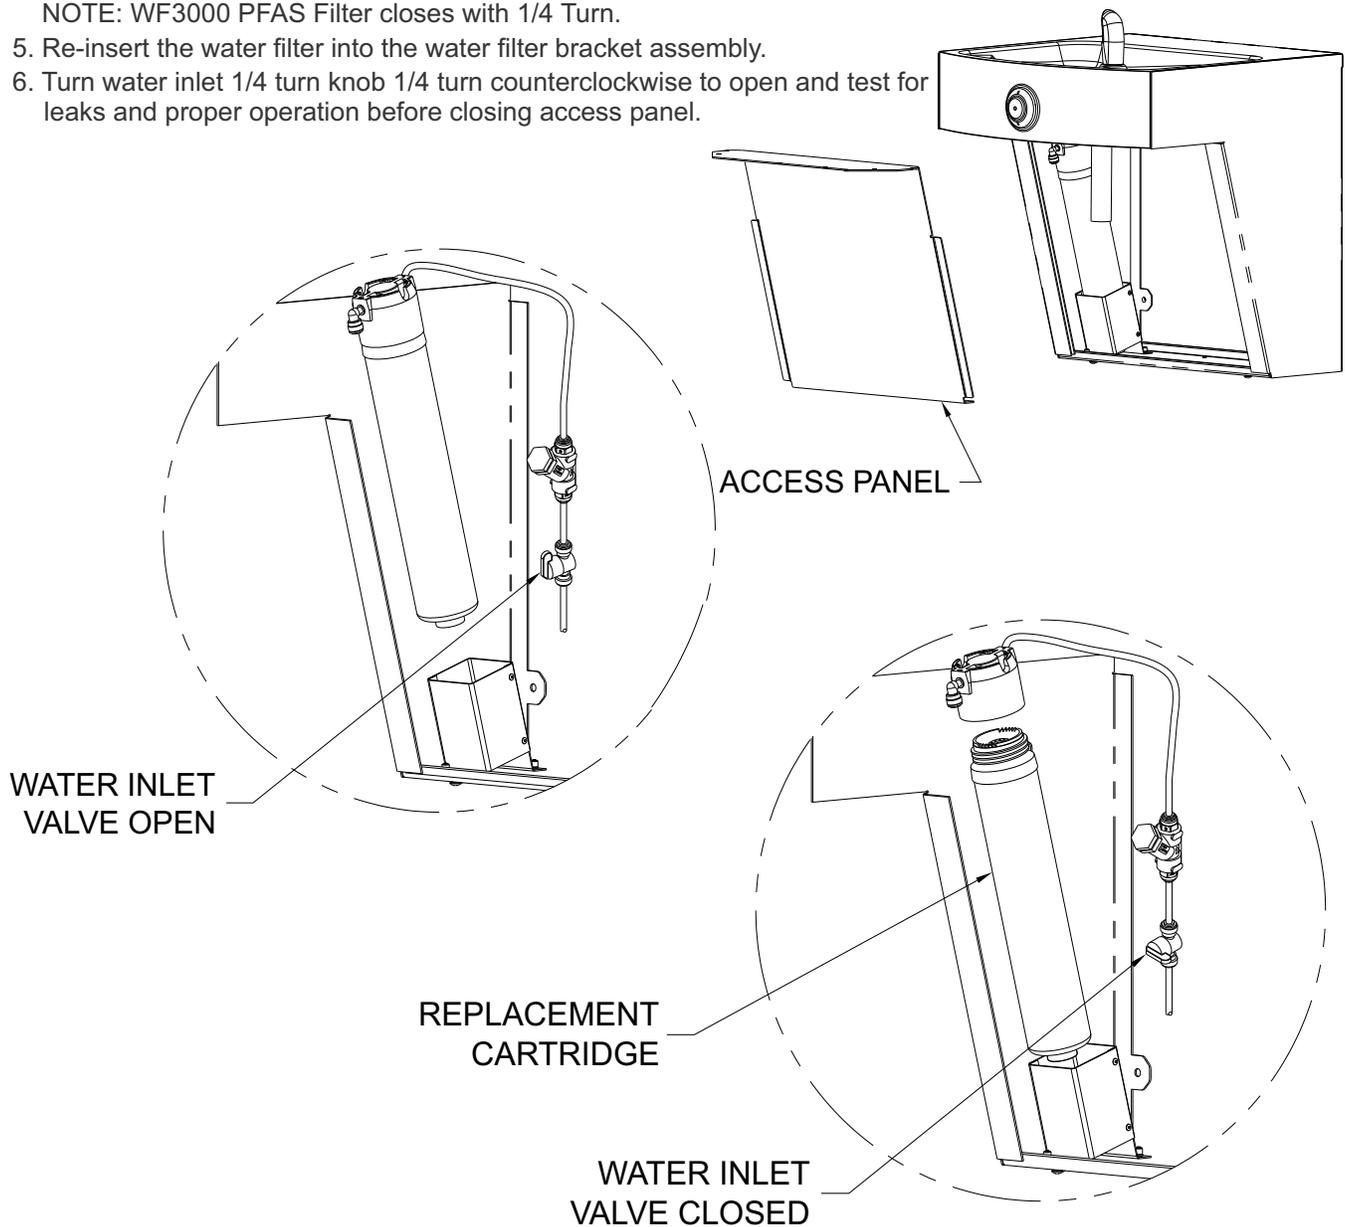


PUSH-IN FITTING INSTALLATION

NOTE: FITTINGS AND TUBE SHOULD BE KEPT CLEAN, BAGGED AND UNDAMAGED PRIOR TO INSTALLATION.


TO CUT TUBE:

Cut to fit length of 1/4" PE tubing and remove any burrs or sharp edges. Ensure that the outside diameter is free from score marks. Tube ends should be square.

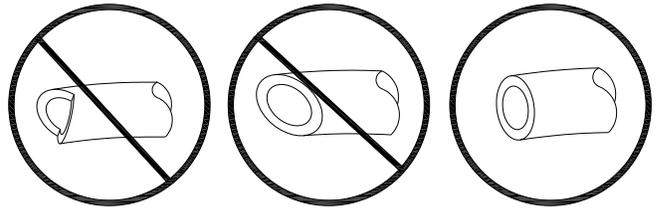


INSERTING THE TUBE:

1. Firmly and fully insert the tubing end into the push-in fitting up to the tube stop located approximately 1/2" deep.

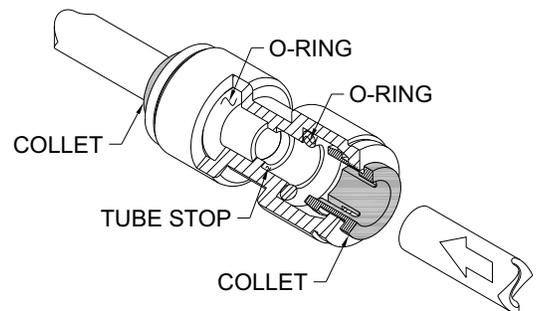


2. Pull on the fitted tubing to ensure it is secure. Tube should not come free from the fitting. Water test the connection assembly prior to leaving the site to ensure there are no leaks.

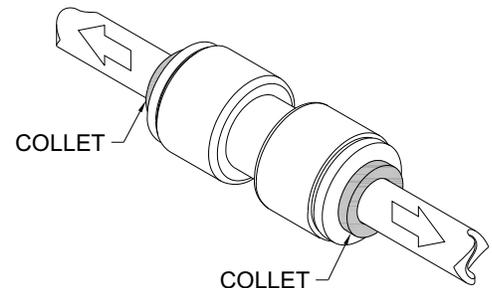

DISCONNECTING THE TUBE:

To disconnect the tube from the fitting ensure that the water line is depressurized. Push collet square towards the push-in fitting body and hold. While holding the collet in, pull on the PE tubing to remove from the push-in fitting.

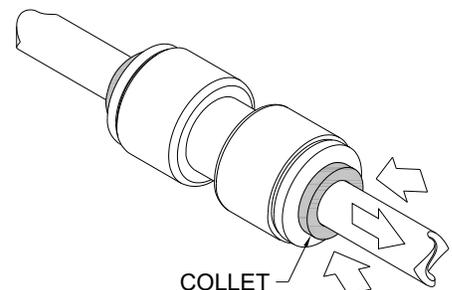

LEAK DETECTOR SHUT-OFF VALVE


The Murdock Leak Detection Shut-Off Valve feature is intended to limit the possibility of a potentially catastrophic leak, caused as a result of water leakage from a Fitting, Plastic (PE) Tubing, Copper Tubing or other water bearing component within the Fixture. The Shut-Off Valve is provided as standard for all Chiller devices. It is Factory installed to the Bottom Plate (IE lowest point) within the Chiller Housing where it will sense the presence of water leakage and then initiate shut-off of the primary Water Supply Line into Fixture. The Leak Detector Valve is provided with total of (2) Cotton Pills to allow one-time replacement - additional Cotton Pills may be purchased separately.

OPERATION:

1. Fixture water supply comes from the Wall and goes directly into the Leak Detection Shut-Off Valve, where it passes through and feeds (optional) Water Filter and then enters the Chiller.
2. The Leak Protection Valve Consists of; Water Supply Inlet and Outlet, Expanding Cotton Pill, Pill Chamber with Hinged Lid, and a Spring Loaded Piston.
3. Primary Water Supply to fixture passes into and out of Leak Protection Valve prior to feeding fixture components via the Water Supply Inlet and Outlet.
4. The Leak Protection Valve, positioned at the bottom of the Fixture cabinet, contains a Cotton "Pill" in a Chamber. The Pill Chamber has Water Detection Ports to detect when an excess of Water is within Cabinet.
5. When leaking water enters the Pill Chamber Detection Port, the Cotton Pill absorbs it and expands. When the Cotton Pill expands, it triggers the Pill Chamber Hinged Cap (Lever) to open, which in-turn moves the Spring Loaded Piston to close the valve, shutting off Water Supply Outlet thereby preventing leaking water to flow beyond the Leak Detection Shut-Off Valve.

REPLACEMENT: Once leak is detected, Shut off water supply to fixture, complete repair by a qualified professional. Operation may be restored by replacing the Cotton Pill, and closing the Hinged Pill Chamber Lid which will reset the Shut-Off Valve in the open position. Turn water to fixture back on and confirm leak repair was successful.

**Replacement Cotton Pills may be purchased in pack of (5) using P.N. 1895-158-001
Shut-Off Valve complete P.N. 1895-157-000 (includes (2) Cotton Pills)**

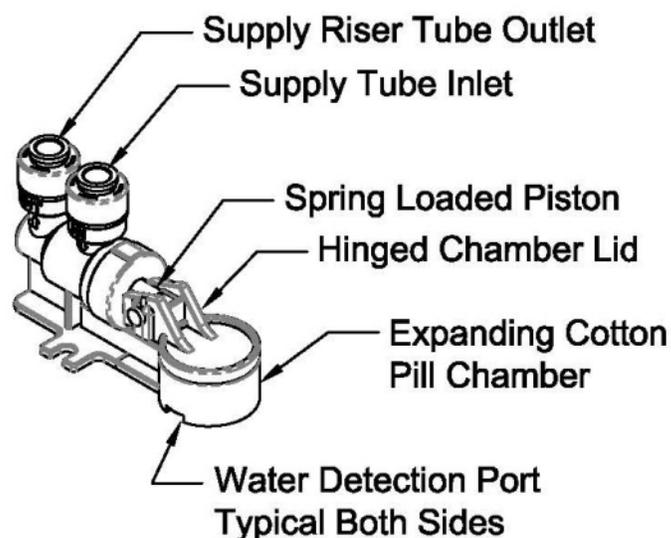

Leak Detection Shut-Off Valve Detail

OPTIONAL WATER FILTER INSTALLATION:

NOTE: For A171 & A172 Series all models are offered with Optional -WF3EZ Filter except -SOC and -FG Series.

-WF3EZ FILTER (Detail A)

FOR -WF3EZ FILTER REFER TO EZ-DOOR[®] FILTER INSTALL PROVIDED WITH THE FILTER UNIT - SHIPPED SEPARATELY

[WF3EZ INSTALL LINK](#)

-WF3000 PFAS FILTER CARTRIDGE INSTALLATION:

FILTER REQUIRES REPLACEMENT AFTER 3000 GALLONS OF USAGE OR (1) YEAR, WHICHEVER OCCURS FIRST.


FOR ADDITIONAL DETAILS REFER TO [WF3000 INSTALL LINK](#)

IMPORTANT: FLUSH 6 GALLONS OF WATER THROUGH THE FILTER BEFORE INITIAL USE!

- Bubbler run time for approximately 12 minutes
- Bottle Filler run time for approximately 6 minutes




Detail A

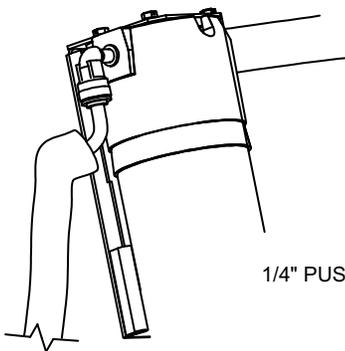

1/4" PUSH-IN OUTLET

REPLACEMENT CARTRIDGE
ORDER ITEM # RWF3000

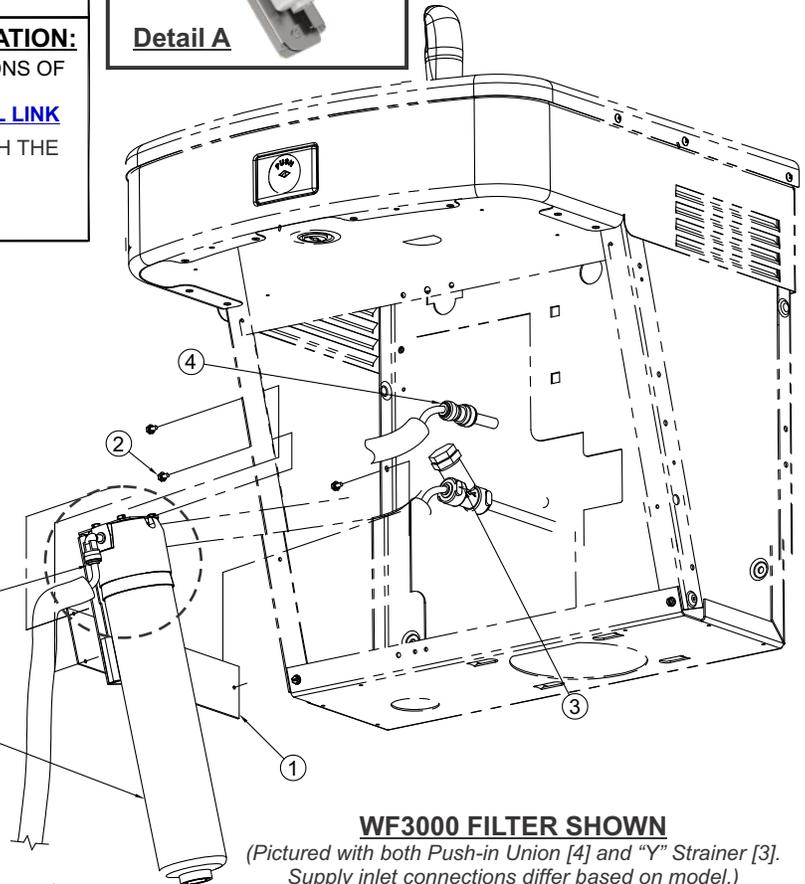

WF3000 FILTER SHOWN

(Pictured with both Push-in Union [4] and "Y" Strainer [3]. Supply inlet connections differ based on model.)

-WF3000 INSTRUCTIONS:

A- Prepare unit for filter installation:

Remove the bottom housing and turn off unit water supply. If unit is a refrigerated model, disconnect power supply.

B- Assemble filter to fixture mounting bracket: Place filter/bracket assembly [1] on inside of Unit Frame and align holes in the Bracket with the holes of the Unit Frame.

C- Use the screws [2] provided to pass thru the Frame clearance holes and screw into the bracket holes.

D- Chiller unit: Install Filter prior to Evaporator.

Non-Chilled unit: Install Filter prior to Pushbutton.

(Note: "Y" Strainer shown is provided on select models only.)

Follow PE tube from "Y" strainer [3] or Push-in Union [4] to where it connects to the Evaporator (for chiller unit) or to Pushbutton (for non-chilled unit).

Disconnect tube from Evaporator or Pushbutton, connect to Filter inlet Push-in Connection.

Connect new PE tube provided with Filter to Evaporator push-in inlet, where tube was removed. Upon completion filter will be between "Y" Strainer and Evaporator (chiller) or Pushbutton (no chiller).

-WF3000 INSTRUCTIONS continued:

F- Turn on water.

CHECK ALL CONNECTIONS FOR LEAKS!

G- IMPORTANT: follow flushing instructions for filter type before allowing fixture use.

H- For refrigerated unit, turn on power supply and check unit for proper operation.

I- Re-install bottom housing.

NOTES:


- 1- TO DISCONNECT THE TUBE FROM THE PUSH-IN FITTING TUBE HOLD DOWN GRIPPER AND PULL TUBE OUT SLOWLY.
- 2- TO CONNECT PUSH-IN FITTINGS, PUSH TUBE IN ALL THE WAY TO MAKE A GOOD CONNECTION. CARTRIDGE REPLACEMENT.

COOLER PARTS BREAKDOWN

Murdock Manufacturing
Part#: 7003-194-199
Ph: 800-743-8259



Universal Maintenance Tool
-Button Removal
-Cartridge Retaining Nut
-Strainer Plug
-Removal of P.E. Tubing from Push-in Fittings

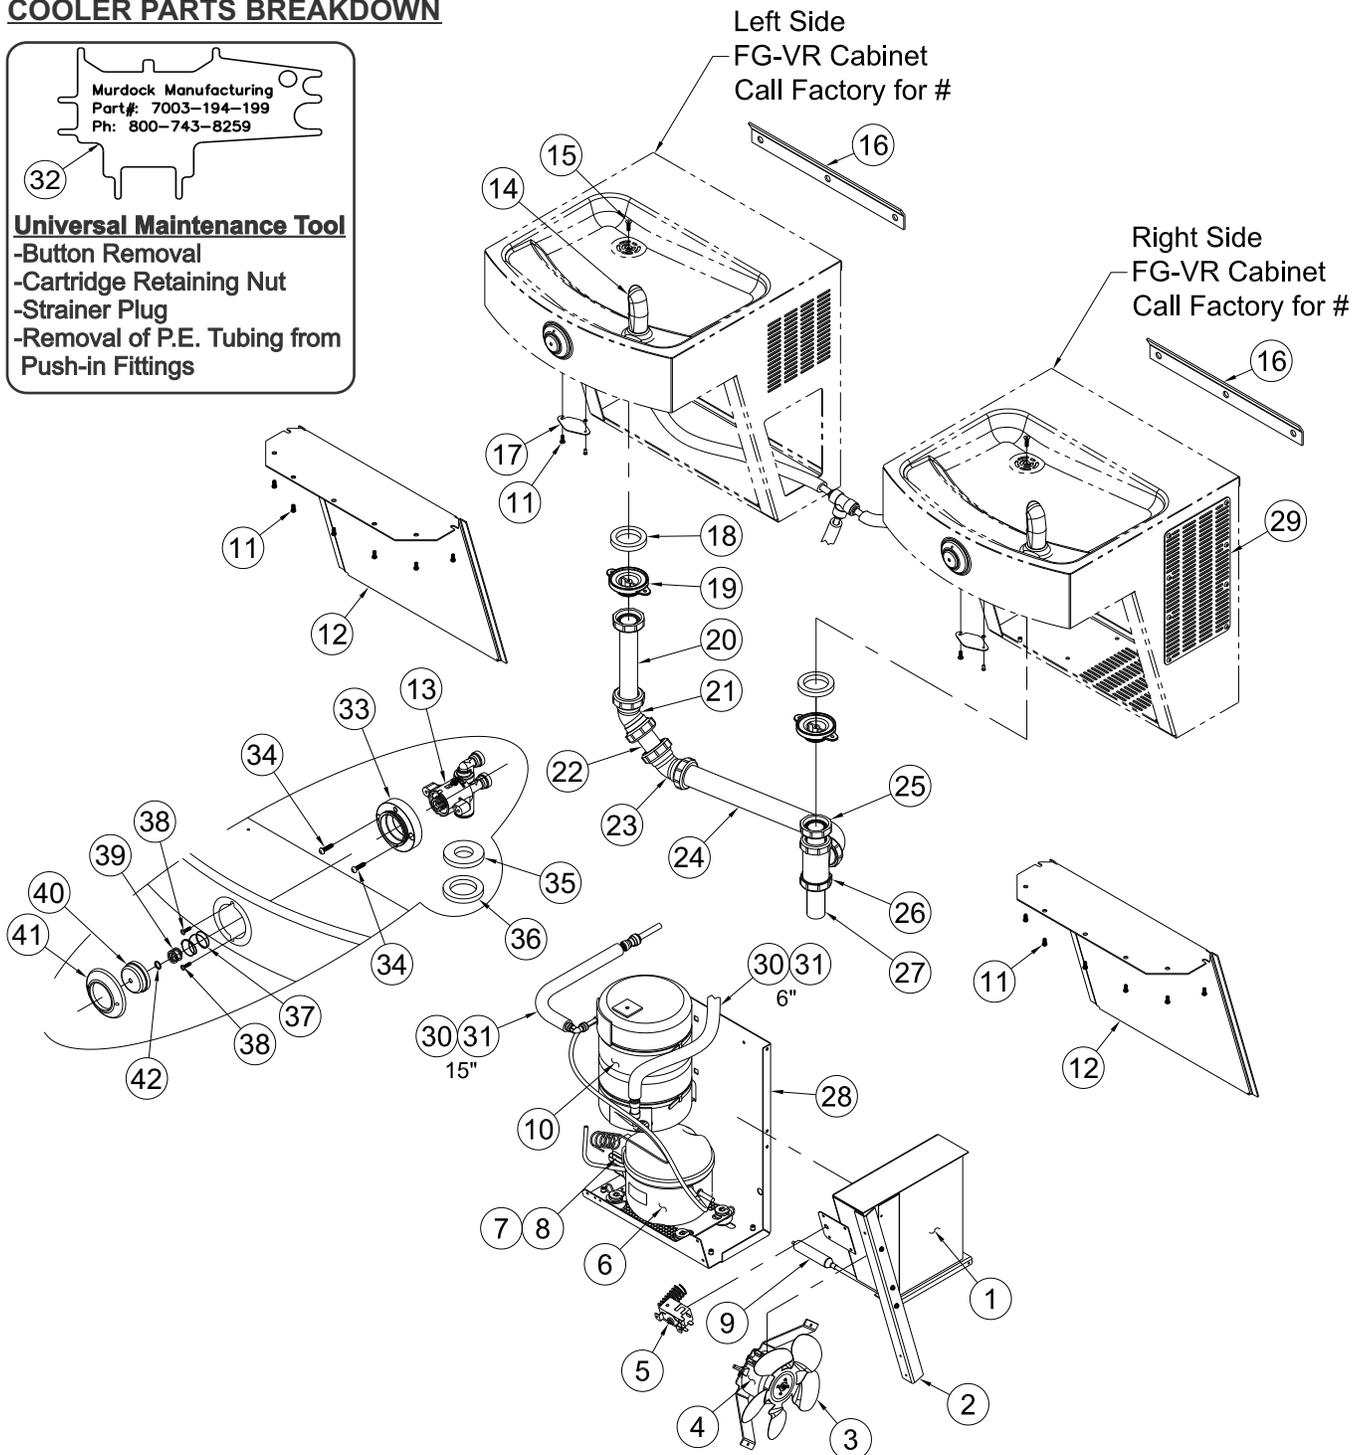

Standard A171.8 series refrigerated ADA cooler shown. All 1/4" O.D. Plastic tubing (30) must be insulated with (31) foam insulation.

NOTE: See next page for table of part numbers corresponding to drawing above.

COOLER PARTS BREAKDOWN TABLE

NOTE: See previous page for fixture drawing corresponding to table of parts below.

| ITEM # | PART NUMBER | DESCRIPTION |
|--------|--------------|--|
| 1 | 7003-201-000 | CONDENSER |
| 2 | 7003-634-199 | FG-VR SUPPORT STRUT |
| 3 | 7003-355-000 | FAN BLADE |
| 4 | 7003-302-001 | FAN MOTOR |
| | 7012-062-000 | FAN MOTOR - 220V |
| 5 | 7003-250-000 | COLD CONTROL |
| 6 | 7012-850-000 | COMPRESSOR |
| | 7012-030-001 | COMPRESSOR - 220V |
| 7 | 7012-802-000 | START RELAY |
| | 7012-031-000 | START RELAY - 220 |
| 8 | 7012-803-000 | START CAPACITOR |
| | 7012-032-000 | START CAPACITOR - 220 |
| 9 | 7012-050-000 | FILTER / DRYER |
| 10 | 7003-115-001 | EVAPORATOR ASSEMBLY |
| 11 | 0112-002-000 | CENTER REJECT ALLEN BUTTON HEAD SCREW |
| 12 | 7003-681-199 | FG-VR STAINLESS STEEL KNEE PANEL |
| 13 | 7003-095-001 | VALVE ASSEMBLY |
| 14 | 7000-012-001 | STAINLESS STEEL BUBBLER ASSEMBLY |
| 15 | 0152-006-000 | CENTER REJECT ALLEN FLAT HEAD SCREW |
| 16 | 7012-803-000 | FG-VR HANGER BRACKET |
| 17 | 7003-681-299 | ACCESS PLATE, -VR AUTO-STOP |
| 18 | 7000-006-000 | FLAT DRAIN ADAPTER GASKET |
| 19 | 7000-005-199 | DRAIN ADAPTER |
| 20 | 7000-019-001 | WASTE TAILPIECE ASSEMBLY |
| 21 | 7003-073-000 | 1-1/4" x 1-1/2" COMPRESSION 45° ELBOW |
| 22 | 1758-043-299 | 1-1/2" O.D. x 3" LONG DRAIN TUBE |
| 23 | 7003-072-000 | 1-1/2" x 1-1/2" COMPRESSION 45° ELBOW |
| 24 | 1758-043-199 | 1-1/2" O.D. x 15" LONG WASTE ARM |
| 25 | 7000-032-001 | 1-1/4" x 1-3/4" LONG DRAIN TUBE ASSEMBLY |
| 26 | 7003-070-000 | 1-1/2" COMPRESSION TEE |
| 27 | 7000-032-299 | 1-1/4" O.D. BRASS WASTE TAILPIECE |
| 28 | 7003-300-005 | BACK PANEL ASSEMBLY |
| 29 | 7003-604-002 | ACCESS PANEL |
| 30 | 2169-000-000 | 1/4" O.D. TUBING |
| 31 | 7012-055-000 | TUBE INSULATION |
| 32 | 7003-194-199 | (-VR) MAINTENANCE TOOL |
| 33 | 7003-198-199 | (-VR) PUSHBUTTON MOUNTING SLEEVE |
| 34 | 0124-055-000 | #8x3/4 PHILLIPS ROUND HEAD SS SM SCREW |
| 35 | 7003-199-000 | AUTO-STOP CONDENSATION GASKET, UPPER |
| 36 | 7003-200-000 | AUTO-STOP CONDENSATION GASKET, LOWER |
| 37 | 7003-193-000 | (-VR) PUSHBUTTON RETURN SPRING |
| 38 | 0161-062-000 | #6-32 x 1/2" S/S PHIL FLAT HD SCREW |
| 39 | 7003-195-000 | (-VR) PUSHBUTTON OVERTRAVEL SPRING |
| 40 | 7003-196-199 | (-VR) PUSHBUTTON, CHROME |
| 41 | 7003-197-199 | (-VR) PUSHBUTTON ESCUTCHEON, CHROME |
| 42 | 7003-192-199 | (-VR) PUSHBUTTON SPRING SPACER |

Repairs must be made with Acorn Engineering parts only. Please order through your local representative or distributor. The phone number to locate your local representative is 1.800.591.9360.